



User Manual

Cyclone

Revision 9.6

January, 2024

© Tempest Lighting, Inc.

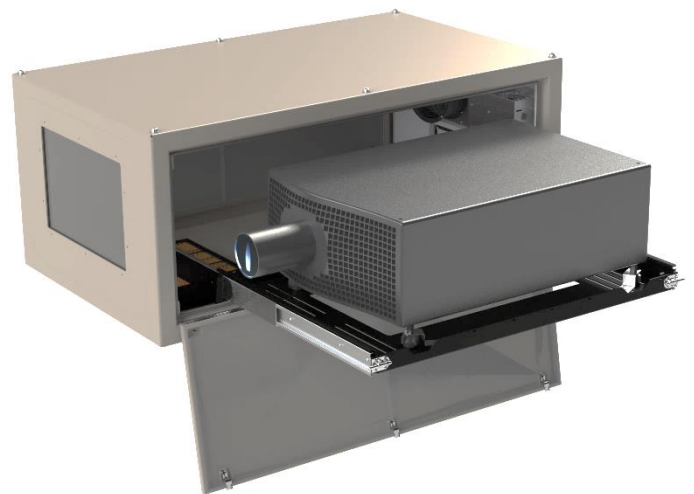


Table of Contents

Table of Contents.....	2
Approvals – US/Canada	5
Approvals – Europe	6
Approvals – Japan	7
Approvals – China	8
Introduction	9
IMPORTANT: Safety Advisories	9
Installation.....	10
Dimensions, Weights & Rigging Points.....	10
Access Clearance	11
Snow Clearance	11
Mounting Hardware Options	12
Mounting Bolts	12
Mounting Options – Unistrut Kit	12
Mounting Options – Stacking Kit	13
Mounting Options – Swivel Stacking Kit.....	13
Cyclovator 2 Tilt Kit.....	14
SAFETY WARNING.....	14
Cyclovator – Unistrut Mounting Rails.....	14
Cyclovator – Inlet Cowl	14
Fixing the Cyclovator in Place	15
Mounting the Enclosure.....	16
Setting the Show Position Stop.....	17
Cyclone Angle Mount Kit.....	18
Angle Mount Kit Installation	18
Wiring the Enclosure	20
Power Wiring	20
SAFETY NOTICE	20
Electrical Standards	20
AC Supply Voltage.....	20
Wiring Access.....	21
One or Two Power Circuits?	22
Single Feed Power Termination.....	23
Split Feed Power Termination	23
North America 208V, Japan 200V Single Feed.....	24
North America 208V, Japan 200V Split Feed	24

International, 230V Single Feed.....	25
International, 230V Split Feed	25
Windshield Wiper Wiring	26
Wiper Inline Fuse.....	26
Remote Monitoring Connections	27
DEC4 Ethernet Adapters – 51.D4.15, 51.D4.23	28
51.D4.15 Default Configuration.....	28
51.D4.15 Additional Support	28
RS485 (DMX/RDM) Cable Terminations.....	29
Line Termination Switch Settings	30
System Manager Installation	31
Enclosure Management	33
Enclosure Monitoring.....	33
DMX Control	35
Firmware Uploads	35
Remote Configuration	35
Tempest Equipment Management Protocol	36
Positive Pressure Fan Control Option.....	37
Cold Weather Operation	38
Digital Enclosure Control	39
Schematic.....	39
DEC4 Main Functions	40
Firmware Revision	40
Factory Settings – Data Modes	40
Hardware Indicators & Fuses	41
Operating Modes.....	42
RDM Only Monitor (Factory Default)	42
RDM+DMX Control.....	42
RDM+DMX Service	42
DEC4 Control Parameters	43
Control Interface	44
User Interface LCD Display.....	45
Control Interface Operation	45
Control Menu.....	46
Set DMX Options	46
Set Temp Units	47
Set Temp Ranges	47
Set Max Humidity	47

Set Lamp Options	47
Set Fan Function	48
Status Display.....	49
Safe Mode	51
Safe Mode and Sensors	51
Safe Mode – What to do:	52
DEC4 Firmware Updates	53
Direct Firmware Update (System Control Board only)	53
Indirect Firmware Updates	57
Requirements	57
Installation Procedure	57
Mounting the Projector	62
Projector Mounting - Landscape	62
Projector Mounting – Landscape, Feet-up	63
Projector Mounting – Portrait/8 rigging points	63
Projector Mounting – Portrait/4 rigging points	65
Projector-specific Mounting	66
Christie D4K-40 RGB - Landscape	66
Christie D4K-40 RGB – Portrait	67
Panasonic PT-RZ34K, RQ35K, RQ50K.....	68
DPI Insight 4K	69
UST Projector Mounts	69
Important: Check Lamp-on Current	70
Connect Projector and Aux Equipment	70
Projector Connector Types	71
Routine Maintenance	72
Clean Port Glass.....	72
Check Filter	72
Check Temperature/Humidity Sensor	73
For After Sales Support	73
Troubleshooting.....	74
Warranty	75
Appendix – TEMP Protocol.....	76
Physical Layer	76
Developer’s Guide	76

Approvals – US/Canada



Tempest Lighting, Inc. declares that the Projector Enclosure Series listed below are authorized to use the marking specified by UL LLC:

Blizzard, Part Number 52.xxx

Whisper, Part Number 53.xxx

Typhoon, Part Number 54.xxx

Cyclone, Part No. 55.xxx


Tacit, Part No. 56.xxx

Zen, Part No. 57.xxx

Tempest projector Enclosures are UL Listed, File Number E498709.

September, 2023
Tempest Lighting, Inc.

Approvals – Europe

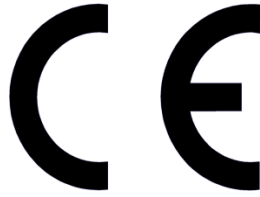

CERTIFICATE AND DECLARATION OF CONFORMITY
FOR CE MARKING

Tempest Lighting, Inc.

11845 Wicks Street, Sun Valley, CA 91352, USA

t: +1 818 787 8984 f: +1 818 252 7101 e: info@tempest.biz

www.tempest.biz

Tempest Lighting, Inc. declares that their

Cyclone Projector Enclosure Series 55.xxx.xx

complies with the Essential Requirements of the following EU Directives:

Low Voltage Directive 2014/35/EU

Test Report 60065-6500-01-14

Electromagnetic Compatibility Directive 2014/30/EU

Test Report 61000-6500-03-14

and further conforms with the following EU Harmonized Standards:

EN 60065 : 2014/AC:2016

Test Report 60065-6500-01-16

EN 60529:1991/AC:2016-12

Test Report 60529-6500-02-16

EN 61000-6-3:2007+A1:2011

Test Report 61000-6500-03-14

EN61000-6-1:2007

Test Report 61000-6500-03-14

EN55015:2019/A11:2020

Test Report 61000-6500-03-14


Dated: 21st September 2020

Position of signatory: President

Name of Signatory: Tim Burnham

Signed below:

on behalf of Tempest Lighting, Inc.

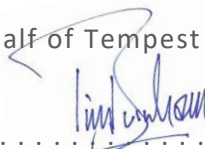

Approvals – Japan

JQA JQA 受付番号: 170064239
JQA ファイル番号: K12121001
(外国の製造事業者用)

適合同等証明書

Statement of Conformity Assessment

電気用品安全法第8条第1項に規定する技術基準及び同法第9条第2項の経済産業省令で定める基準(法第9条第1項第2号に係る検査に係るものに限る)に適合していることを証明します
I hereby certify that the product mentioned below complies with the technical requirements stipulated in Paragraph 1 of Article 8 of Electrical Appliances and Materials Safety Act (here under referred to as the Act) and the requirements defined by the ordinance of the Ministry of Economy, Trade and Industry based on Paragraph 2 of Article 9 of the Act (limited to Item 1 of Paragraph 1 of Article 9 for inspection of the Act).

1. 証明書番号: JQE13946
Statement Number

2. 交付年月日: 2023年10月31日
Effective Date : October 31, 2023

3. 有効年月日: 2023年10月31日 ~ 2030年10月30日
Date of Validity : October 31, 2023 ~ October 30, 2030

4. 申込者名
Applicant
住所: 11845 Wicks Street Sun Valley, CA 91352 USA
Address
氏名又は名称: Tempest Lighting, Inc.
Name

5. 特定電気用品名: その他の凍結又は凝結防止用電熱器具
Name of Product : Electric Heaters for Freeze and Condensation Prevention

6. 型式の区分: 別紙のとおり
Type Classification See attached "Type Classification"

7. 製造工場名
Manufacturer
住所: 11845 Wicks Street Sun Valley, CA 91352 USA
Address
氏名又は名称: Tempest Lighting, Inc.
Name

8. 適用試験規格: 電気用品の技術上の基準を定める省令の解釈 別表第8 1, 2(32) 及び 別表第10 第8章
Applied Standards for Testing: "Interpretation of the METI Ordinance Specifying Technical Standards for Electrical Appliances and Materials", Appendix 8 Clauses 1, 2(32) and Appendix 10, Chapter 8

Page 1 of 4
9922-05J

JQA JQA 受付番号: 170064239
JQA ファイル番号: K12121001
(外国の製造事業者用)

9. 適合性検査の方法:
Testing Method for Conformity Assessment

(1) 試験用の特定電気用品については、電気用品の技術上の基準を定める省令の解釈に定める方法
With respect to testing for Category A products, the testing method is based on the technical requirements of the Electrical Appliances and Materials stipulated in the interpretation of METI Ordinance.

(2) 当該特定電気用品に係る届出事業者又は事業場における検査設備については、電気用品安全法施行規則別表第四の検査設備の欄に掲げる検査設備ごとにそれぞれ同表の技術上の基準の欄に掲げる方法
With respect to inspection facilities required for Category A products at the factory, Testing Method described in the column of the technical requirements for each inspection facilities in the column of inspection facilities is shown in the Appendix 4 of Enforcement Regulations of the Act.

10. 注意事項
Notes

(1) この適合同等証明書は、提出された試験用の電気用品に関して評価を行った上で交付したものであり、同一の型式の区分にある電気用品について電気用品安全法第8条第1項に規定する技術基準適合確認の義務を履行したことを示すものではありません。
The Statement of Conformity Assessment has been issued following assessment of the electrical product(s) submitted for testing. As for electrical products in the same type classification, this certificate does not indicate fulfillment of the obligation for verification of compliance to technical standards as specified in Paragraph 1 of Article 8 of Electrical Appliances and Materials Safety Act.

(2) この適合同等証明書は、別紙に記載されている型式の区分の範囲内及び区分の組み合わせについてのみ有効です。
This Statement of Conformity Assessment is only valid within the type classification scope and combinations of classifications specified in the attached document.

一般財団法人 日本品質保証機構
Japan Quality Assurance Organization
理事長 石井 裕晶
President Hiroaki Ishii
東京都千代田区神田神田町一丁目25番地
1-25, Kanda-manchu, Chiyoda-ku, Tokyo, Japan

Page 2 of 4
9922-05J

JQA JQA 受付番号: 170064239
JQA ファイル番号: K12121001
(外国の製造事業者用)

製品の型式の区分(その他の凍結又は凝結防止用電熱器具)
Type classification of product (Electric Heaters for Freeze and Condensation Prevention)

Statement No. JQE13946

要素 (Factor)	区分 (Classification)
相 Phase	(1) 単相のもの (1) Single phase
定格電圧 Rated voltage	(1) 125V以下のもの (2) 125Vを超えるもの (1) 125 V or less (2) Exceeding 125 V
定格消費電力 Rated input	(1) 600Wを超え700W以下のもの (2) 600Wを超えるもの (1) Exceeding 600W, and less than or equal to 700W (2) Exceeding 700W
定格周波数(電動機又は変圧器を有するものの場合に限る。) Rated frequency (limited to those with motors or transformers)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
本体スイッチ(主回路を開閉するものの場合に限る。自動スイッチ及び自動温度調節器を除く。) Body switch (limited to those used for turning the main circuit on and off, and excluding temperature limiters and thermostats)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
本体スイッチの動作方式 Switching operation of body switch	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
本体スイッチの接点の材料 Body switch contact material	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動スイッチ(温度過昇防止装置として用いられるものを除く。) Automatic switch (excluding those used for thermal cutoff)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動スイッチの動作温度の設定 Automatic switch operating temperature setting	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動スイッチの動作温度(動作温度が可変のものにあっては、その最高温度をいう。) Automatic switch operating temperature (in the case of switches with adjustable operating temperature, the maximum temperature)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動温度調節器(温度過昇防止装置として用いられるものを除き、電熱装置から発生する熱により動作するものに限る。) Automatic temperature limiter (excluding those used for thermal cutoff, and limited to those operating from the heat generated from the electrical heating appliance)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動温度調節器の温度検知方式 Automatic temperature detection method	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動温度調節器の温度調節方式 Automatic temperature regulation method	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
自動温度調節器の動作温度(接点を機械的に開閉するものの場合に限る。かつ、動作温度が可変のものにあっては、その最高温度をいう。) Automatic temperature regulation operating temperature (limited to those using mechanical opening/closing of contacts, in the case of those with adjustable operating temperature, the maximum temperature)	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz

Page 3 of 4
9922-05J

JQA JQA 受付番号: 170064239
JQA ファイル番号: K12121001
(外国の製造事業者用)

製品の型式の区分(その他の凍結又は凝結防止用電熱器具)
Type classification of product (Electric Heaters for Freeze and Condensation Prevention)

Statement No. JQE13946

要素 (Factor)	区分 (Classification)
発熱部の形態 Type of heat generating component	(1) シーズ式(鉢込み式を含む。)のもの (2) シーズ式(鉢込み式を含む。)のもの (1) Sheath type (including cast type)
電源電線と本体との接続の方式 Power supply connections	(1) 重付けのもの (2) ないもの (1) No Coupling device (2) Without thermal cutoff
温度過昇防止装置 Thermal cutoff	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
温度過昇防止装置の種類 Type of thermal cutoff	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
温度過昇防止装置の動作温度 Operating temperature of thermal cutoff	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
使用場所 Place for use	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz
二重絶縁 Double insulation	(1) 50Hzのもの (2) 60Hzのもの (1) 50Hz (2) 60Hz

◎ 区分の組合せはありません。
There is no combination of classification.

備考: 当該型式の区分に含まれる製品の代表として適合性検査を実施した製品のモデル名は 55.xxx.L です。
Note: The model name which conformity assessment was carried out is 55.xxx.L.
この適合同等証明書は、試験用に提出された製品の試験結果に基づき交付されたものです。
This certificate was issued based on the result of conformity assessment to offered test sample only.

Page 4 of 4
9922-05J

Approvals – China



强制性认证目录外产品确认书
Confirmation Letter for Products
Outside the Scope of China Compulsory Certificate

Ref. No: CL-TEMPEST-160818-1

申请人: Applicant: Tempest Lighting Inc.	地址: Address: 11845 Wicks St., Los Angeles, CA 91352 United States
生产厂名称: Factory: Tempest Lighting, Inc.	地址: Address: 11845 Wicks St., Los Angeles, CA 91352, USA
产品名称: Product Name: 投影仪外壳, 灯具外壳 Projector Enclosures Moving Light Enclosures Lighting Enclosures	型号: Model: 18xx.IN, 19xx.IN, 2xxx.IN, 66xx.IN, 52.xxx.IN, 53.xxx.IN, 54.xxx.IN, 55.xxx.IN, 56.xxx.IN
商标: Trademark: Tornado, Twister, Thunder, Blizzard, Whispr, Typhoon, Cyclone, Tacit	
产品标准: Standard: /	HS code: 9405.99.0000
产品描述(包括使用场所) Product Description (utilization of product) : Enclosures for high-powered luminaires and video projectors for outdoor use and indoor noise attenuation. For professional use only. 产品为用于户外和室内噪声衰减大功率灯具和视频投影仪的外壳。仅供专业使用。	
确认意见 Conclusion: According to the product description, the models above are out of CCC scope. 基于产品描述, 如上型号的产品在中国强制性产品目录之外。 本确认书的有效有效期至: August 18th, 2017 Validity Period	



Introduction

Thank you for purchasing a Tempest enclosure! We have worked hard to provide you with the very best product available for its purpose, and we shall continue to do everything possible to ensure that it works well for you for many years to come.

Please read this manual before starting work!

In the event of difficulty, please contact your Tempest reseller or Tempest direct:

info@tempest.biz

+1 818 787 8984


We will do everything we can to help you get the very best results from your Tempest enclosure.

IMPORTANT: Safety Advisories

- All installation and rigging work done must where applicable be designed and built in accordance with norms and standards of the local authority having jurisdiction of the installation site. It is the responsibility of the installer to obtain such approvals as may be required to achieve full compliance.
- All electrical work must be carried out by a suitably licensed electrical contractor in full compliance with local electrical standards.
- Lifting: some enclosures and the equipment inside them may be heavy. Use properly rated lifting equipment where appropriate and never attempt to carry out work with fewer than the number of workers needed to lift safely.
- It is the responsibility of the installer to ensure that all local building, safety and electrical codes are strictly adhered to in the installation of this enclosure. Tempest Lighting, Inc., its employees and agents are in no way responsible for damage arising from failure to follow either the instructions in this manual or building, safety and electrical codes prevailing at the installation location.
- Do not attempt to install or operate the enclosure before fully reading and understanding this manual
- Never allow anyone who has not read this manual to open the enclosure or perform maintenance on the projector within.
- Never leave the enclosure unattended when open.
- Always make sure all bolts and latches are tight and safety locks are in place after performing any form of maintenance on the unit.
- Do not open any electrical boxes until power has been shut off to all supply lines to the enclosure (including the one powering the projector).
- Do not open the enclosure in wet weather.

Installation

Dimensions, Weights & Rigging Points

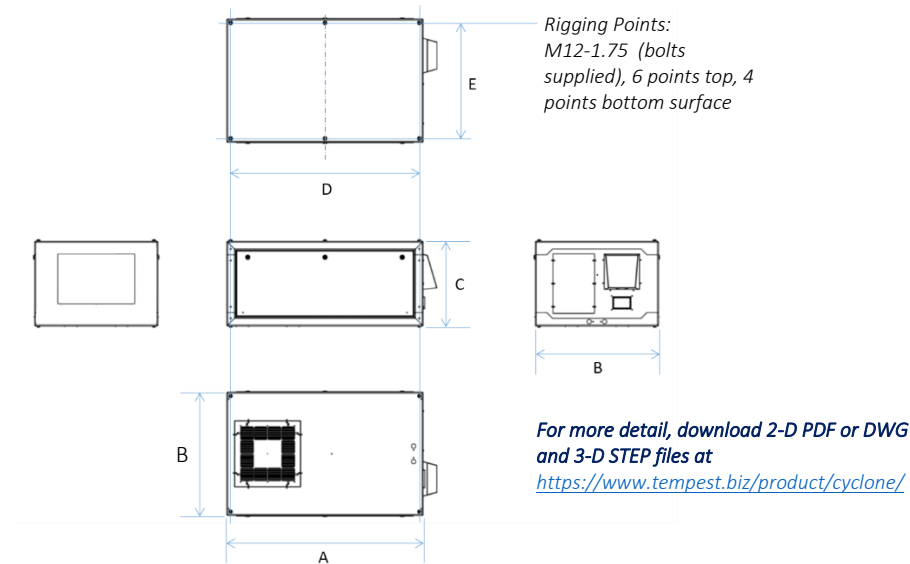


We are adding models all the time – check our web site for submittal drawings or consult factory for models not shown here

Cyclone	A in	A mm	B in	B mm	C in	Cmm	D in	D mm	E in	E mm	W lb	W kg
55.210L	51	1,295	32	813	22	559	49	1,245	30	762	177	80
55.210P	51	1,295	25	635	34	864	49	1,245	23	584	213	97
55.240L	53	1,346	34	864	26	660	51	1,295	32	813	230	105
55.240P	53	1,346	25	635	34	864	51	1,295	23	584	222	101
55.250L	51	1,295	37	940	24	610	49	1,245	35	889	223	101
55.250P	51	1,295	25	635	41	1,041	49	1,245	23	584	257	117
55.305L	51	1,295	34	864	24	610	49	1,245	32	813	205	93
55.305P	51	1,295	25	635	36	914	49	1,245	23	584	226	103
55.310L	59	1,499	34	864	25	635	57	1,448	32	813	247	112
55.310P	59	1,499	25	635	36	914	57	1,448	23	584	261	119
55.314L	58	1,473	37	940	27	686	56	1,422	35	889	285	130
55.314P	58	1,473	25	635	40	1,016	56	1,422	23	584	271	123
55.320L	67	1,702	37	940	25	635	65	1,651	35	889	305	139
55.320P	67	1,702	25	635	38	965	65	1,651	23	584	313	142
55.324LAC	58	1,473	37	940	34	864	56	1,422	35	889	359	163
55.324PAC	58	1,473	30	762	41	1,041	56	1,422	28	711	351	160
55.525L	67	1,702	37	940	29	737	65	1,651	35	889	354	161
55.525P	67	1,702	30	762	40	1,016	65	1,651	28	711	376	171
55.525LAC	67	1,702	37	940	33	838	65	1,651	35	889	402	183
55.525PAC	67	1,702	30	762	44	1,118	65	1,651	28	711	415	189

Access Clearance


Observe these minimum access clearances shown around your enclosure.

Enclosures may be placed side-by-side, with the projector slides opposite, but we recommend allowing clearance for service access on both sides wherever possible.

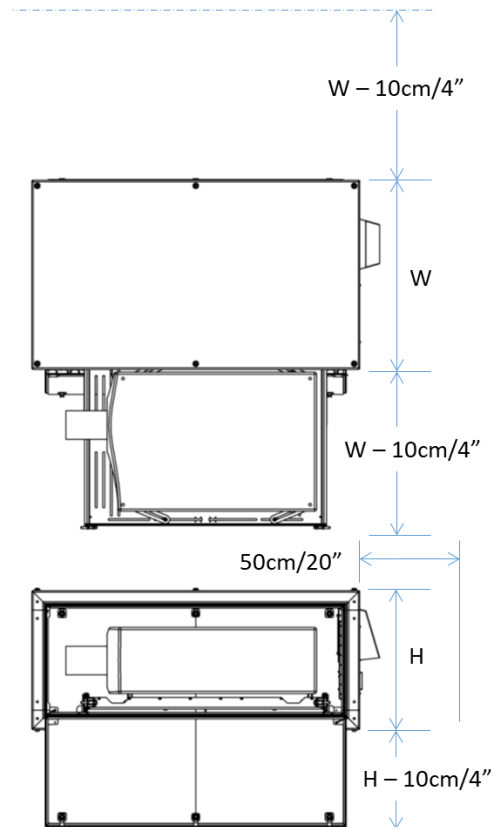

Snow Clearance

In areas where snow is likely, make sure the base of the enclosure is at least 24" [60cm] above highest potential snow drift level.

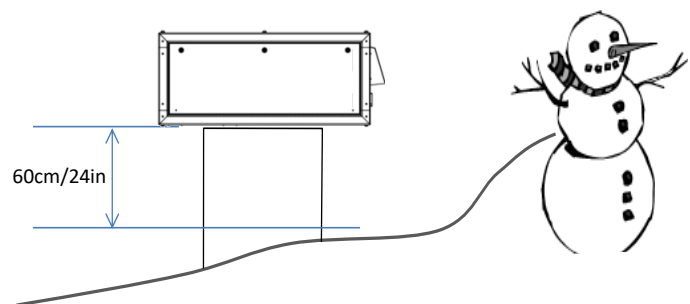


Mounting Hardware Options

Mounting Bolts

- Each Enclosure must be mounted with at least FOUR points (six points if hanging)
- All mountings must be made using the M12 threaded holes on the top or bottom of the enclosure.
- Be sure to use the sealing washers supplied for any top fixings.
- Use an 8mm hex key to secure the M12 socket cap screws provided.
- Tempest recommends the use of stainless steel mounting hardware.
- Make sure the inlet filter has at least 75mm/3in clearance below.

IMPORTANT SAFETY NOTICE

Installer must ensure that all mounting points are secure and conform to local safety regulations. Tempest Lighting Inc. accepts no responsibility for damage or injury arising from inappropriate or unsafe installation.

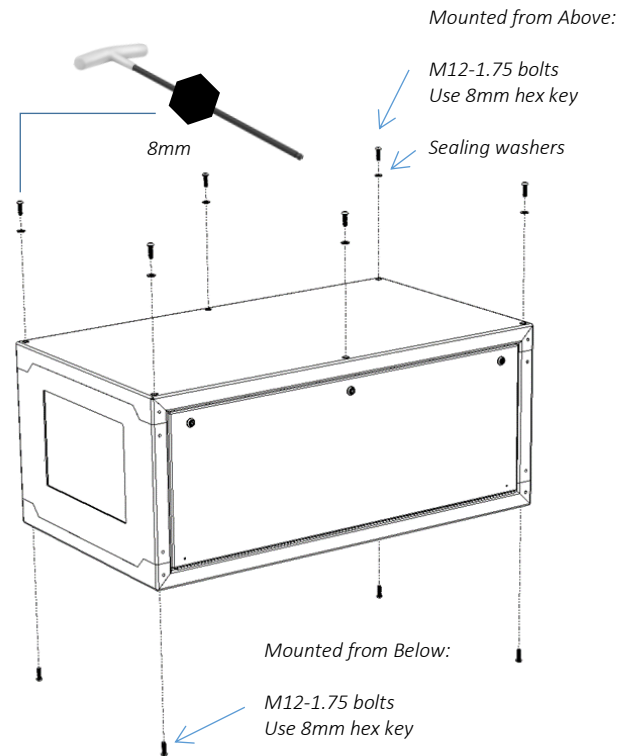


Mounting Options – Unistrut Kit

If mounting positions for the corner bolts are not convenient, use the Unistrut Kit (55.UR.xxx) to add two Unistrut rails to the top or bottom of the enclosure.

Using industry-standard Unistrut hardware, the enclosure may now be attached at any point along the Unistrut rails.

Note: Unistrut rails are required for use with the Cyclovator mount – see below...

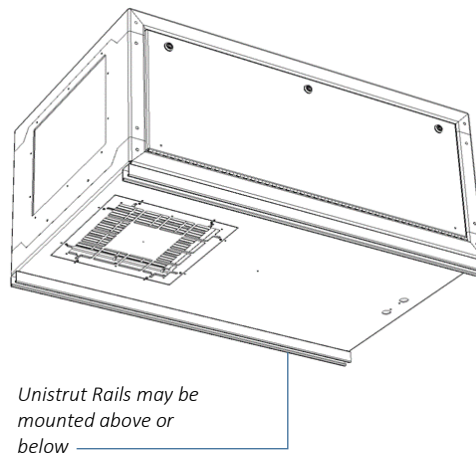


Mounting Options – Stacking Kit

Cyclone G4 may be stacked up to three units high, using the 51.SK stacking Kit. You will need the total number of Cyclones to be stacked, minus one stacking kit(s).

So, for a stack of three enclosures, order $3-1=2$ stacking kits.

Note: Cyclone enclosures must be of the same model to stack in this way.

51.SK Stacking Kit (set of four, for one enclosure)

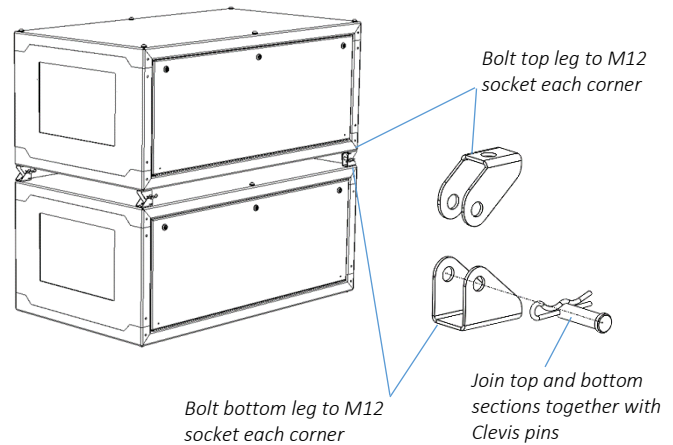


Mounting Options – Swivel Stacking Kit

Cyclone G4 may be stacked two units high, with beams up to 40° apart, using the Swivel Stacking Kit. Enclosures must be the same model.


This is very useful for edge-blending across a wide area with a limited number of rigging positions.

51.SS.xxx (where xxx is the Cyclone model number) Swivel stacking kit for two G4 Cyclone enclosures

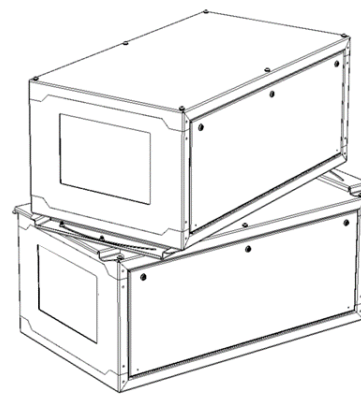

Mount Swivel Brackets to M12 threaded inserts in enclosure frames with the M12 bolts provided. All four brackets are identical

Join the radiused slots using the Hex bolts and nuts provided. Adjust desired angle and tighten nuts

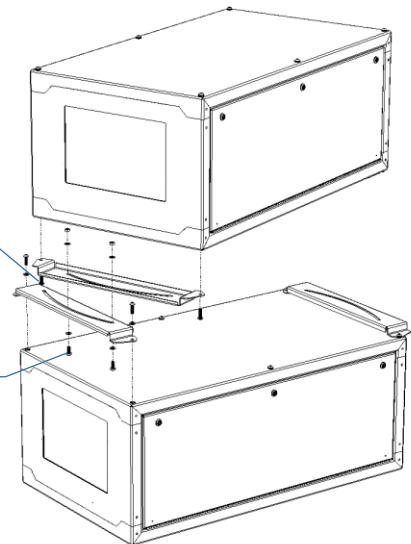


Cyclovator 2 Tilt Kit

SAFETY WARNING

IT IS A SAFETY REQUIREMENT that Cyclone enclosures with front or rear slide be horizontal any time you slide the projector out for service. IT IS DANGEROUS to do this if the enclosure is not horizontal, and MAY CAUSE DAMAGE TO THE PROJECTOR OR INFLICT SERIOUS INJURY TO PERSONNEL. Tempest Lighting Inc., its agents and employees, will not be liable for consequences of failure to heed this safety warning.


Cyclovator 2 may be used for any G3 or G4 Cyclone enclosure.

The enclosure may be installed at ground level, projecting up (up onto a building, for example)...

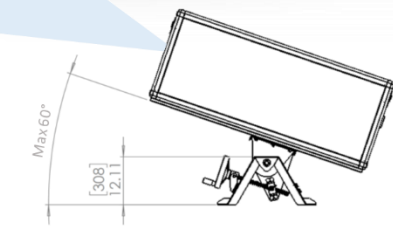

...or, on a rooftop, projecting downwards.

In either case, the maximum tilt angle is 60°.

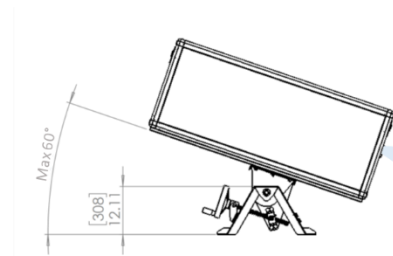

Cyclovator – Unistrut Mounting Rails


When Cyclone G4 is used with the Cyclovator Tilt Kit, the Unistrut Kit (55.UR.xxx) is required to attach the enclosure to the Cyclovator.


'xxx' is the Cyclone model number.

Cyclovator – Inlet Cowl

When Cyclone G4 is used with the Cyclovator Tilt Kit, with a tilt angle greater than 40°, use the inlet cowl 55.IC.xx to protect the inlet filter from weather.

'xx' is the filter size in inches – 15 for 55.200-350, 22 for 55.400 and up.

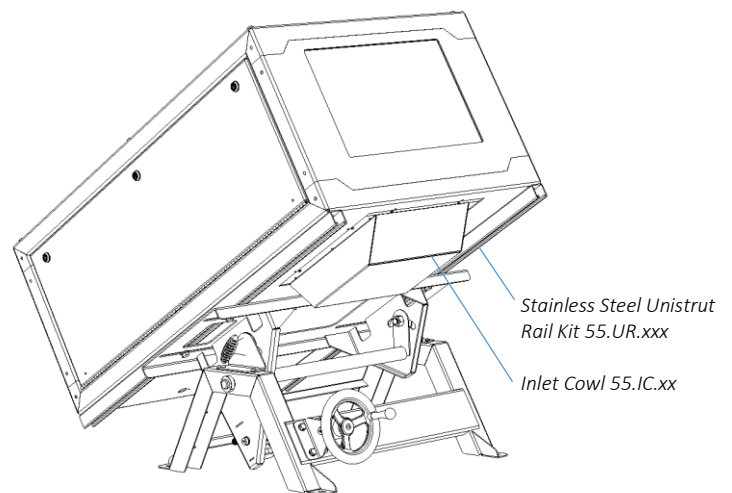


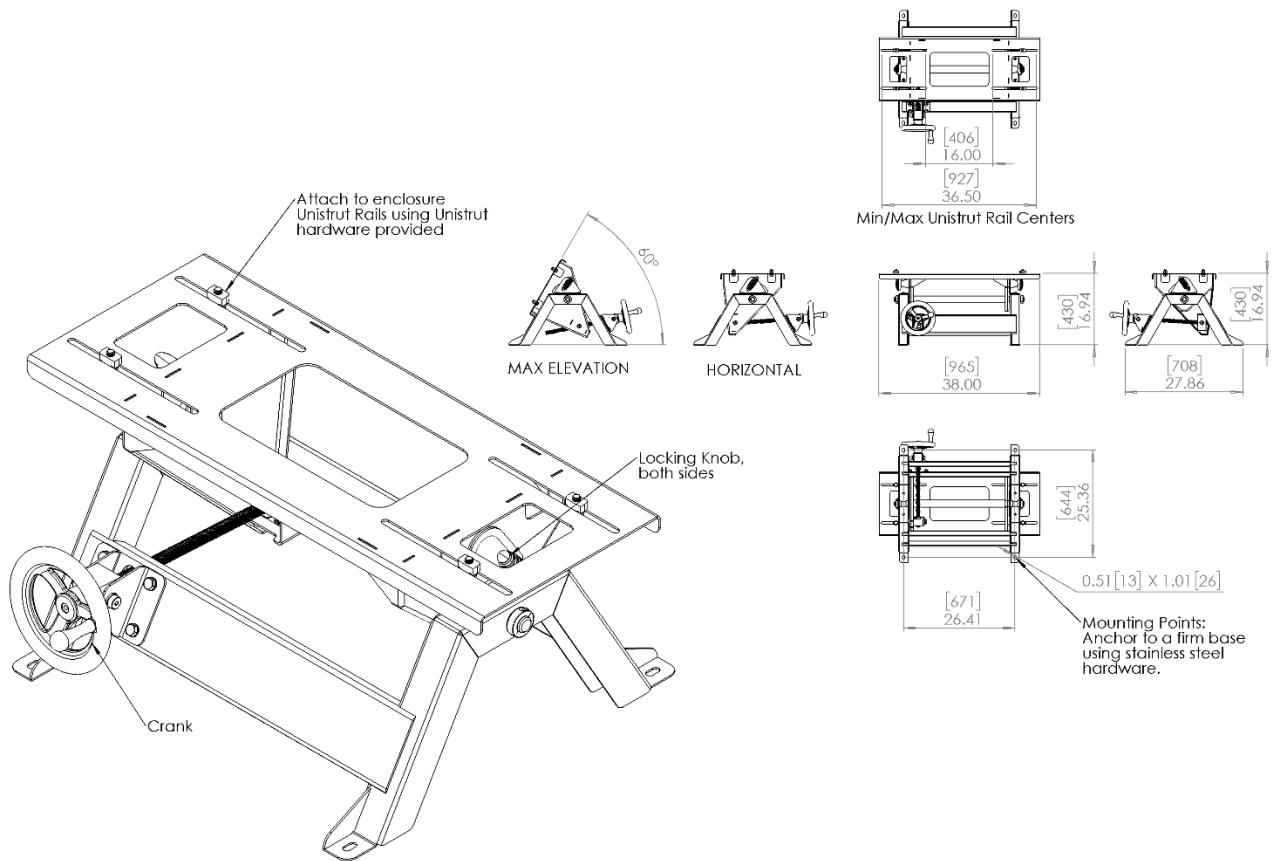

Fixing the Cyclovator in Place

The Cyclovator MUST be firmly attached to the ground, or a suitable mounting structure, using four stainless steel M12 (or US ½" size) bolts or anchors (not supplied).


Suitable substrates include concrete pads, steel frameworks, roof beams. All mountings must comply with all relevant building and safety norms in the jurisdiction of the final installation. It is the responsibility of the installer to obtain approval from a structural engineer or other competent person for all such installations, and to adhere strictly to local building and safety codes at all times.

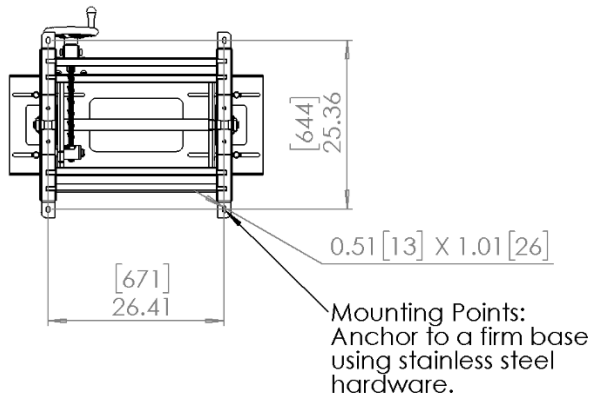

Mounting the Enclosure

(a)

Make sure that the Unistrut rails are attached securely to the 4 (or 6) M12 threaded sockets on the bottom of the enclosure frame.


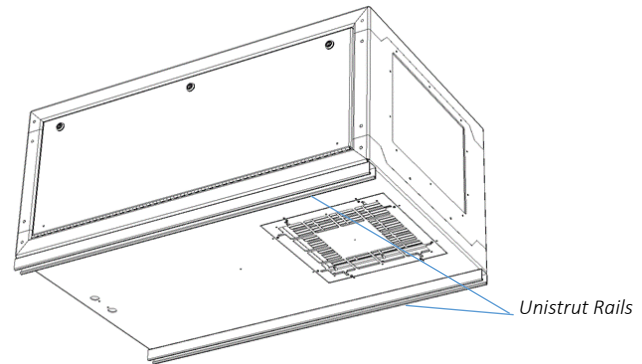


Set the Cyclovator to its horizontal position:


1. Loosen the two locking knobs (a)
2. Turn the crank handle (b) until the Cyclovator saddle is horizontal
3. Tighten the two locking knobs (a)

Align the channel spring nuts (c):

4. The distance (E) between the channel nuts should be the same as dimension E in the installation page (the distance between centers of the Unistrut channels)
5. Loosen the channel nut bolts and align the channel nuts with their long sides parallel with the end of the Cyclovator saddle:

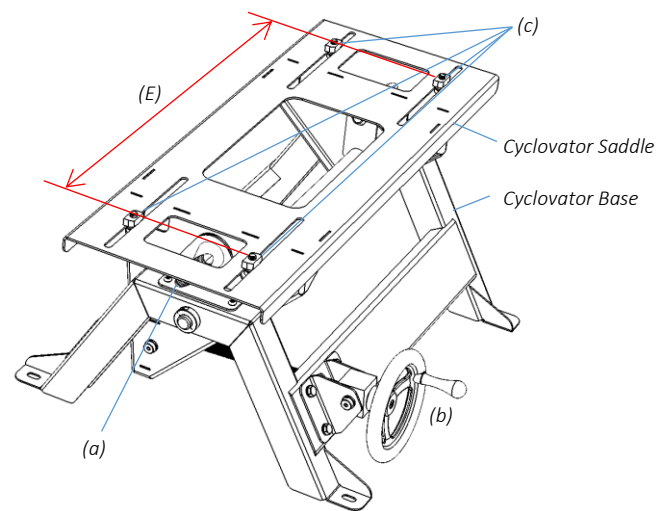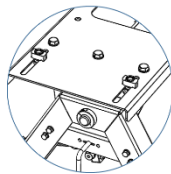

6. Carefully set the Cyclone enclosure on the Cyclovator saddle, so that the channel nuts are INSIDE the Unistrut rails.
7. PUSH UP and tighten the four M12 channel nut bolts, so that the channel nuts lock in the Unistrut channels.
8. Loosen the locking knobs and turn the crank handle to test movement.

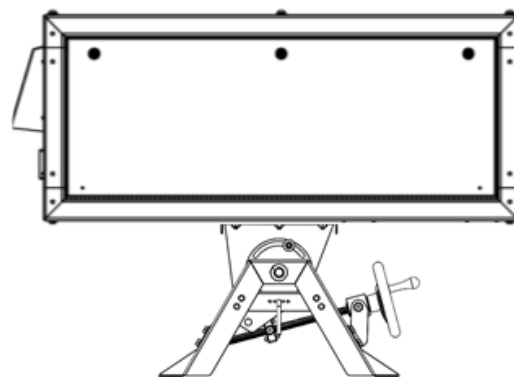


Steep Angles:

FIRST, MAKE SURE THE CYCLOVATOR IS SECURELY FIXED TO THE GROUND.

For steep projection angles, loosen the four channel nut bolts and carefully slide the enclosure in the direction that will be 'UP'.

The center of gravity will still be roughly centered in show position, but you will have to work a bit harder to crank the enclosure up to its show trim!

It is important to use the Inlet Cowl accessory for angles above 30°.

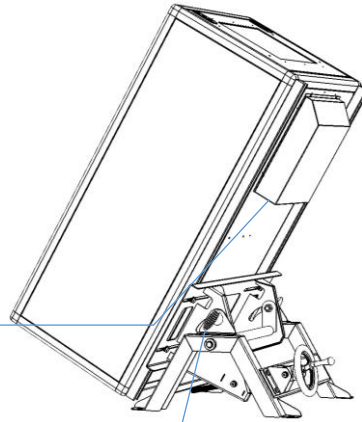


Setting the Show Position Stop

Cyclovator gives you a locator for your show position, for accurate show positioning.

With the Cyclovator in Show position:

1. Loosen the Locking Collar set screw (a)
2. Slide the Locking Collar firmly against the Acme Nut Plate (b)
3. Tighten the Locking Collar set screw (a)
4. You now have two reference locations:
 - Horizontal
 - Show


ALWAYS MAKE SURE THAT BOTH LOCKING KNOBS (c) ARE LOOSE WHEN RAISING/LOWERING THE CYCLOVATOR, AND TIGHT WHEN IN SHOW OR SERVICE POSITION.

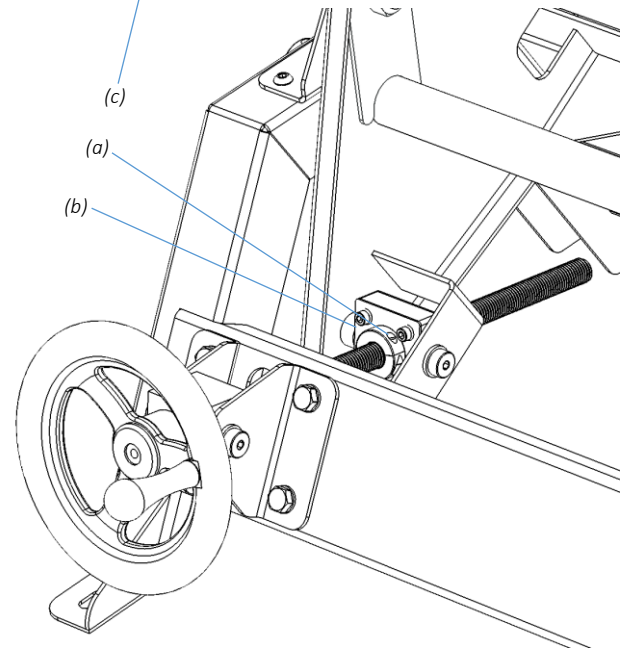

Cyclone Angle Mount Kit

The Angle Mount kit is a simple fixed mounting solution for up to two Cyclone enclosures with a tilt angle from 10-45°. Unlike Cyclovator, once set, the tilt angle is fixed.

The Angle Mount kit may be used on the ground, with projection up to a building, or on a tall structure or flat roof, projecting down.

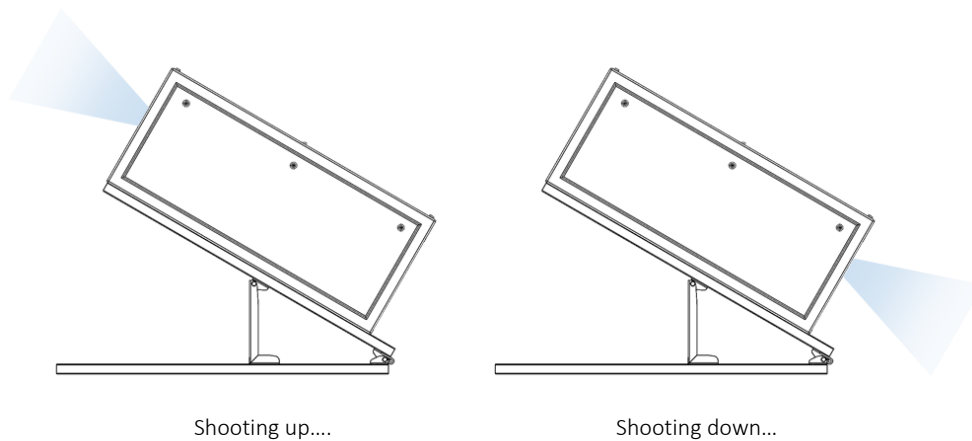

Angle Mount kits are available in three sizes:

55.AM2 for Cyclone 210 – 305

55.AM3 for Cyclone 310, 314, 324

55.AM4 for Cyclone 320, 525

Check with Tempest for Cyclone models not shown here or custom versions.

In certain cases, it will be safe to stack two Cyclone enclosures on one Angle Mount kit. Please note:

- Do not double-stack in exposed locations subject to high winds
- Do not double stack portrait enclosures
- Do not double stack if the tilt angle >30°


Angle Mount Kit Installation

Mark out the mounting pattern on the ground or substrate.



It is the same as the rigging points for the enclosure (see Installation/Dimensions D and E above).

Use stainless steel hardware suited to the mounting substrate, and in compliance with local construction codes to mount the Unistrut rails securely to the substrate.


Use M12 or ½" hardware, 2 sets per Unistrut rail.

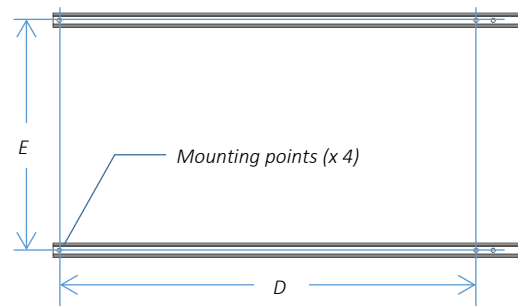


Assemble the vertical strut assemblies between the hinged Unistrut rails, set both to the same desired angle, and tighten securely.

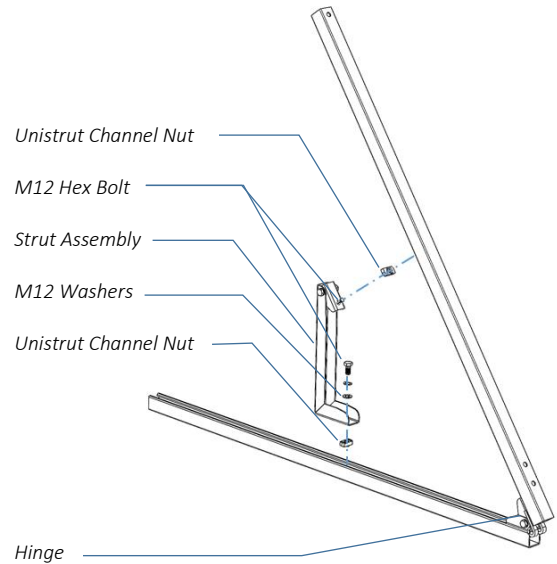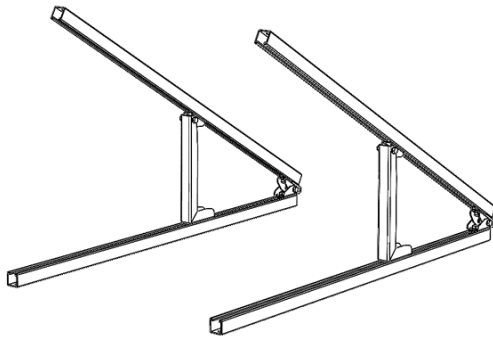

Mount the Cyclone enclosure on the two upper Unistrut rails, and secure in place using the four M12 socket cap screws provided:

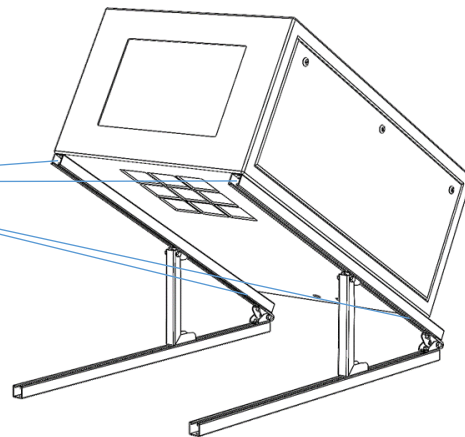

Use one stacking kit (51.SK) to double stack a second enclosure, observing the guidelines outlined above:

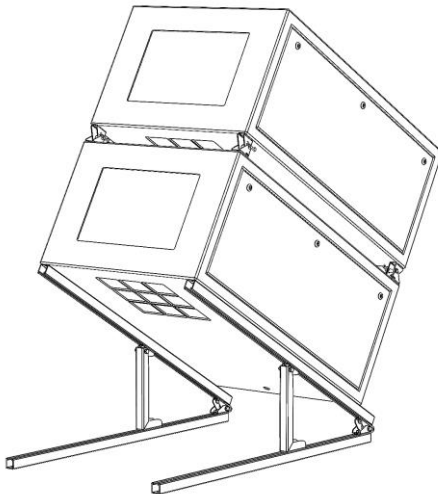

Please Note:

For tilt angles $> 30^\circ$, use 51.IC inlet cowl to protect the inlet filter from wind-blown rain.

In most cases stacking will not be possible for systems using ActiveCool or AC assist cooling. Consult Tempest for details.

Wiring the Enclosure

Power Wiring

SAFETY NOTICE

All power wiring must be performed by a competent electrician, appropriately licensed in the jurisdiction where the installation takes place. All electrical work must be done in full compliance with all electrical and safety norms applicable to the installation site. Isolate all power feeds before opening the enclosure.

Tempest Lighting, Inc., its employees and agents will not be held responsible for damage or injury caused by disregarding this notice.

Electrical Standards

Important:

Enclosure model numbers including **.US** are for use in countries using US and Japanese style electrical systems:

200-208VAC 50/60Hz

Enclosure model numbers including **.IN** are for use in countries using European style electrical systems:

220-250VAC 50/60Hz

Note:

- (1) Fans and Heaters are rated 200-250V
- (2) Electronics are autosensing for any voltage 90-265VAC, 50/60Hz
- (3) ActiveCool and AC Assist Coolers are 200-250VAC, but supplied in 50Hz and 60Hz versions

AC Supply Voltage

Tempest Cyclone enclosures require supply voltage in the nominal range 200-250VAC, 50/60Hz.



Tempest G4 enclosures are very tolerant of supply voltage variations:

- DEC4 controller has a universal power supply and operates on 90-265VAC
- Enclosure fans and heaters are rated 200-250VAC. Fans are over-dimensioned to cool adequately down to 200V, and heaters compensate thermostatically by increasing duty cycle on lower supply voltages.


Wiring Access

Remove the wiring access plate on the rear surface.

Locate the conduit entry holes on the back and underside of the enclosure – you may use either set of conduit entries, depending on your installation needs.

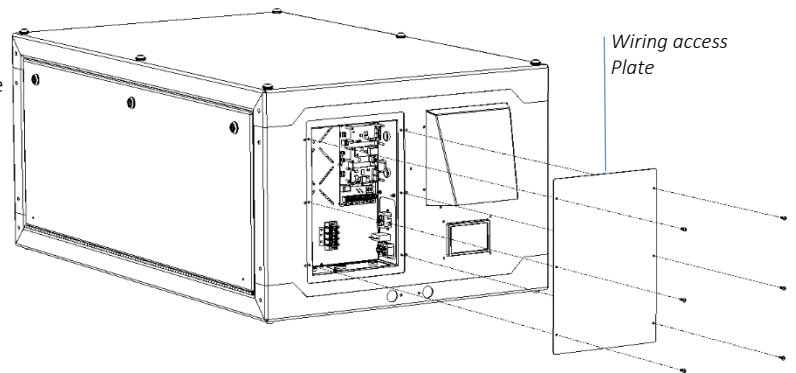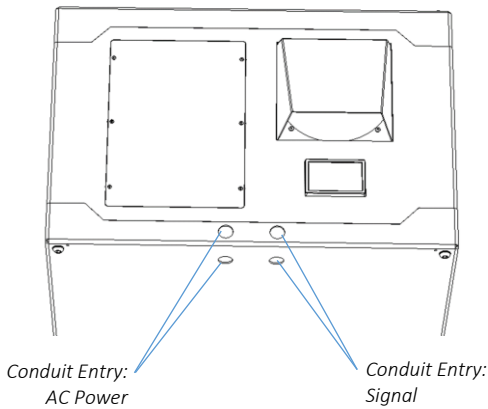

Note: Rear Panel layout may vary

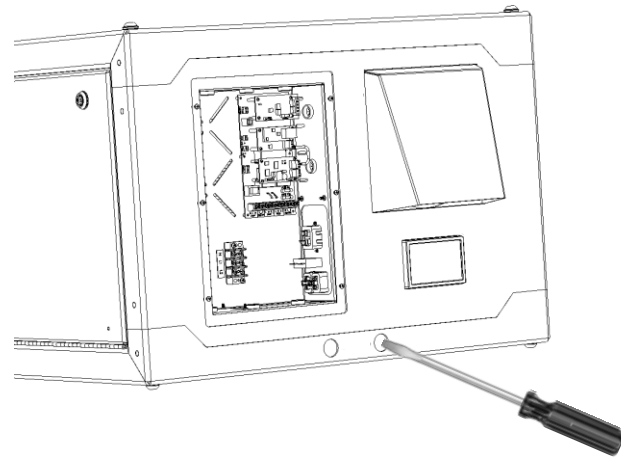

Use a screwdriver – and tap lightly with a hammer if needed – to open the conduit knockouts.


Conduit openings accept PG21 (International) and 3/4" NPT (North America) conduit fittings.

Use permanent or flexible outdoor rated conduit to connect power and signal cables to your Cyclone enclosure.

ALWAYS RUN POWER AND SIGNAL CABLES IN SEPARATE CONDUITS.

Identify the following parts:


Note: Component layout may vary

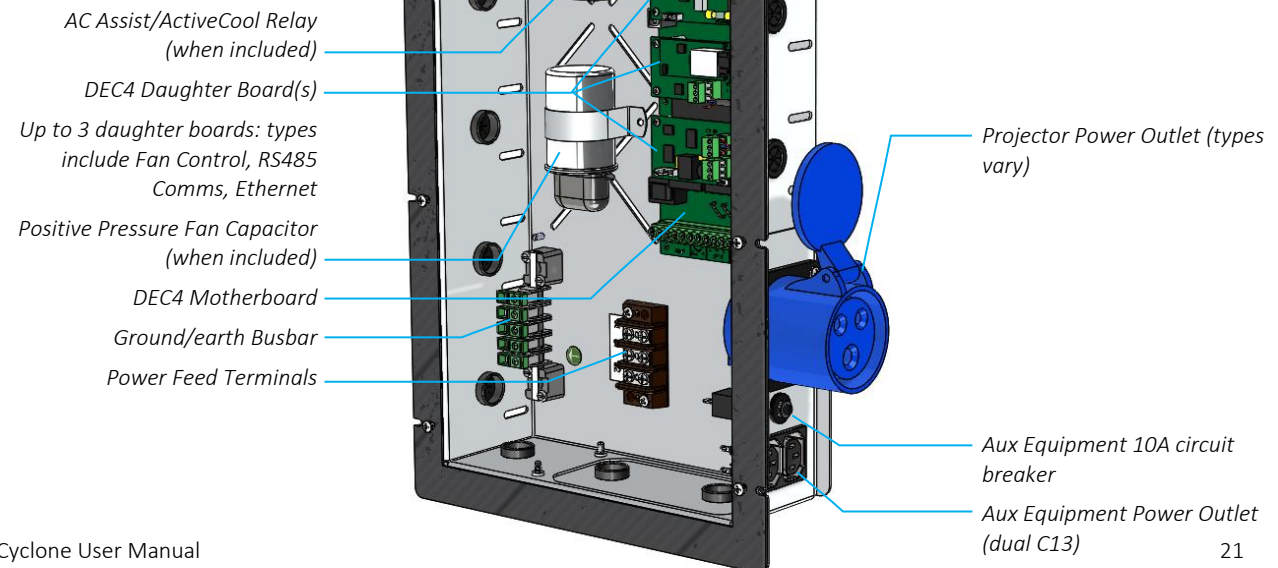

One or Two Power Circuits?

Tempest enclosures may be wired on single or double circuit supplies. On a single feed, both enclosure and projector are permanently on. With a split (double) feed supply, you can switch off the projector when not in use, while the enclosure continues to protect it 24/7.

Tip: most people use single feed.

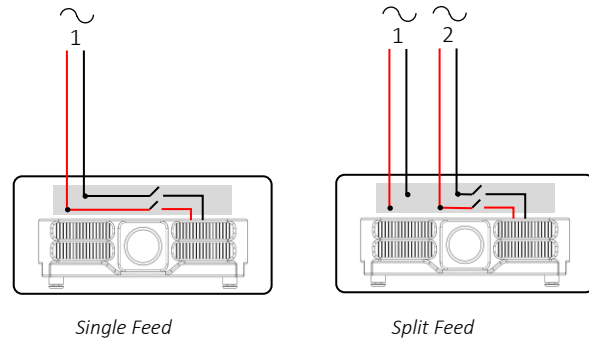

Single Feed


- Enclosure and projector are permanently on.
- Enclosure and Projector must be rated for the same voltage.
- Supply must be rated for projector current plus 200 watts.
- Supply must be permanently ON.

Split feed

- Enclosure power (FEED) must be permanently ON.
- Projector power (SPLIT) may be switched off.
- Enclosure power must be rated for 1,000 watts.
- Projector power must be rated for the projector (see projector manual).


Projector and enclosure power must be same voltage.

For **single feed** wiring, **no modification** to the DEC4 Controller motherboard is needed.

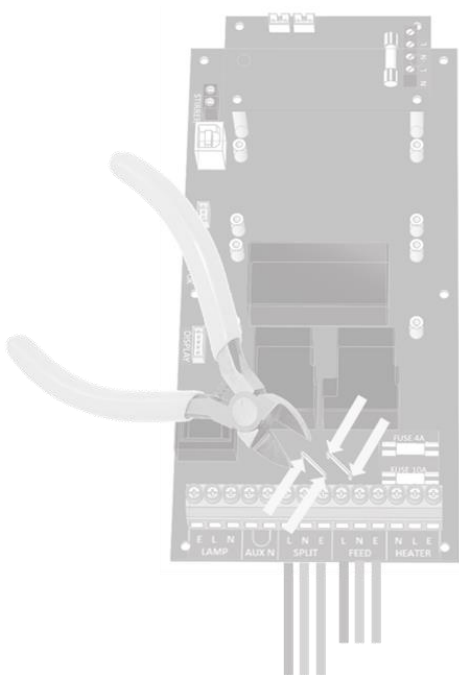

IMPORTANT:

For **split feed** wiring, use a side cutter to cut both AC links at both ends:

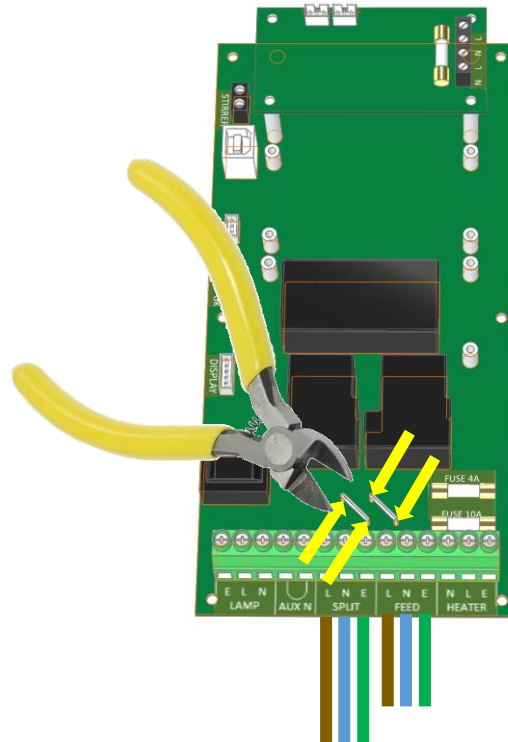


Single Feed Power Termination

- Connect Earth/Ground wire to Ground Terminal
- Connect Live and Neutral to the terminals marked L and N ENCLOSURE
- **IMPORTANT:** Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

SEE DIAGRAMS ON FOLLOWING PAGES

Split Feed Power Termination

- **STOP!** Did you cut the power links? See above.
- Connect Earth/Ground wire to Ground Terminal
- Connect Enclosure feed to the terminals marked L and N ENCLOSURE
- Connect Projector feed to the terminals marked L and N PROJECTOR
- Open the Split Feed Wiring Kit – it contains two short cables to link the PROJECTOR supply terminals to the DEC SPLIT terminals:

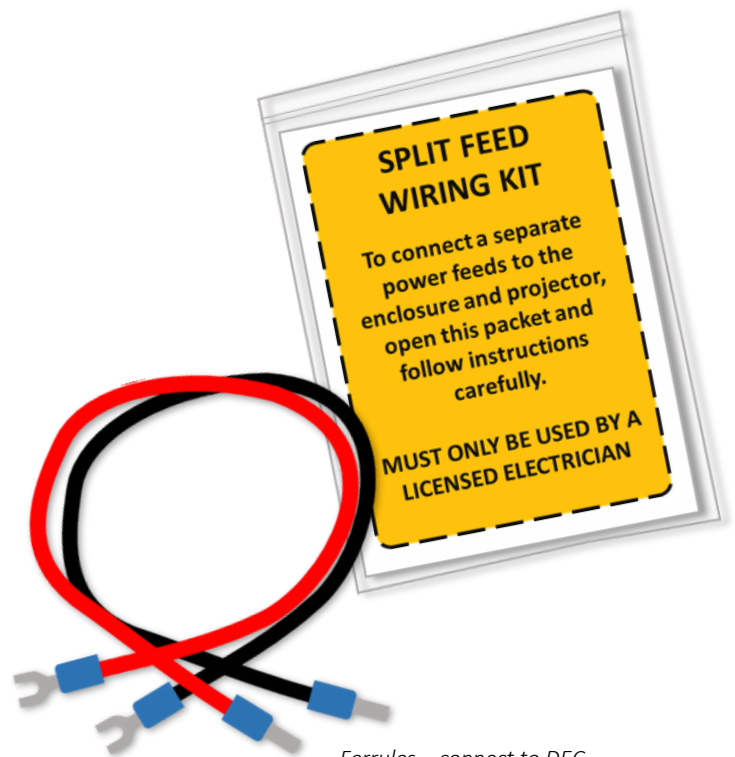


Spades – connect to supply terminal block

Ferrules – connect to DEC Terminals

- Connect Split feed wires provided between L and N PROJECTOR and motherboard L and N SPLIT terminals
- **IMPORTANT:** Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

SEE DIAGRAMS ON FOLLOWING PAGES

North America 208V, Japan 200V Single Feed

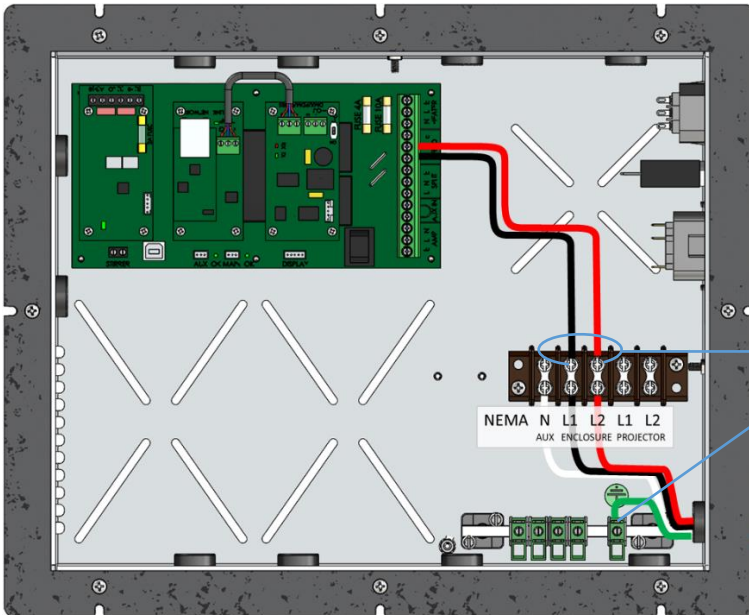

Single Feed

200-208VAC Single-Phase (2 hots)

Protective Earth (ground)

10A Neutral for 120V Aux power

Fuse/Circuit breaker rating: Projector power plus 200W (Max 30A)

Factory Installed feeds


Supply Ground Terminal

User-installed Supply wiring

IMPORTANT: Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

(for clarity, internal wiring not shown)

North America 208V, Japan 200V Split Feed

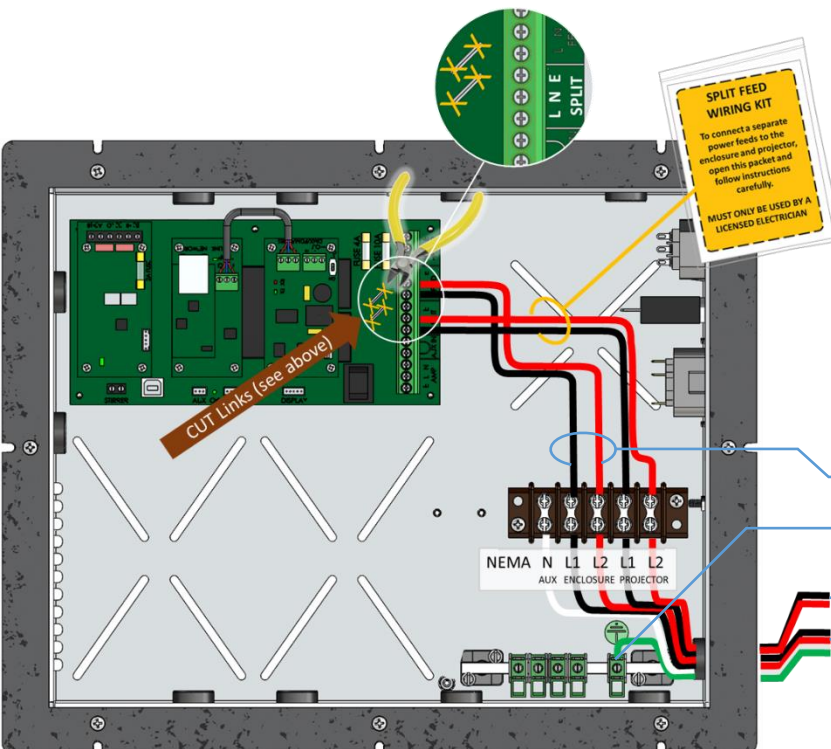

Split Feed

Enclosure: 10A 200-208VAC Single-Phase (2 hots)

10A Neutral for 120V Aux power

Protective Earth (ground)

Projector: 200-208VAC Single-Phase (2 hots)

Fuse/Circuit breaker: Projector power rating (Max 30A)

Factory Installed feeds

Supply Ground Terminal

User-installed Supply wiring:


Projector

Enclosure

IMPORTANT: Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

(for clarity, internal wiring not shown)

International, 230V Single Feed

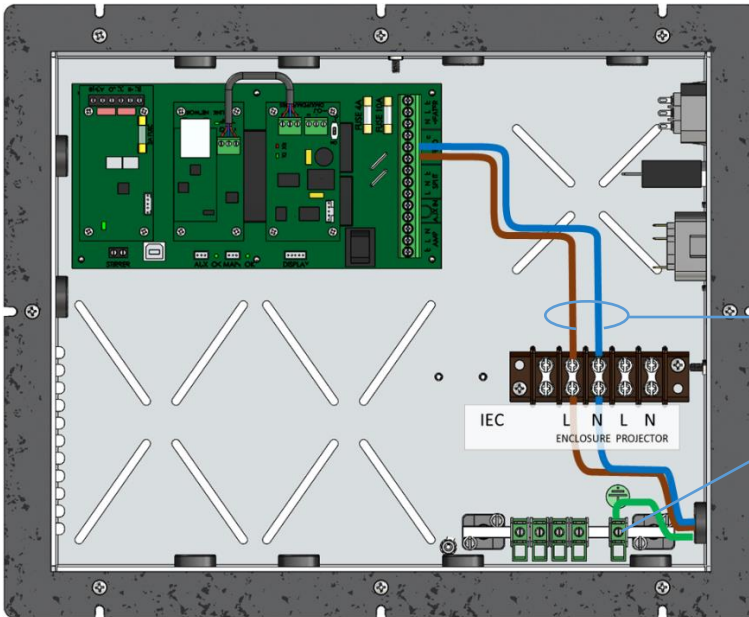

Single Feed

230VAC Single-Phase (L + N)

Protective Earth (ground)

Fuse/Circuit breaker rating: Projector power plus 200W (Max 30A)

Factory Installed feeds


Supply Ground Terminal

User-installed Supply wiring

IMPORTANT: Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

(for clarity, internal wiring not shown)

International, 230V Split Feed

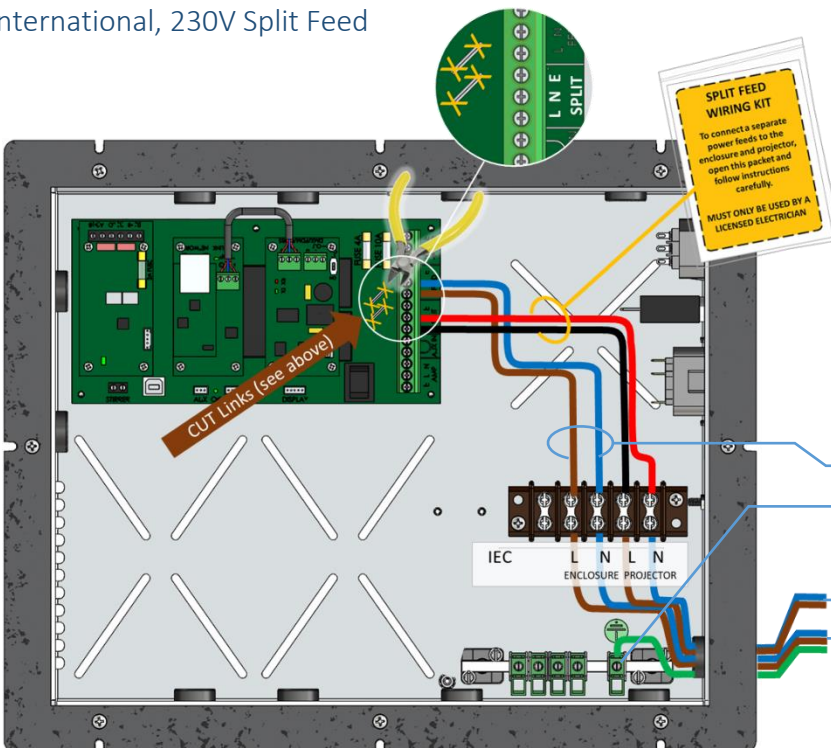

Split Feed

Enclosure: 10A 230VAC Single-Phase (L + N)

Protective Earth (ground)

Projector: 230VAC Single-Phase (L + N)

Fuse/Circuit breaker: Projector power rating (Max 30A)

Factory Installed feeds

Supply Ground Terminal

User-installed Supply wiring:

Projector

Enclosure

IMPORTANT: Use only copper wire, rated to comply with local electrical codes. Terminal Screw Torque Setting 0.5Nm/4.5in lb.

(for clarity, internal wiring not shown)


Windshield Wiper Wiring

If the optional windshield wiper kit is included, install a switch line on the 12Vdc wiper circuit.

In the wiring compartment, locate the terminals marked A B/WIPER.

Connect the two terminals to a switch, rated for 12Vdc 3A at a convenient location in the control room.

Note that the wiper is self-parking and will return to the open position after the remote switch is turned off.





Switch Line – use
1mm²/18AWG wire

Switch – 12Vdc, 3A

Wiper Inline Fuse

An inline fuseholder is provided inside the wiring compartment.

Fuse: 20x5mm, 3A Slow Blow

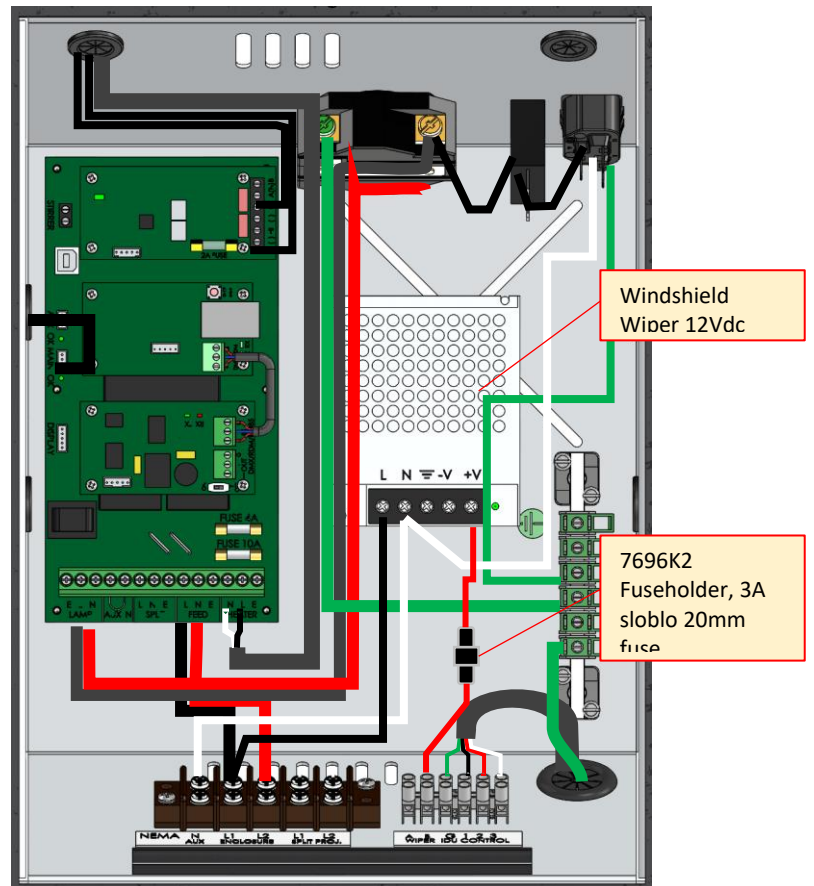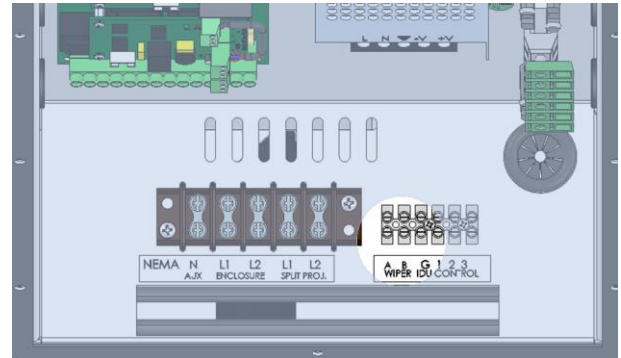


Layout varies across Cyclone models

Remote Monitoring Connections


Tempest enclosures optionally support two types of remote monitoring:

1. **Tempest System Manager (TSM)** – a dedicated network manager, with monitoring, system configuration and firmware upgrade capability over Ethernet.
Requires 51.D4.23 EtherNode board in at least one enclosure
2. **Tempest Enclosure Management Protocol (TEMP)** – a simple protocol for use by system integrators wishing to monitor Tempest enclosures from their own show control network.
Requires 51.D4.15 Ethernet board in at least one enclosure

The system topology is the same for both methods:

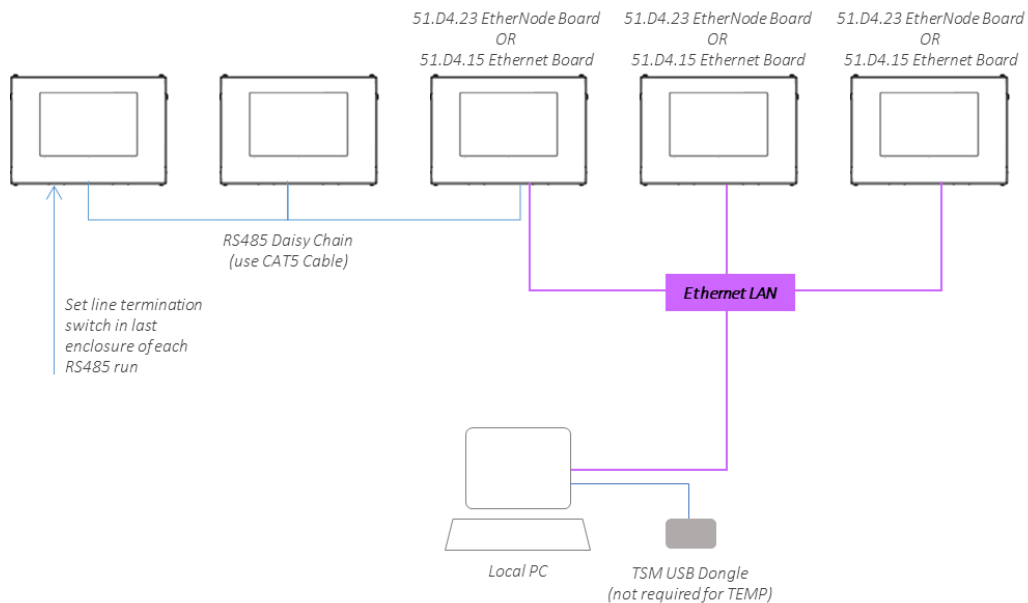

DEC4 Ethernet Adapters – 51.D4.15, 51.D4.23

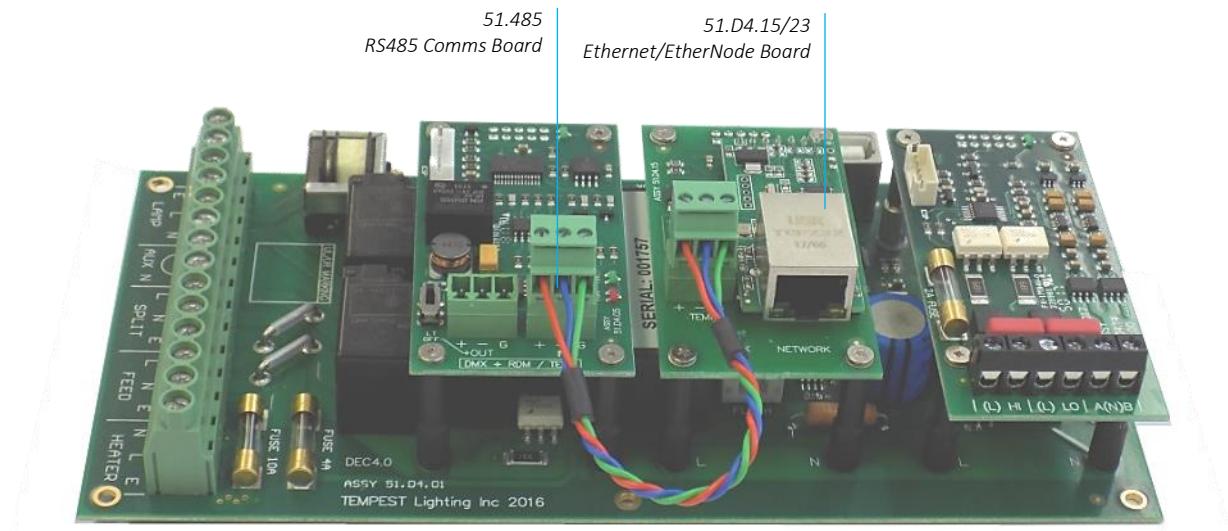

As a default, DEC4 communicates using DMX512 and RDM, over RS485.

With the addition of either Ethernet board, any DEC4 – or any group of DEC4 boards connected using RS485 – may be connected to an Ethernet network – see above.

51.D4.15 Default Configuration

The bridge module is supplied in DHCP TCP port server configuration, with all traffic on port 3308. These settings may be changed with a web browser on port 80 at the DHCP assigned address. Login to the home page using 'admin' for user name as password.

The bridges may be discovered with a UDP broadcast on port 1500 and a payload of

(Hex) 30 31 32 33 34 35 36 37 38 39 30 31 32 33 34 35 36 37 38 39
30 31 32 33 34 35 36 37 38 39 30 31 32 33 34 35 36 37 38 39

The bridge will respond from its DHCP address


51.D4.15 Additional Support

The network IP is developed by Jinan USR, more details and software configuration utilities may be found by visiting their web site at <https://www.pusr.com>

RS485 (DMX/RDM) Cable Terminations

DEC4 System Control Board, with three typical Daughter Boards:

1. AC Fan Controller
2. Ethernet Bridge
3. RS485 Comms

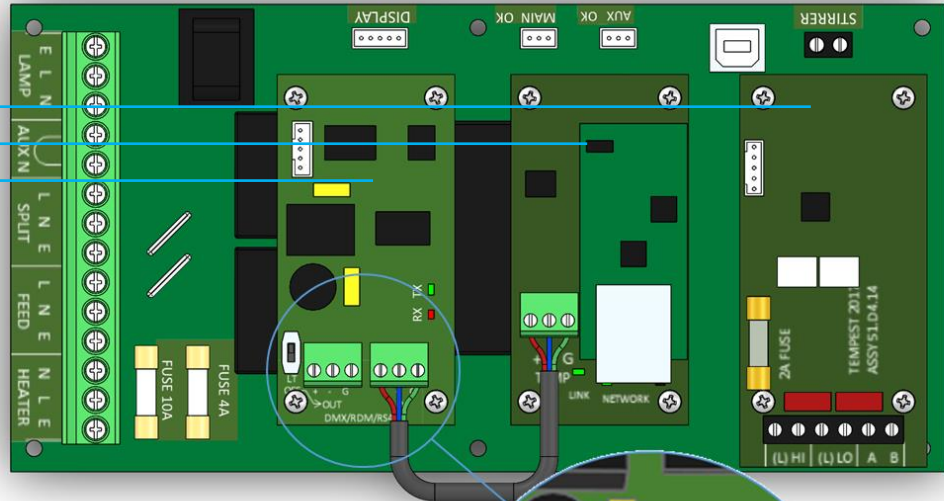


Loop a shielded twisted pair cable (eg Belden 9841, though many people now use a CAT5e cable) from the control/monitoring point, around all enclosures.

Maximum total cable length is 1,200M (4,000ft). For longer runs and widely distributed systems, use a DMX/RDM splitter (make sure that it supports RDM) and multiple cable runs.

Use the termination switch to terminate each RS485 cable run at the last enclosure on each run.

RS485 Line Termination (LT) Switch:

TERMINATED

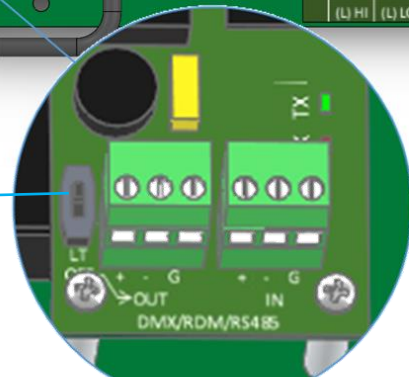

Data + Data - Common Data + Data - Common


DATA OUT

DATA IN


Terminal Screw Torque Setting 0.5Nm/4.5in-lb

Line Termination Switch Settings


1. DMX/RDM control over RS485:

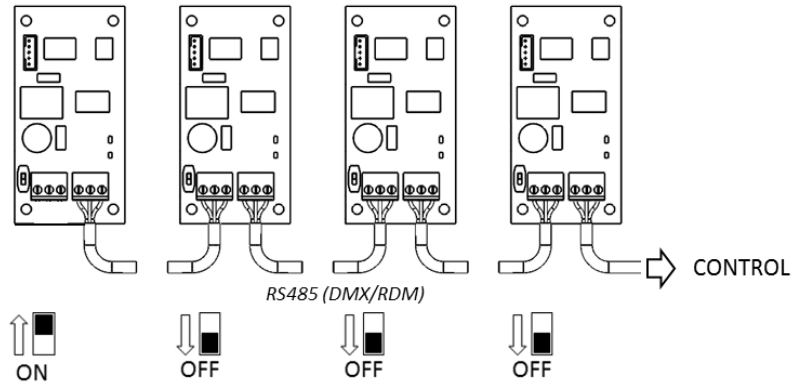

2. TSM/TEMP Control of an enclosure group via Ethernet

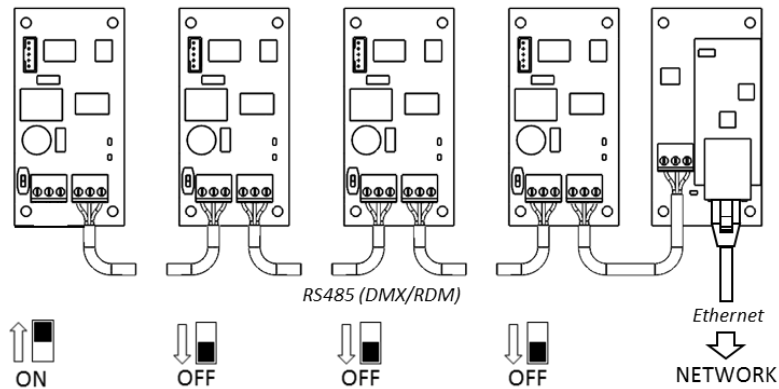


3. TSM/TEMP Control of a single enclosure via Ethernet

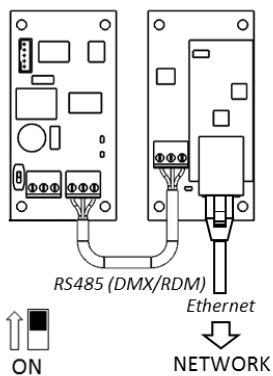

System Manager Installation

Connect the enclosure(s) to a Windows PC running Windows 10 or later, using the diagram above. The JESE RDM-TXI is required to act as a dongle to enable TSM functions.


Connect the JESE RDM-TXI dongle to the PC via RDM:

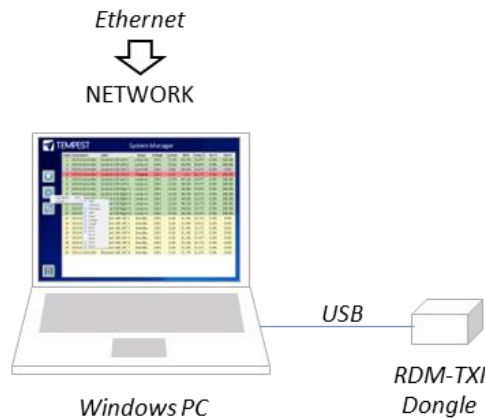

Note that Tempest System Manager is an operating mode of GetSet MV, a software application written and marketed by Tempest's electronics partner JESE. You will need to download GetSet MV from JESE's web portal:

<https://www.jese.co.uk/support/>

Use the Serial Number and Check ID from the RDM-TXI to log in:

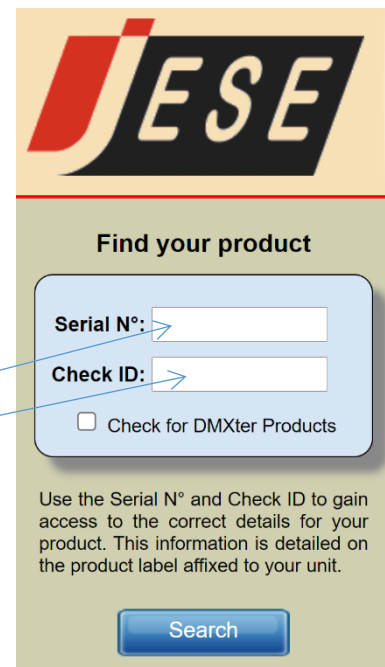The screenshot shows the JESE 'Find your product' web portal. It features the JESE logo at the top. Below the logo, the text 'Find your product' is displayed. There are two input fields: 'Serial N°:' and 'Check ID:'. Below these fields is a checkbox labeled 'Check for DMXter Products'. At the bottom of the form is a 'Search' button. Below the form, there is a paragraph of text: 'Use the Serial N° and Check ID to gain access to the correct details for your product. This information is detailed on the product label affixed to your unit.'

IMPORTANT!

Do not connect any JESE USB device in to your windows PC before installing the software. Doing so may cause windows to install the incorrect USB driver for your device and prevent normal operation of the software.

JESE GetSet is licensed software and registered to a qualifying hardware component. Qualifying components include a USB controller such as an RDM-TRI or RDM-TXI.

The software license is perpetual and includes one year of updates and feature additions. Further updates and supports are available from JESE with an annual subscription fee.

Having installed GetSet, connect the RDM-TXI to the PC using the provided USB cable, and then launch the application.



Network Configuration

By default, EtherNode modules are configured for network DHCP addressing. In the absence of a DHCP service, modules will default to an address in 10.0.0.0/8 network range until a DHCP address is assigned. The default address may be determined by translating a modules' Serial Number to an address greater than \$10 00 00 00. For instance, a Serial Number of 1234 in hex is \$ 04 D2 which yields a default network address of 10.0.4.170 and network mask of 255.0.0.0

If there is no DHCP server available, the PC NIC (Network Interface Controller) may be configured to the 10.0.0.0 /8 CIDR. This may require administrator privileges to change settings. Please refer to the documentation or support resources for your operation system for configuring a static IP address.

3.4 Setting Up GetSet MV

For GetSet to discover EtherNodes on the same network, check the 'Enable Network Node Discovery' option in the Settings menu.





Next, click on the Node Button to open the Node Manager.



Click on the Connect Button to initiate a node discovery and populate the Node Manager with all USB and network enabled Nodes.

To assign a meaningful label to each of the nodes in the manager, right click on an entry and select the 'Edit Label' option.

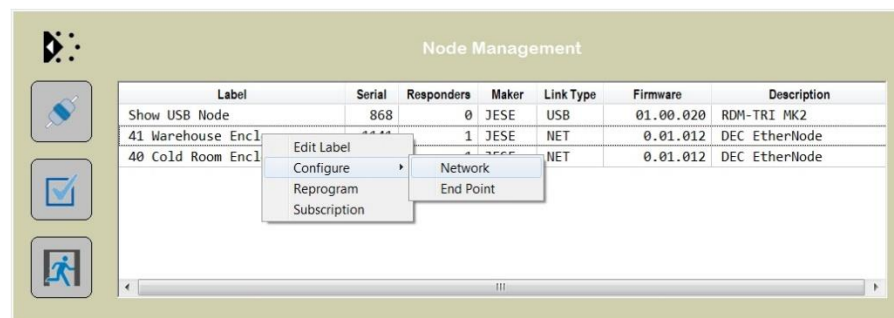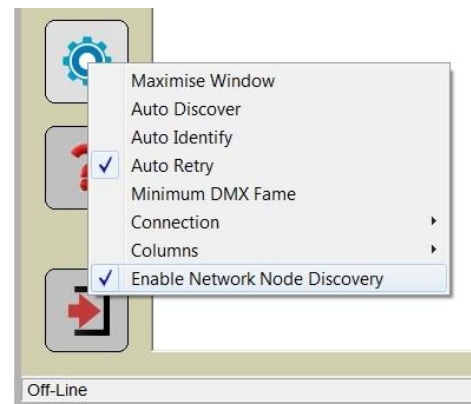


EtherNode Configuration

A node network configuration tool may be accessed from the Node Manager by right clicking on an entry and selecting the Configure->Network Option.


Be aware, that setting an address and mask outside of the network used, will cause the connection to be lost.

To restore an EtherNode to default addressing and DHCP, Press and hold the DHCP reset on the EtherNode module, whilst powering up the DEC.

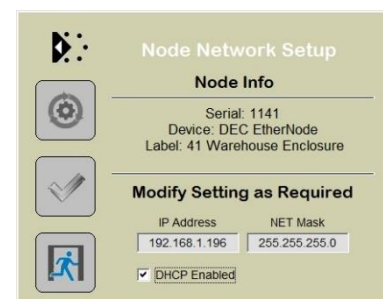

EtherNode Firmware Updates

On occasion, there will be new firmware releases for EtherNodes and USB Controllers. The Firmware may be applied using the 'Reprogram' option, then selecting the File to load.

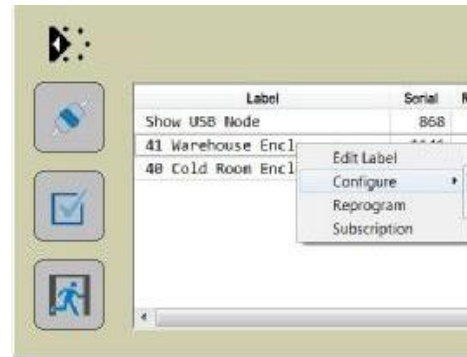


Enclosure Management

Running Discovery




Having set up all EtherNodes and any other USB Devices, clicking on the discovery button will initiate a global discovery of all Tempest Enclosures and any other RDM compliant responders detected in the system.

For Tempest Management options, select Tempest responders from the drop down filter list.

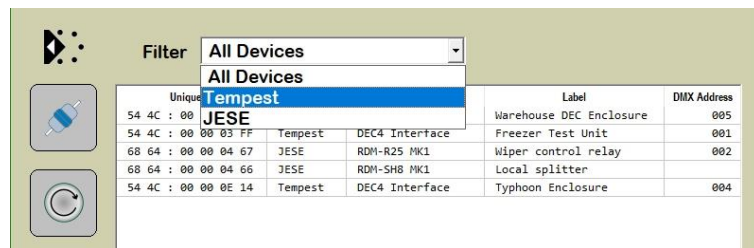


Enclosure Monitoring

On selection, the 'CONSOLE' button for Tempest enclosures provides access to the Tempest System Manager. The displayed responders will be limited to the Filtered items.

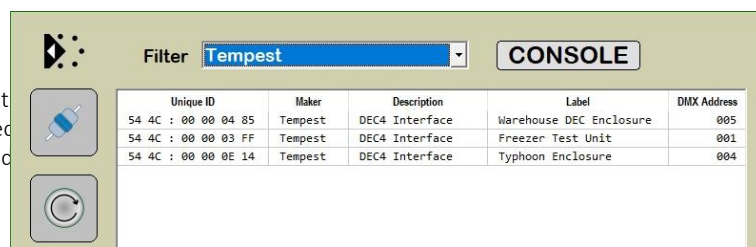

The Enclosure management window, shown here, loads from 'CONSOLE' button.

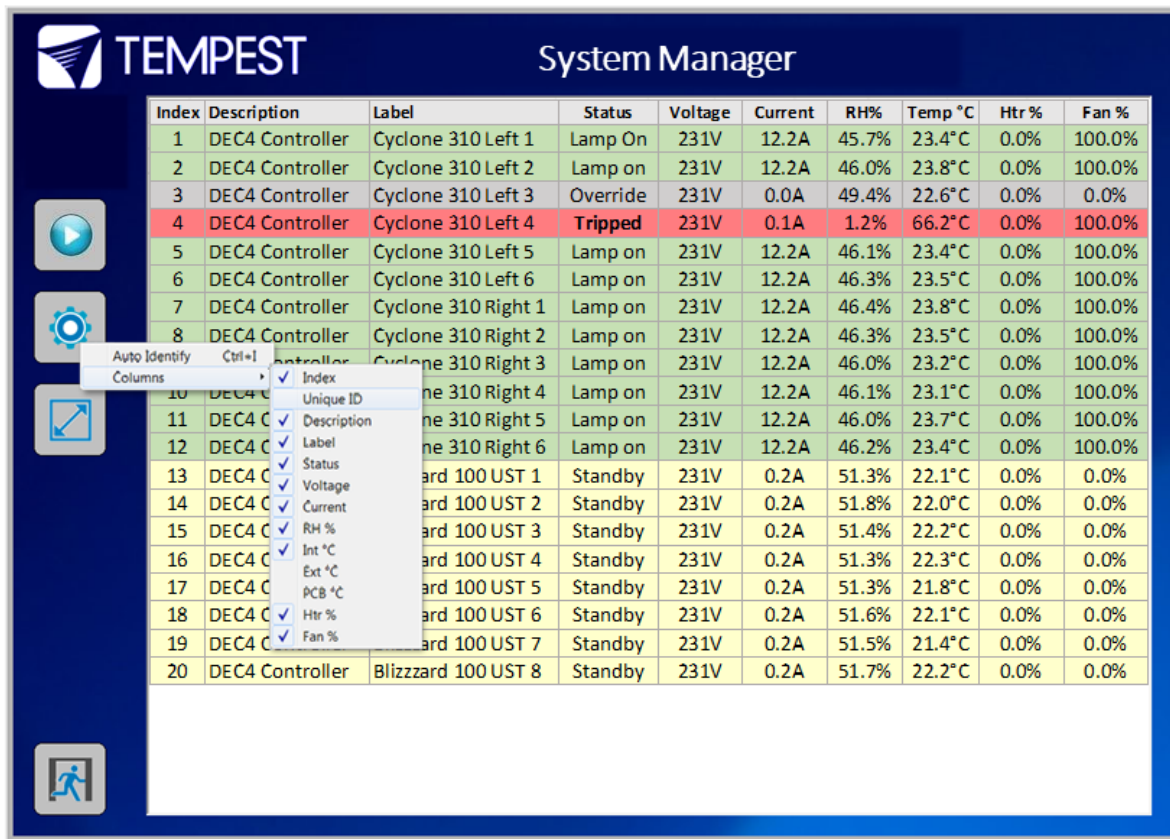

The screenshot shows the TEMPEST System Manager window. It features a sidebar with icons for Run, Settings, Scale View, and a person icon. A 'Columns' menu is open, showing a list of fields with checkboxes. The main table displays the following data:

Index	Description	Label	Status	Voltage	Current	RH%	Temp °C	Htr %	Fan %
1	DEC4 Controller	Cyclone 310 Left 1	Lamp On	231V	12.2A	45.7%	23.4°C	0.0%	100.0%
2	DEC4 Controller	Cyclone 310 Left 2	Lamp on	231V	12.2A	46.0%	23.8°C	0.0%	100.0%
3	DEC4 Controller	Cyclone 310 Left 3	Override	231V	0.0A	49.4%	22.6°C	0.0%	0.0%
4	DEC4 Controller	Cyclone 310 Left 4	Tripped	231V	0.1A	1.2%	66.2°C	0.0%	100.0%
5	DEC4 Controller	Cyclone 310 Left 5	Lamp on	231V	12.2A	46.1%	23.4°C	0.0%	100.0%
6	DEC4 Controller	Cyclone 310 Left 6	Lamp on	231V	12.2A	46.3%	23.5°C	0.0%	100.0%
7	DEC4 Controller	Cyclone 310 Right 1	Lamp on	231V	12.2A	46.4%	23.8°C	0.0%	100.0%
8	DEC4 Controller	Cyclone 310 Right 2	Lamp on	231V	12.2A	46.3%	23.5°C	0.0%	100.0%
		Cyclone 310 Right 3	Lamp on	231V	12.2A	46.0%	23.2°C	0.0%	100.0%
10	DEC4 C	ne 310 Right 4	Lamp on	231V	12.2A	46.1%	23.1°C	0.0%	100.0%
11	DEC4 C	ne 310 Right 5	Lamp on	231V	12.2A	46.0%	23.7°C	0.0%	100.0%
12	DEC4 C	ne 310 Right 6	Lamp on	231V	12.2A	46.2%	23.4°C	0.0%	100.0%
13	DEC4 C	ard 100 UST 1	Standby	231V	0.2A	51.3%	22.1°C	0.0%	0.0%
14	DEC4 C	ard 100 UST 2	Standby	231V	0.2A	51.8%	22.0°C	0.0%	0.0%
15	DEC4 C	ard 100 UST 3	Standby	231V	0.2A	51.4%	22.2°C	0.0%	0.0%
16	DEC4 C	ard 100 UST 4	Standby	231V	0.2A	51.3%	22.3°C	0.0%	0.0%
17	DEC4 C	ard 100 UST 5	Standby	231V	0.2A	51.3%	21.8°C	0.0%	0.0%
18	DEC4 C	ard 100 UST 6	Standby	231V	0.2A	51.6%	22.1°C	0.0%	0.0%
19	DEC4 C	ard 100 UST 7	Standby	231V	0.2A	51.5%	21.4°C	0.0%	0.0%
20	DEC4 Controller	Blizzard 100 UST 8	Standby	231V	0.2A	51.7%	22.2°C	0.0%	0.0%




To start monitoring the discovered enclosures, select the Run button. On-line enclosures will be polled in turn and status data updated.


The monitor may be toggled between sizeable and full screen view with the scale view button.

The fields displayed in the window may be customized to suit the Enclosure configuration options and user preference. From the setting button, a drop down menu details all available fields, some of which may not apply to the enclosures in a particular installation.

Each Column may be ordered or grouped by right clicking the heading and selecting an option form the drop down menu.

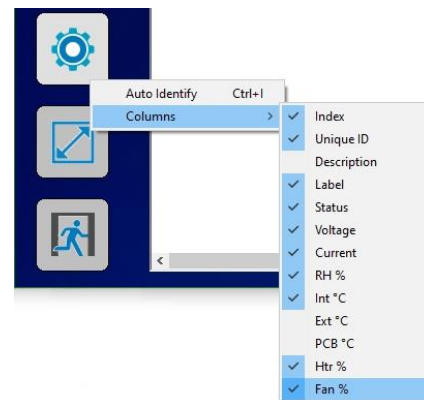

DMX Control

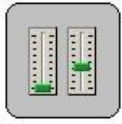

A fully configurable DMX Control Desk is accessible from the Desk button in the Main GetSet Form.


When there is a requirement to control DMX operable devices on the network, each device should be configured to the required DMX address and DMX personality. The desk

may then be set to the required DMX footprint and all of the used slots labelled for convenience. See the Latest GetSet MV User guide for full and latest details.

Firmware Uploads

From time to time, new firmware with enhancements or feature additions for the enclosures will be released.

To load firmware to the enclosures, right click the entry in the main window and select 'Reprogram' from the drop down window. For additional details, refer to the latest [GetSet MV User Guide](#).

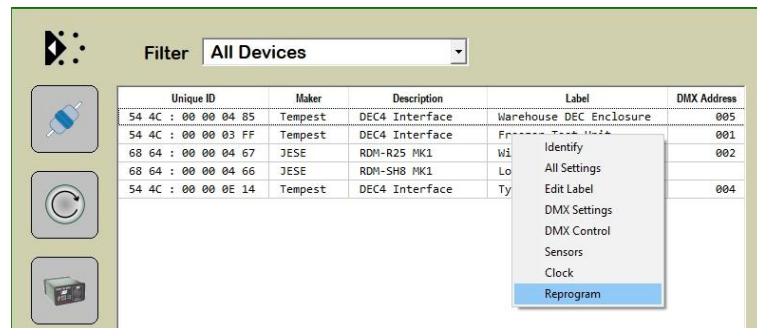


Remote Configuration

User configurable settings that may be accessed from the enclosures' user interface, may also be accessed from GetSet.

To access the settings window, double click the entry shown on the above window to bring up the device manger. Select one of the related 'Custom Parameters' to open the configuration window.

Settings may be selected from the presented values in each of the drop down windows.

Note that various other generic services and tools are available from the Device Manager window. Details on each of these features are available in the latest [GetSet MV User guide](#).

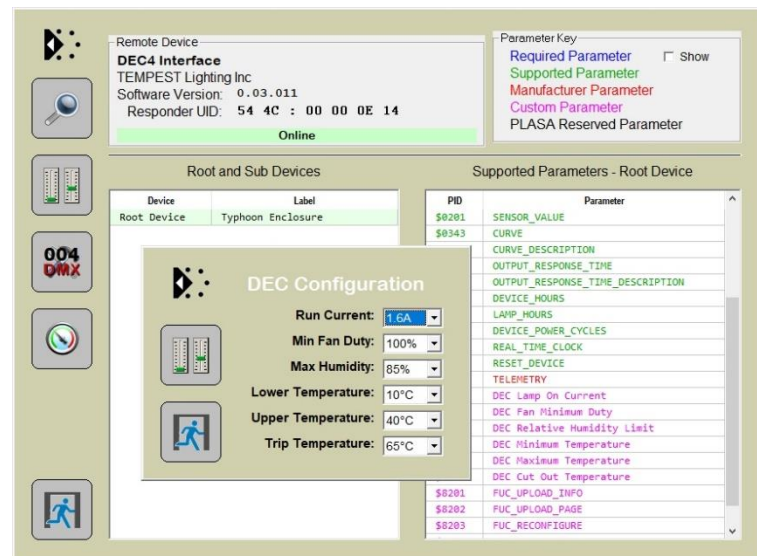

Tempest Equipment Management Protocol

TEMP allows you to access status information and set configuration values on DEC3.3 and DEC 4 enclosure controllers, using the 51.D4.15 Ethernet Adapter, over an Ethernet network.

Download the Developer Guide at
www.tempest.biz/tech_support

IMPORTANT:

Tempest warrants that, if correctly implemented, TEMP will provide a reliable and accurate method of monitoring Tempest DEC3 and 4 controllers over an Ethernet network. However, the integrator is entirely responsible for the connection between the Ethernet Bridge and the network.



Positive Pressure Fan Control Option


When the Positive Pressure (51.PP) option is ordered, the enclosure fan function is changed.

- Normally the enclosure fan(s) will run only when either the projector/luminaire lamp is on, or if the daytime temperature in the enclosure exceeds the DEC Upper Temperature setting. At all other times the fan is OFF.
- With the Positive Pressure option, when the fan would normally be off, it is instead powered via a capacitor that lowers the operating voltage so that the fan continues to run at a low level, maintaining positive pressure in the enclosure and preventing harmful contaminants from entering through the exhaust path.

Fan Control Board

Capacitor

Fan

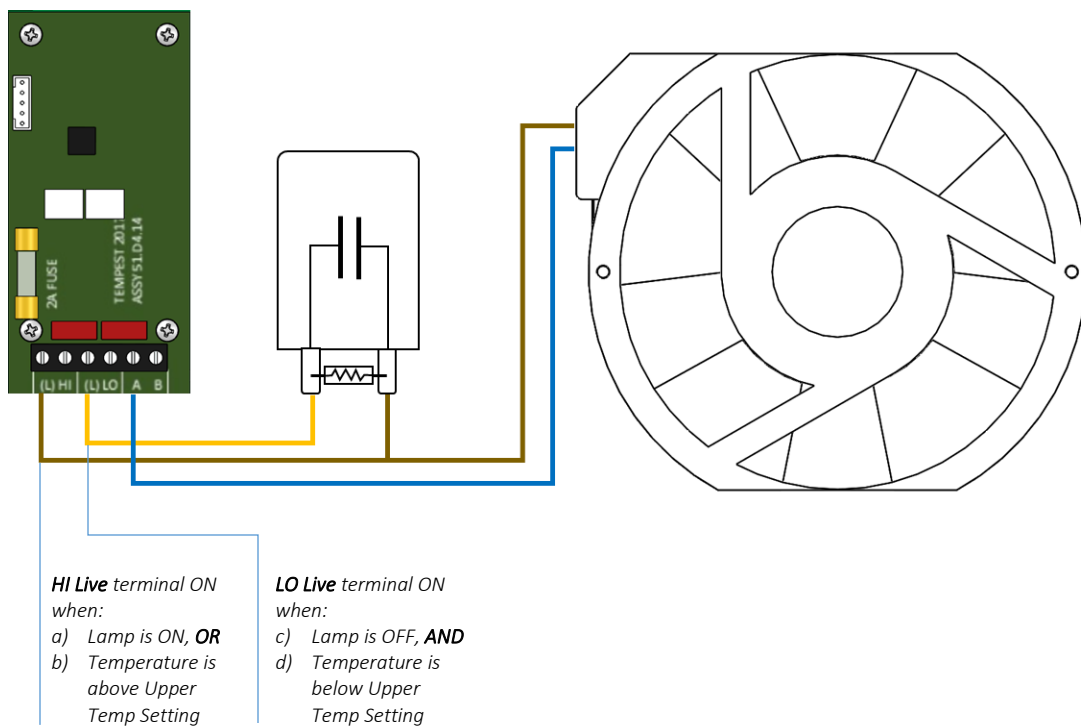

Cold Weather Operation


In areas where extremely cold weather operation is required, use the following settings (FW Versions 2.05.000 and up).

User Interface Operation

To UNLOCK, hold **ESC** and **OK** together for **5 seconds**.

- You are now in the CONTROL MENU
- Use **↑↓** to scroll up and down the menu.
- Press **OK** to enter a menu item
- Use **↑↓** to set the item parameter, or to scroll to the next menu level.
- Use **ESC** to go BACK, or **OK** to confirm settings (**↵**).
- To exit and LOCK, hold **ESC** for 5 seconds.

Menu will time out and the display will lock after ten minutes.

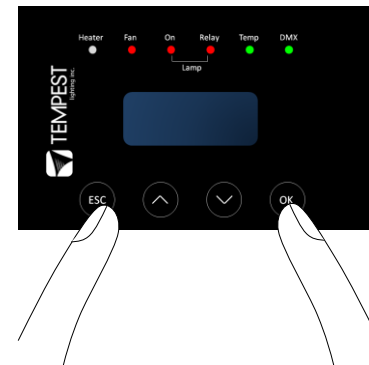

1. Set Lower Temperature

This is the minimum temperature inside the enclosure that the DEC will attempt to maintain.

Scroll to: **SET TEMP RANGES**

Scroll to: **SET TEMP LOWER**

↑↓ to select minimum temp (range 0-10C, default 10C)

2. Set Fan Minimum Duty

Minimum Duty Cycle setting is used in cold weather. If the actual temperature < TEMP LOWER setting, AND the projector lamp is ON, the fan will pulse under thermostatic control to attempt to maintain an internal temperature at or above TEMP LOWER. The MIN DUTY setting is the slowest fan speed.

Scroll to: **SET FAN FUNCTION**

Scroll to: **SET FAN MIN DUTY**

↑↓ to select minimum duty cycle
(range 10-100%, default 100%)

3. Enable Heat with Projector Lamp On

In normal conditions the heater will ALWAYS be disabled when the system detects the LAMP ON POINT is reached (ie: projector comes out of standby). So default is HEATER OFF at LAMP ON.

For cold weather operation (temperature < TEMP LOWER setting), the heater may operate when the lamp is on, by setting a higher current at which the heater is disabled. This may also be calculated to prevent the heater overloading the supply circuit. For this purpose, assume that the heater will draw 5 Amps.

Scroll to: **SET LAMP OPTIONS**

Scroll to: **SET LAMP HEAT OFF**

Default is: HEAT OFF Lamp On

↑↓ to toggle HEAT OFF Amps: 05


↑↓ (range 00 – 15, default 05)

Example: 16A power circuit, set to 11A (16-5 = 11)


Digital Enclosure Control

DEC4™ – that's Digital Enclosure Control, fourth Generation – is the brain of your Tempest enclosure. It will maintain the internal environment in a comfortable temperature and humidity range, and prevent condensation – the real killer of outdoor equipment. DEC4 monitors internal and external temperature, humidity and lamp current at all times, and uses this information to control the enclosure's lamp relay, fan(s) and heater(s). It can report back over an RS485 network, using the RDM protocol (Remote Device Management), or connect to your TCP/IP network for remote monitoring and management using Tempest's TEMP protocol.

Typical DEC4 configuration, with Motherboard, fan control board and RS485 comms board

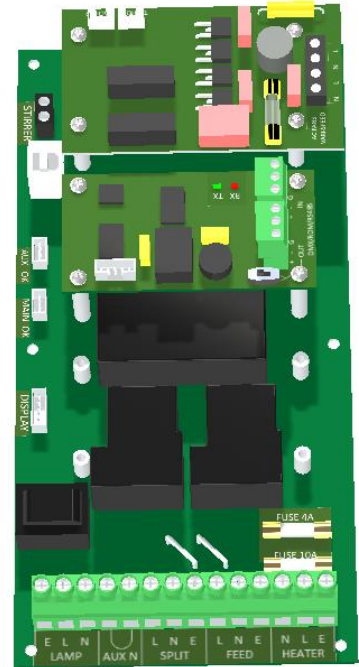

Schematic

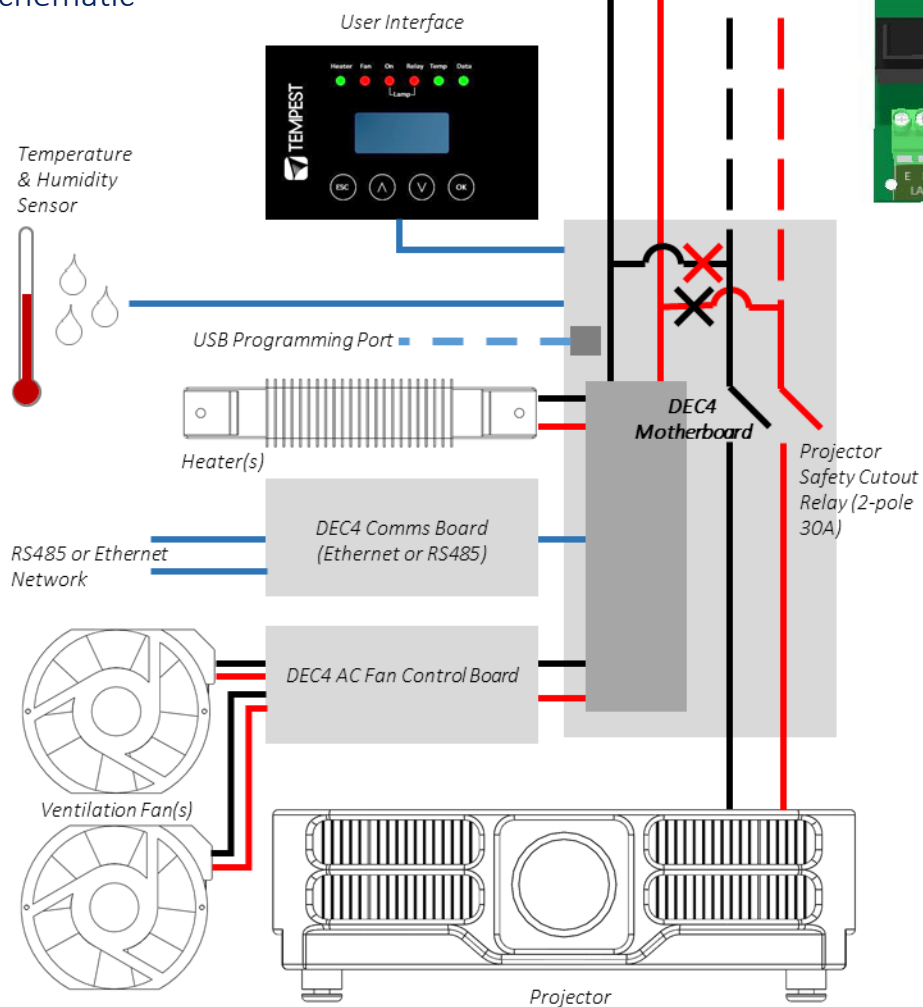

DEC4 Main Functions

Firmware Revision

This manual covers DEC4 Firmware revision 2.03.000 and higher.

To check the Firmware revision, on the User Interface menu, go to Status Display/Firmware.

1. Sense current to projector (lamp on/off)
2. Record lamp hours
3. Monitor temperature and relative humidity inside Enclosure
4. Monitor temperature outside enclosure
5. Maintain internal temperature at safe operating level
6. Maintain relative humidity within safe limits to prevent condensation
7. Isolate projector in case of unsafe temperature
8. Report status over RS485, RDM, TCP/IP
9. Maintain positive pressure (optional) 24/7 to prevent ingress of salt air and other contaminants through the exhaust path
10. Circulates air internally to prevent hot and cold spots when projector is idle

DEC4's patented Goldilocks™ algorithm uses a combination of sensors, heaters and fans to maintain a safe operating temperature and a safe relative humidity level that will not allow condensation to take place.

As air is heated it is able to support more moisture without condensing, so Goldilocks uses heat to raise the air temperature inside the enclosure in the event that relative humidity approaches dewpoint.

DEC4 constantly monitors the following parameters:

- Projector/Luminaire current
- Line Voltage
- External Temperature
- Internal Temperature
- Internal Relative Humidity


Factory Settings – Data Modes

In most applications, DEC4 will operate correctly with its factory default settings, in Basic operating mode.


You do not need to do anything. Please skip to the next section.

- Standard default temperature and humidity settings
- DMX, RDM and Remote Monitoring disabled
- Best for standalone operation

If your needs are more complex, read on.

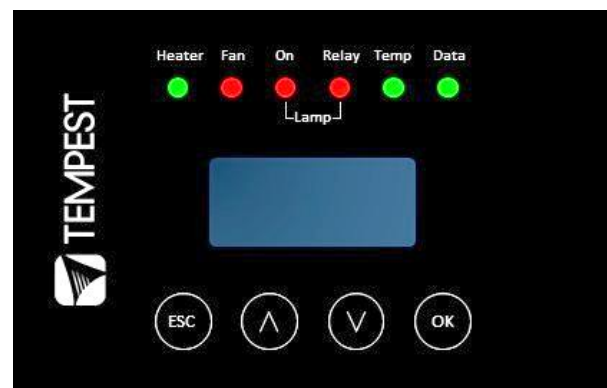

Hardware Indicators & Fuses

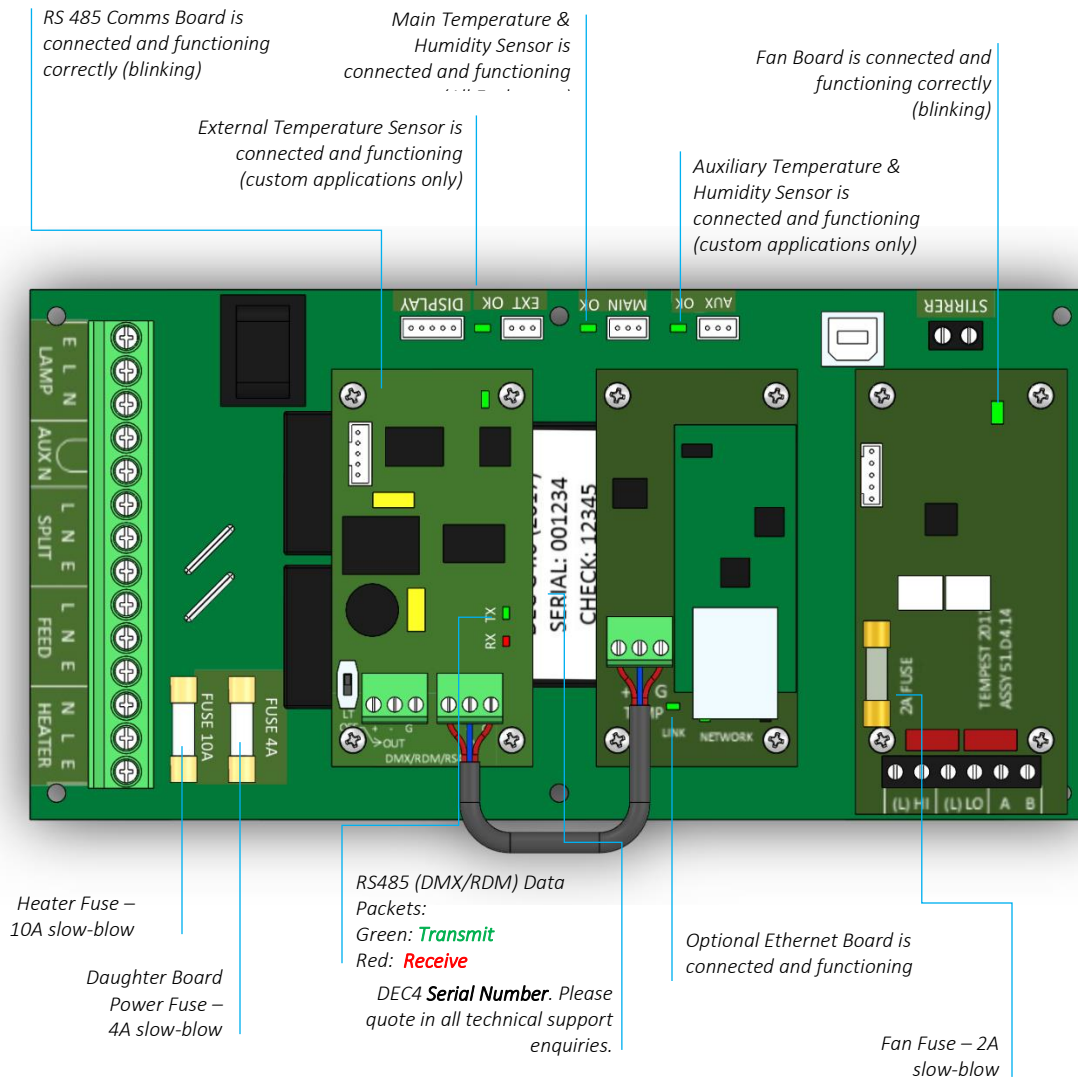

Operating Modes

RDM Only Monitor (Factory Default)

- Supports RDM monitoring over RS485 if present
- Supports TEMP monitoring if present
- RDM Status Reporting over RS485
- RDM Configuration – settings may be changed remotely or at the enclosure user interface.
- No DMX control

RDM+DMX Control

- Enclosure functions as a 1-channel DMX device, with remote control of the lamp relay
 - DMX level > 75% enables normal relay operation (normally ON)
 - DMX level < 25% disables normal relay operation (relay turns OFF)
 - This allows you to force a hard reset of the lamp relay in the event of a projector malfunction
- RDM Status Reporting over RS485
- RDM Configuration – settings may be changed remotely or at the enclosure user interface.
- Control mode is recommended for show control applications, but can be risky in live show operation, since the DMX slot used for the enclosure MUST be kept high to prevent the lamp relay from opening.


RDM+DMX Service

For trained service personnel only

- Normal operation is suspended and the enclosure functions as a 3-channel DMX device:
 - Lamp Relay (Slot 1)
 - Fans (Slot 2)
 - Heater (Slot 3)
- RDM Status Reporting over RS485
- RDM Configuration – settings may be changed remotely or at the enclosure user interface.
- ***Service mode is ONLY for troubleshooting – DO NOT use Service mode for normal operation.***

DEC4 Control Parameters

Temperature and Humidity Ranges

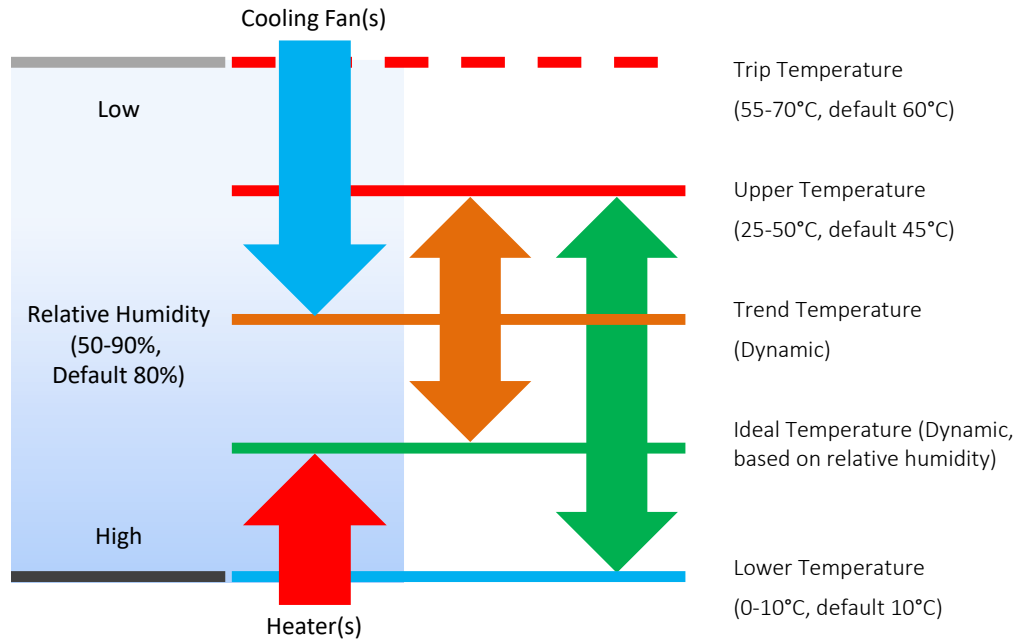


Notes:

- 1 In moving light enclosures the temperature sensor is located in the exhaust airflow. Temperatures shown may be higher than those around the projector.
- 2 We recommend using the factory default settings for several weeks or months before making any changes. In most cases they will not be necessary.

Control Interface

LED Indicators

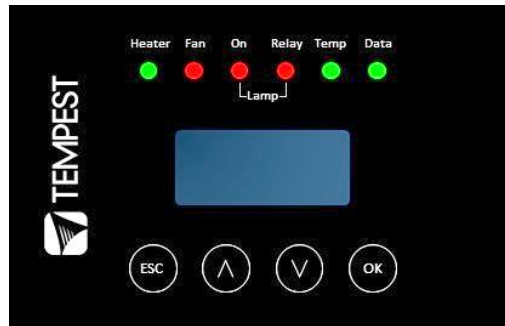

Heater	ON (Green)	Heater is ON, to maintain lower temperature level or to prevent condensation
	ON (Amber)	Enclosure is temporarily outside the Goldilocks zone, and DEC is working to restore it
Fan	ON (Green)	Lamp is ON, or Temperature is HIGH and fan is cooling enclosure. OR: Lamp is OFF, and internal temperature \geq UPPER TEMP setting
	ON (Amber)	Fan should be ON, but no status response received. <i>Tacit and Zen systems: check the integrity of the yellow status fan wire.</i>
	ON (Red)	No fan detected at initialization. <i>Tacit and Zen systems, check that the yellow (status) and brown (PWM) wires are not crossed or disconnected.</i>
Lamp On	ON (Green)	Current sensing shows lamp is ON Lamp hour counter is running
	OFF	Current sensing shows lamp is OFF Lamp hour counter is not running
Lamp Relay	ON (Green)	Lamp relay is closed (normal) Projector power receptacle is energized
	ON (Red)	Lamp relay is open due to over-temperature event. Projector power receptacle is isolated.
Temp	FLASHING (Green)	Temperature is below lower temp setting
	ON (Green)	Temperature is in normal range
	ON (Amber)	Humidity is above target limit
	ON (Red)	Temperature is above top setting
	FLASHING (Red)	Temperature is above Trip level Projector power is isolated
Data	OFF	Data not used in present Mode. OR DEC4 is in RDM + DMX Control Mode and no valid data packet has been detected.
	ON (GREEN)	Good data packet received.
	ON (RED)	RDM + DMX Control Mode: Data Fail. A previously good data signal has failed.

User Interface LCD Display

The display on the Control display provides additional status information, depending on the operating mode:

RDM Only Monitor Mode

28 °C	47%	<i>internal temperature, relative humidity line voltage, lamp status</i>
209V	OFF	

RDM+DMX Control Mode RDM+DMX Service Mode

28 °C	47%	<i>internal temperature, relative humidity line voltage, lamp status</i>
209V	OFF	

Alternating with:

DMX: 001	<i>DMX Start Address DMX Status</i>
No DMX	


(Alternating DMX Display requires a DMX signal to be present)

Control Interface Operation

The Control Interface is normally LOCKED.

- To UNLOCK, hold **ESC** and **OK** together for **5 seconds**.
- You are now in the CONTROL MENU
- Use **↑↓** to scroll up and down the menu.
- Press **OK** to enter a menu item
- Use **↑↓** to set the item parameter, or to scroll to the next menu level.
- Use **ESC** to go BACK, or **OK** to confirm settings (**↵**).
- To exit and LOCK, hold **ESC** for 5 seconds.

Menu will time out and the display will lock after ten minutes.

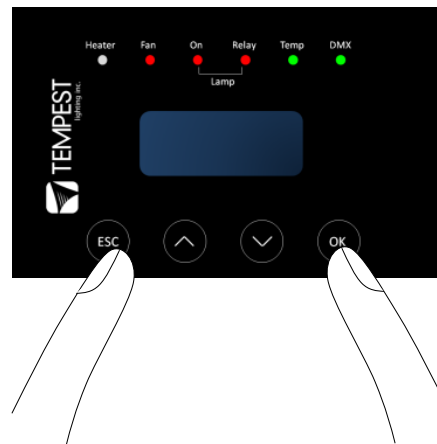

Control Menu

Set DMX Options

SET Data Mode

From the Front Panel, this menu item allows the user to check (and if necessary change) the Data mode.

RDM Only Monitor	DEFAULT	Supports RDM or TEMP if connected. No DMX Control.
RDM+DMX Service		Service mode – 3 DMX slots, starting with the DMX address set
		<i>Important: Please ensure that DEC4 is NOT left in Service Mode.</i>
RDM+DMX Control		DMX (set 1 address for lamp relay) plus RDM

SET DATA ADDRESS (in RDM Only Monitor, RDM+DMX Service or RDM+DMX Control Service modes)

Select a DMX starting address in the range 001 to 510

1 – Lamp Relay

In Service Mode an addition two slots are available

2 – Fan Duty Control

3 – Heater Duty Control

Note that the DMX control is designed using a SAFETY pile-on Logic. So the DMX input can only override automatic settings within safe limits.

SET DATA CURVE

DMX Curves affect the way the fixture relay is controlled in RDM+DMX Control Mode.

DMX levels are shown as %.

Response Curve 1 (default)

DMX level 0-25 Relay disabled (open)

DMX level 26-75 No change to relay status

DMX level 76-100 Relay enabled (normally closed)

Response Curve 2

DMX level 0-19 No change to relay status

DMX level 20-40 Relay disabled (open)

DMX level 41-59 No change to relay status

DMX level 60-80 Relay enabled (normally closed)

DMX level 81-100 No change to relay status

SET DATA RESPONSE

DMX Response sets a delay time before DMX Control Mode settings are acted on. Setting a response delay of a few seconds would prevent unintended fixture relay state changes in the event of a short accidental change in DMX level.

NOTE: from firmware revision 0.00.100, DEC holds last valid DMX level if DMX is interrupted.

Response Delay Values are:

No Delay (default), 1, 2, 5, 10, 15, 20, 30, 60 seconds.

Set Temp Units

Choose to display temperature values in Celsius or Fahrenheit (default Celsius)

Note that temperature settings must be entered in Celsius.

Set Temp Ranges

Set three temperature trigger points for Bottom, Top and Trip temperatures, in °C.

SET TEMP LOWER (minimum temperature to be maintained)

(default 10°C, permissible range 0-10°C).

SET TEMP UPPER (maximum desired daytime temperature)

(default 45°C, permissible range 25-50°C).

SET TEMP TRIP (temperature at which load will be isolated – see note)

(default 60°C, permissible range 55-70°C).

Note: A thermal emergency is when enclosure ventilation fails with the lamp on, in which case the temperature will rise very quickly. To avoid nuisance tripping we recommend setting a higher Trip temperature, 60°C or above.

Set Max Humidity

Sets highest desired Relative Humidity: Default 85%, permissible range 80-90%.

Note that, when the projector/luminaire lamp is OFF, the enclosure heaters will switch on to raise the temperature and lower the risk of condensation. We recommend setting the highest Max Humidity that works in your location, to avoid unnecessary heater use.

Set Lamp Options

SET LAMP ON POINT

The lamp current at which DEC detects the projector/luminaire lamp is running. Default is 1 Amp, which allows for most equipment fans and power supplies to run without changing the air in the enclosure. Lamp on point may be set in 0.1 Amp increments between 0.2 Amps and 2.0 Amps.

If the enclosure fans never turn off, the Lamp On point is probably set below the standby current draw of the projector/luminaire. Check the standby current draw on the display and set the Lamp on Current higher.

SET LAMP HEAT OFF

HEAT OFF – In normal conditions the heater will ALWAYS be disabled when the system detects the LAMP ON POINT is reached (ie: projector comes out of standby). So default is HEATER OFF at LAMP ON.

For cold weather operation (temperature < TEMP LOWER setting), the heater may operate when the lamp is on, by setting a higher current at which the heater is disabled. This may also be calculated to prevent the heater overloading the supply circuit. For this purpose, assume that the heater will draw 5 Amps.

Range: LAMP ON, 5 – 15A

Default: LAMP ON

Example: 16A power circuit, set to 11A (16-5 = 11)

RESET LAMP HOURS

Reset each time you change the lamp in the projector.

Make this a part of your maintenance instructions.

Set Fan Function

SET FAN TEST

To test the enclosure fan(s), press [OK]

The enclosure fan will run

The Display Fan LED lights green

DEC Beeps

To stop the fan test, press [ESC]

SET FAN TYPE ID (Tacit and Zen Enclosures)

For Tacit 050-150, choose Fan Type **220**

For Tacit 210 and higher, choose Fan Type **270** (*see also SET FAN MAX DUTY*)

For Zen 1xx, choose Fan Type **175**

For Zen 2xx, choose Fan Type **220**

For Zen 3xx – 5xx, choose Fan Type **270** (*see also SET FAN MAX DUTY*)

SET FAN RECOVERY (Tacit and Zen Enclosures)

Select a setting between 0 and 10, where 0 is fastest fan speed response and 10 is slowest.

SET FAN MAX DUTY (Tacit and Zen Enclosures)

This limits maximum speed of PWM-controlled fans. **If fan type 270 is used, MAX DUTY Should be set to 80%.**

Range: 50-100%

Default: 100%

SET FAN MIN DUTY

Tacit and Zen Enclosures (with PWM-controlled DC Fans):

In effect this is the fan speed setting. the actual range varies for each fan type:

Start with a moderate MDC value – say 60.

Test the projector, with the enclosure closed, and monitor the projector inlet temperature over the projector control system.

If the projector is running HOT, INCREASE the MDC level

If the projector is running COOL, DECREASE the MDC level

The aim is to find the sweet spot where the projector is running at an acceptable temperature over long periods, and the blower speed is no higher than necessary, to minimize power consumption and noise level.

All Other Enclosure Types (with AC Fans)

Minimum Duty Cycle setting is used in cold weather. If the actual temperature < TEMP LOWER setting, AND the projector lamp is ON, the fan will pulse under thermostatic control to attempt to maintain an internal temperature at or above TEMP LOWER. The MIN DUTY setting is the slowest fan speed.

Range: 10-100%

Default: 100%

In cold environments, set a low MDC to prevent the enclosure filling with cold air as soon as the projector lamp turns on.

SET FAN RUN ON

Time the fan will run after system detects LAMP OFF (cooldown).

Range: 5 – 15 minutes

Default: 5 minutes

Status Display

View current status information, using the arrow keys to scroll through:

- a) Humidity – relative humidity in %
- b) Internal temperature, in degrees C or F
- c) External Temperature (custom enclosures with external temperature sensors only)
- d) PCB temperature (this will usually be significantly higher than air temperature)
- e) Voltage – line Voltage reaching the DEC
- f) Current being drawn by projector/light, in Amps

- g) Lamp Hours elapsed since last reset
- h) Firmware version
- i) UID – unique system ID number

Safe Mode

In certain circumstances, the DEC User Interface may display the message SAFE MODE. This can happen if the Humidity sensor stops reporting, or reports an extreme value, indicating the probability of a sensor error. This situation may arise either because of a faulty sensor* or in conditions of extremely high absolute humidity.



In SAFE MODE, the normal operation is temporarily suspended, and the enclosure works to return the internal environment to a condition from which normal operation may be resumed.


SAFE MODE is SAFE! It indicates that attention may be needed, but not that your equipment is at risk

Safe Mode and Sensors

** Some of the temperature/humidity sensors shipped before mid-2017 have had a limited operational life in harsher conditions. Tempest has since developed a new class of capacitive sensor that is far more resilient, especially in demanding conditions.*


The newer sensors (2018-21) have:

- a) A piece of green tape on the sensor cable
- And
- b) TEMPEST logo on the plastic sensor case

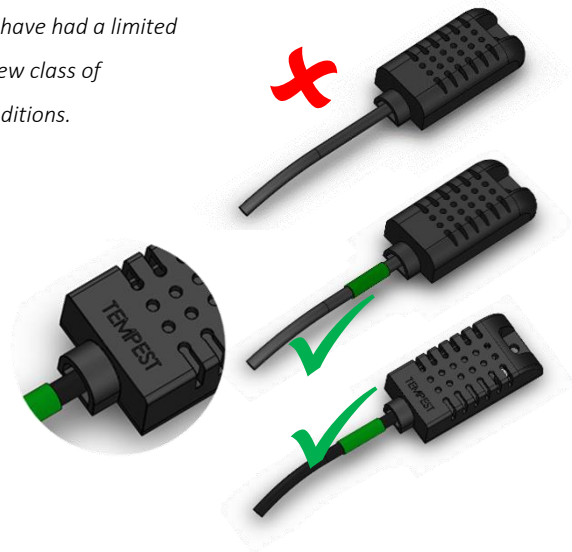

OR (from 2022):


- c) A blue tape at the connector end of the cable
- And
- d) A serial number/date code label

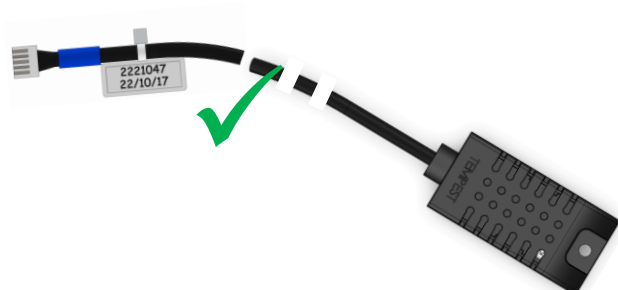


Safe Mode – What to do:

If you see **SAFE MODE** on your User Interface Display:


1. Check the temperature/humidity sensor:
 - a. Check that the sensor cable is not damaged and that it is plugged in to the header on the DEC Mother board labeled MAIN. The OK status LED should be lit.

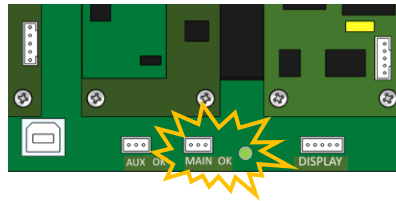

- b. If the sensor cable does NOT have a date code/serial number next to the plug, contact Tempest for a free-of-charge replacement. If you have more than one enclosure, we suggest replacing the sensors on ALL your enclosures.

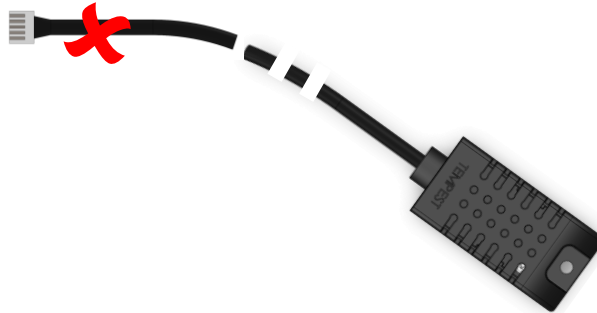

- c. Check the actual climate conditions – could the absolute humidity be close to 100%? If it is, SAFE MODE is operating correctly, and all is well.

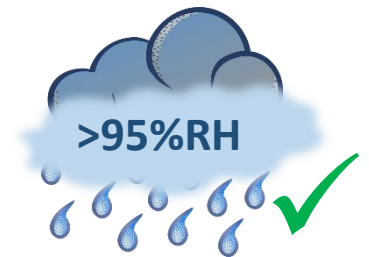

DEC4 Firmware Updates

From time to time Tempest may introduce new DEC4 firmware for feature enhancements and bug fixes. Please note that the main System Control Board (SCB) and the various optional daughter boards each have their own firmware, and it will be good practice to update all firmware in an enclosure for optimal performance and interoperability.

- System Control Board firmware may be updated DIRECTLY using JESE JUST software and a USB cable, or INDIRECTLY, over an RDM network, using JESE GetSet software and a JESE RDM-TRI interface.
- Fan board firmware is extremely simple and is unlikely to require updating.
- RS485 Board (51.485) firmware may be updated over an RDM network, using JESE GetSet software and a JESE RDM-TRI interface.

All required files are available for download at <https://www.tempest.biz/tech-support/>

Direct Firmware Update (System Control Board only)

Requirements

Windows Laptop / PC, Windows XP through Windows 10 A standard USB A to B cable



Latest version of JUST application (download from <https://www.tempest.biz/tech-support/>)

A copy of the firmware file to upload (download from <https://www.tempest.biz/tech-support/>)


Powered Target DEC4 SCB

Preliminaries


1. Power up the target DEC4 System Control Board and connect the USB Port to the PC or laptop.



2. If not already installed, install the latest version of JUST. **IMPORTANT: If this is the first time using JUST, the PC MUST be connected to a live System Control Board for the installation to complete correctly.**

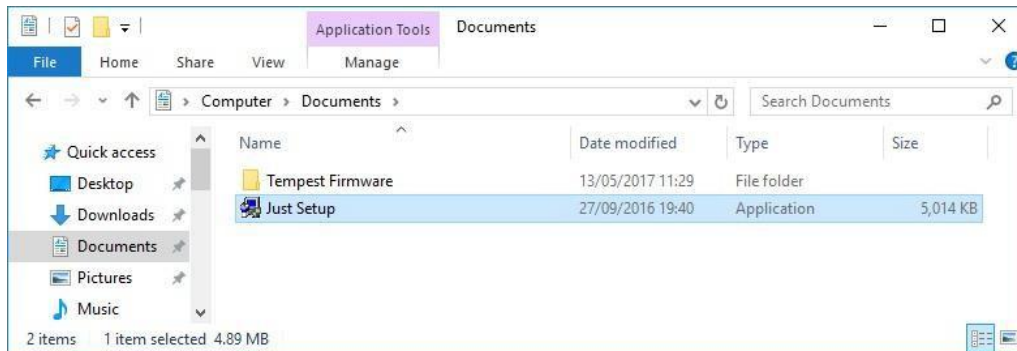


3. Run JUST and select the top left USB connection Icon. Select the DEC4 from the Connection Details option and click the connect/plug icon. Having connected, close the connection window.

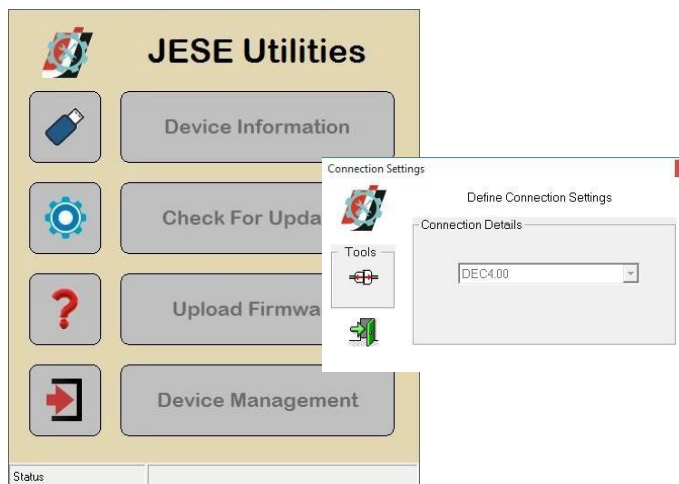


4. From the main window, select the 'Upload Firmware' option. Select the file icon and navigate to the firmware file to upload



5. On selection, the firmware upload will begin and run until complete.

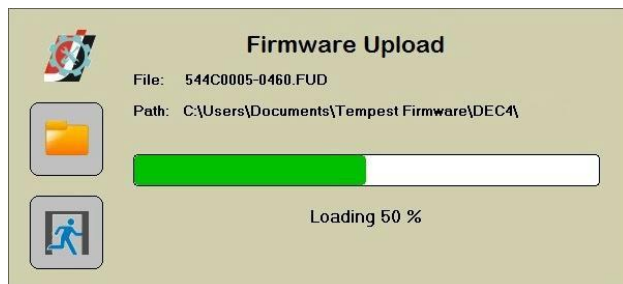

6. On completion of the upload, dismiss the upload window and return to the main window.

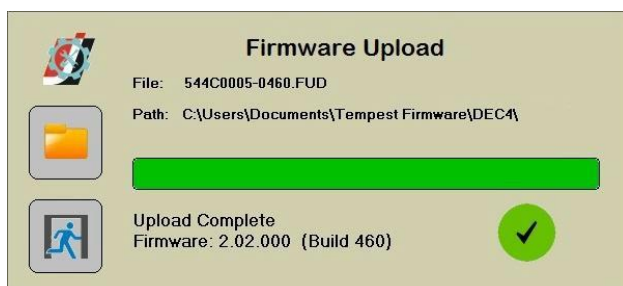

7. The details of the SCB and firmware version may be viewed and verified by selecting the 'Device Information' option



8. Close the application and disconnect the USB Cable from the SCB

- END -

Indirect Firmware Updates

Requirements

Windows Laptop / PC, Windows XP through Windows 10

A JESE RDM-TRI or RDM-TXI interface and USB connection (available from Tempest).


An installed version of the JESE GetSet RDM configuration utility.

A copy of the firmware file(s) to upload, available for download from www.tempest.biz/tech_support.


Powered Target DEC4 with 51.485 RS485 communication interface card.

Installation Procedure


1. If not already installed, install a copy of GetSet. *To ensure that the correct USB drivers are loaded, the software should be installed and the PC/Laptop re-started before connection to an RDM-TRI.*
2. If using an Asian character set, go to control panel and select Region and Language. Ensure input locale for non Unicode programs is set to a non Asian language

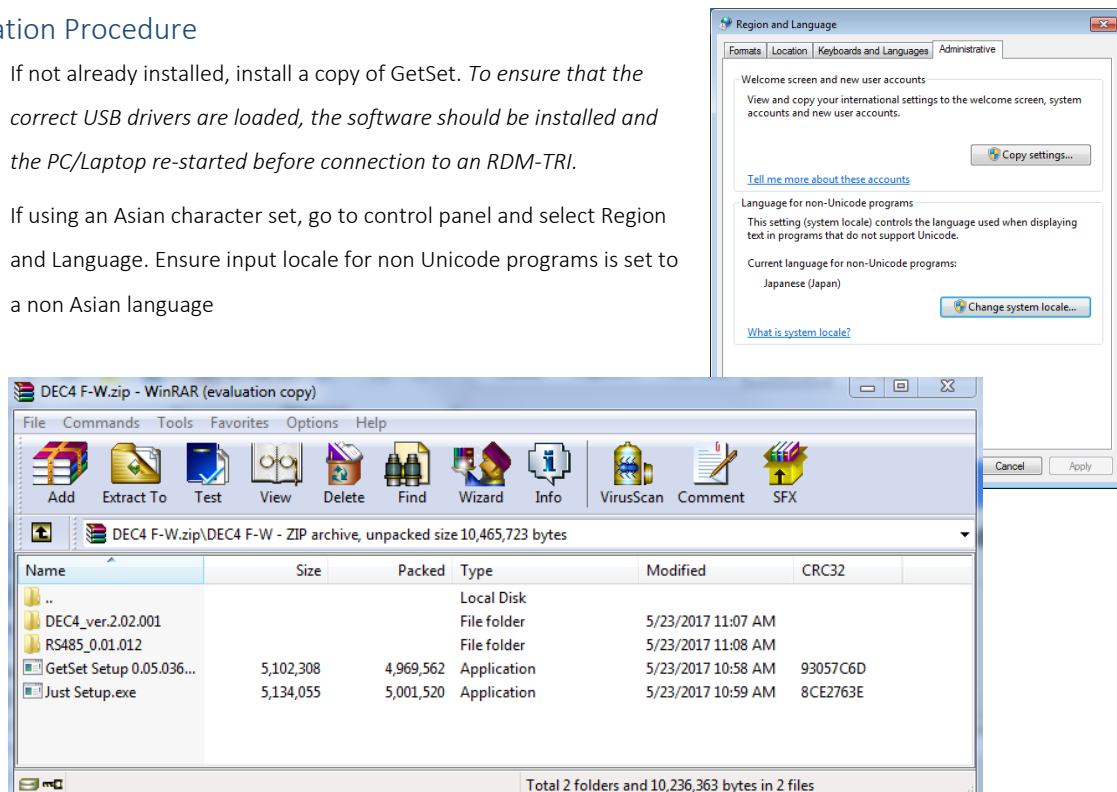

3. Plug your RDM-TRI in to your PC and connect to the RS485 connection on the DEC4 communications board with the fly lead, as shown below.

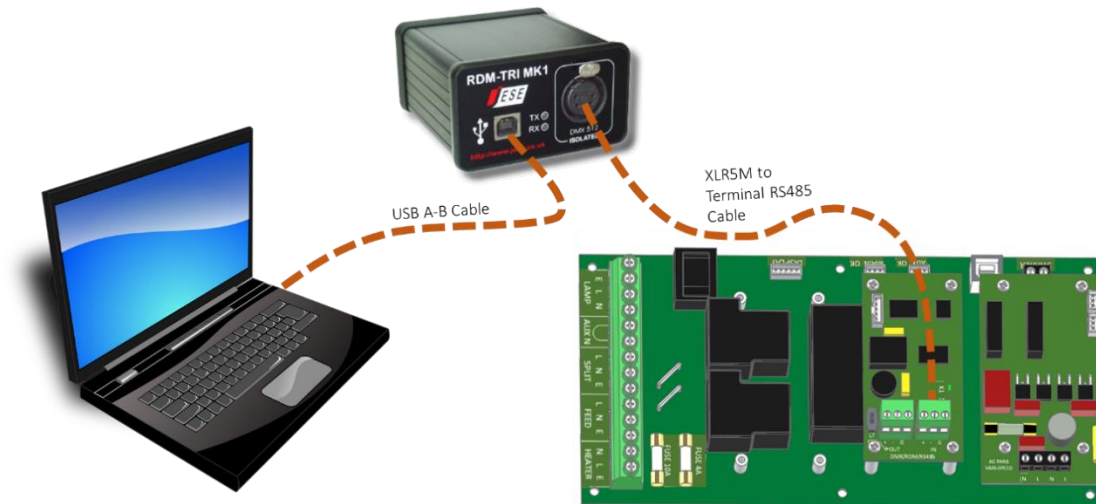


4. Power up the target SCB, ideally with mains power, or alternatively, with a USB power adaptor connected to the USB Port on the SCB.

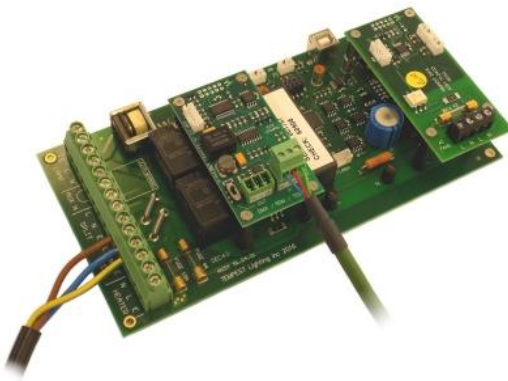


5. On older revisions of DEC Firmware, if the elected DEC 'DATA MODE' is set to 'RS485 TEMP', select 'RDM MONITOR' mode using the DEC user display. On more recent revisions of Firmware, the appropriate mode will be automatically selected.
6. Open the GetSet application, connect to the RDM-TRI and discover the DEC. To run discovery, click the Icon indicated below


7. Right click on the highlighted item in the list view and select 'Reprogram' from the popup menu. This will open the firmware upload tool.

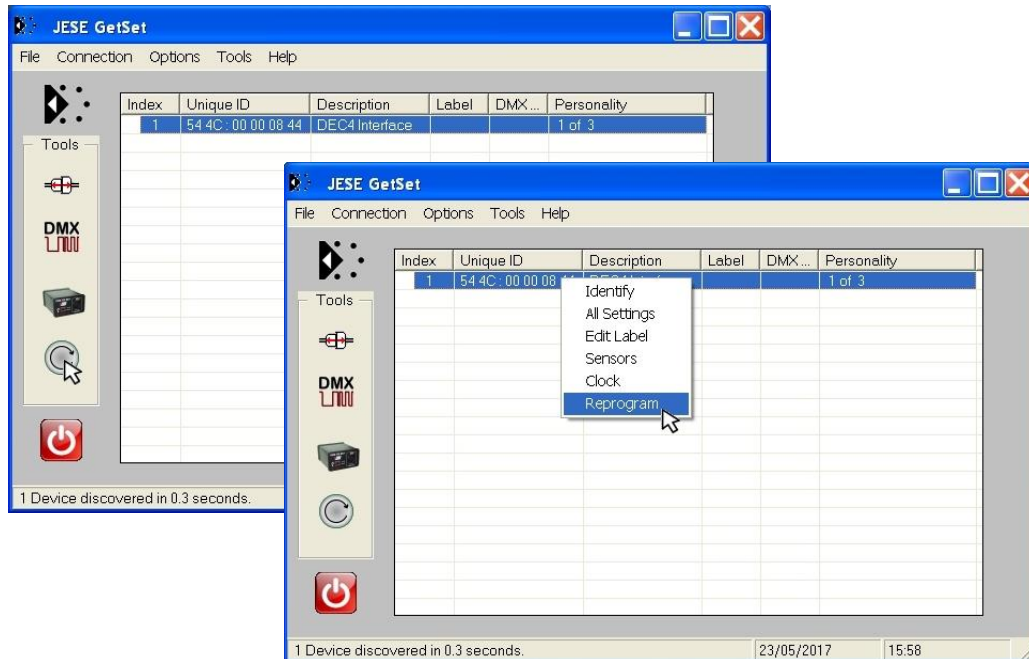


8. In the Firmware upload handler, search for a file to upload by clicking the file icon. Find and select the file to load and click the Open button.

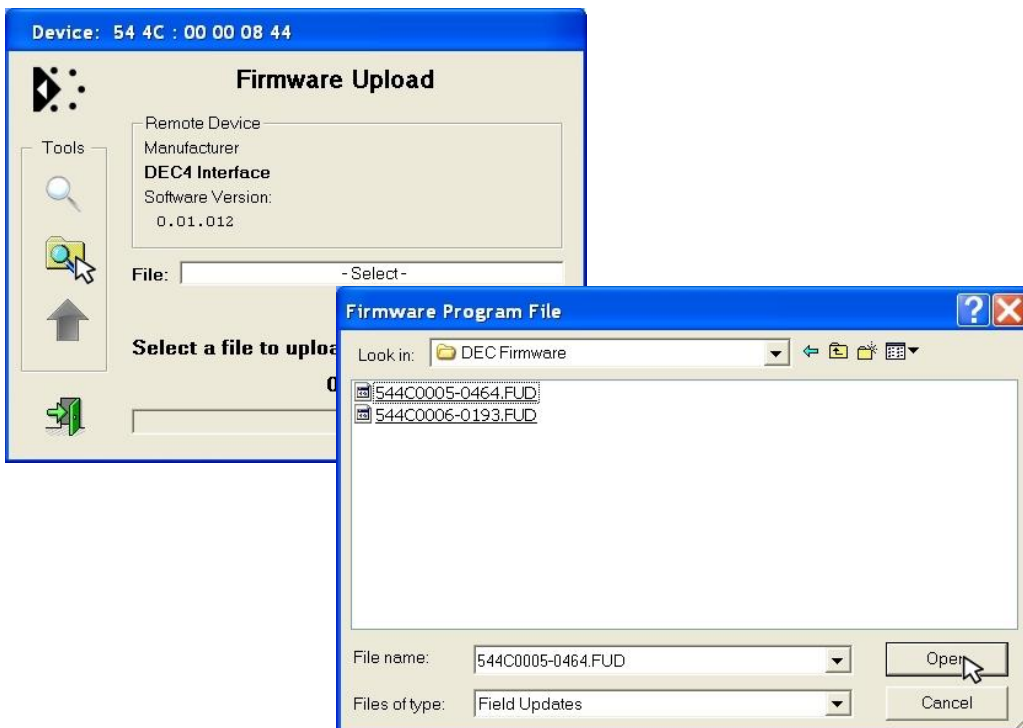

9. On returning to the File upload tool window, select the green upload arrow to initiate the upload process. The upload will then start.

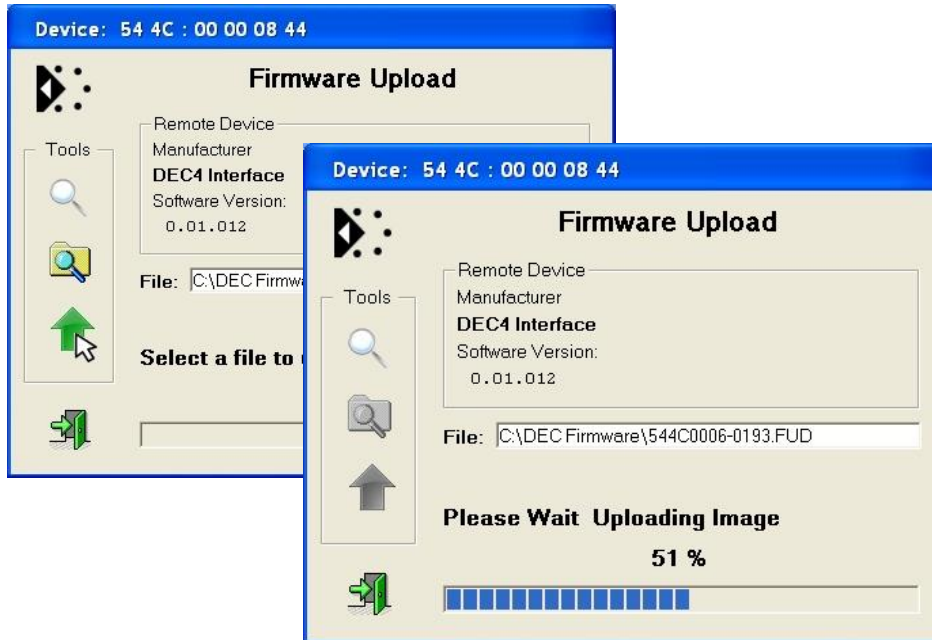

10. On successful completion of upload and restart, the firmware upload is complete.

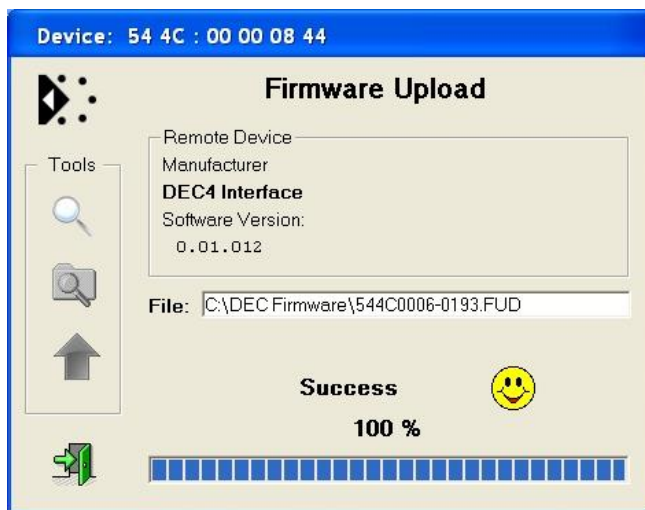

Repeat from stage 8 to 11 for each additional file to upload.

On completion of the upload, dismiss the upload window and return to the main window.

Close the application and disconnect the USB Cable from the SCB



Important:

If the Tempest enclosures are connected to an RDM interface or controller, set the DATA MODE for each enclosure as follows:

RDM MONITOR ONLY To view status information over RDM

RDM + CONTROL To monitor and over RDM and control the Lamp/Projector relays via DMX

If the enclosures are connected to an Ethernet network for monitoring using TEMP (Tempest Equipment Management Protocol) then the appropriate mode is RDM MONITOR ONLY.

Mounting the Projector

Projector Mounting - Landscape


Pull out the projector tray and place the projector in position.

Align the projector, including any adjustment of the projector feet.

Place one projector clamp around each of the projector feet.

Use the carriage bolts, washers and nuts provided to secure the clamps to the tray.

Tip: if you need to remove the projector for service, remove the two clamps nearest you, leaving the opposite clamps in place. When you replace the projector it will be in the same location as before.

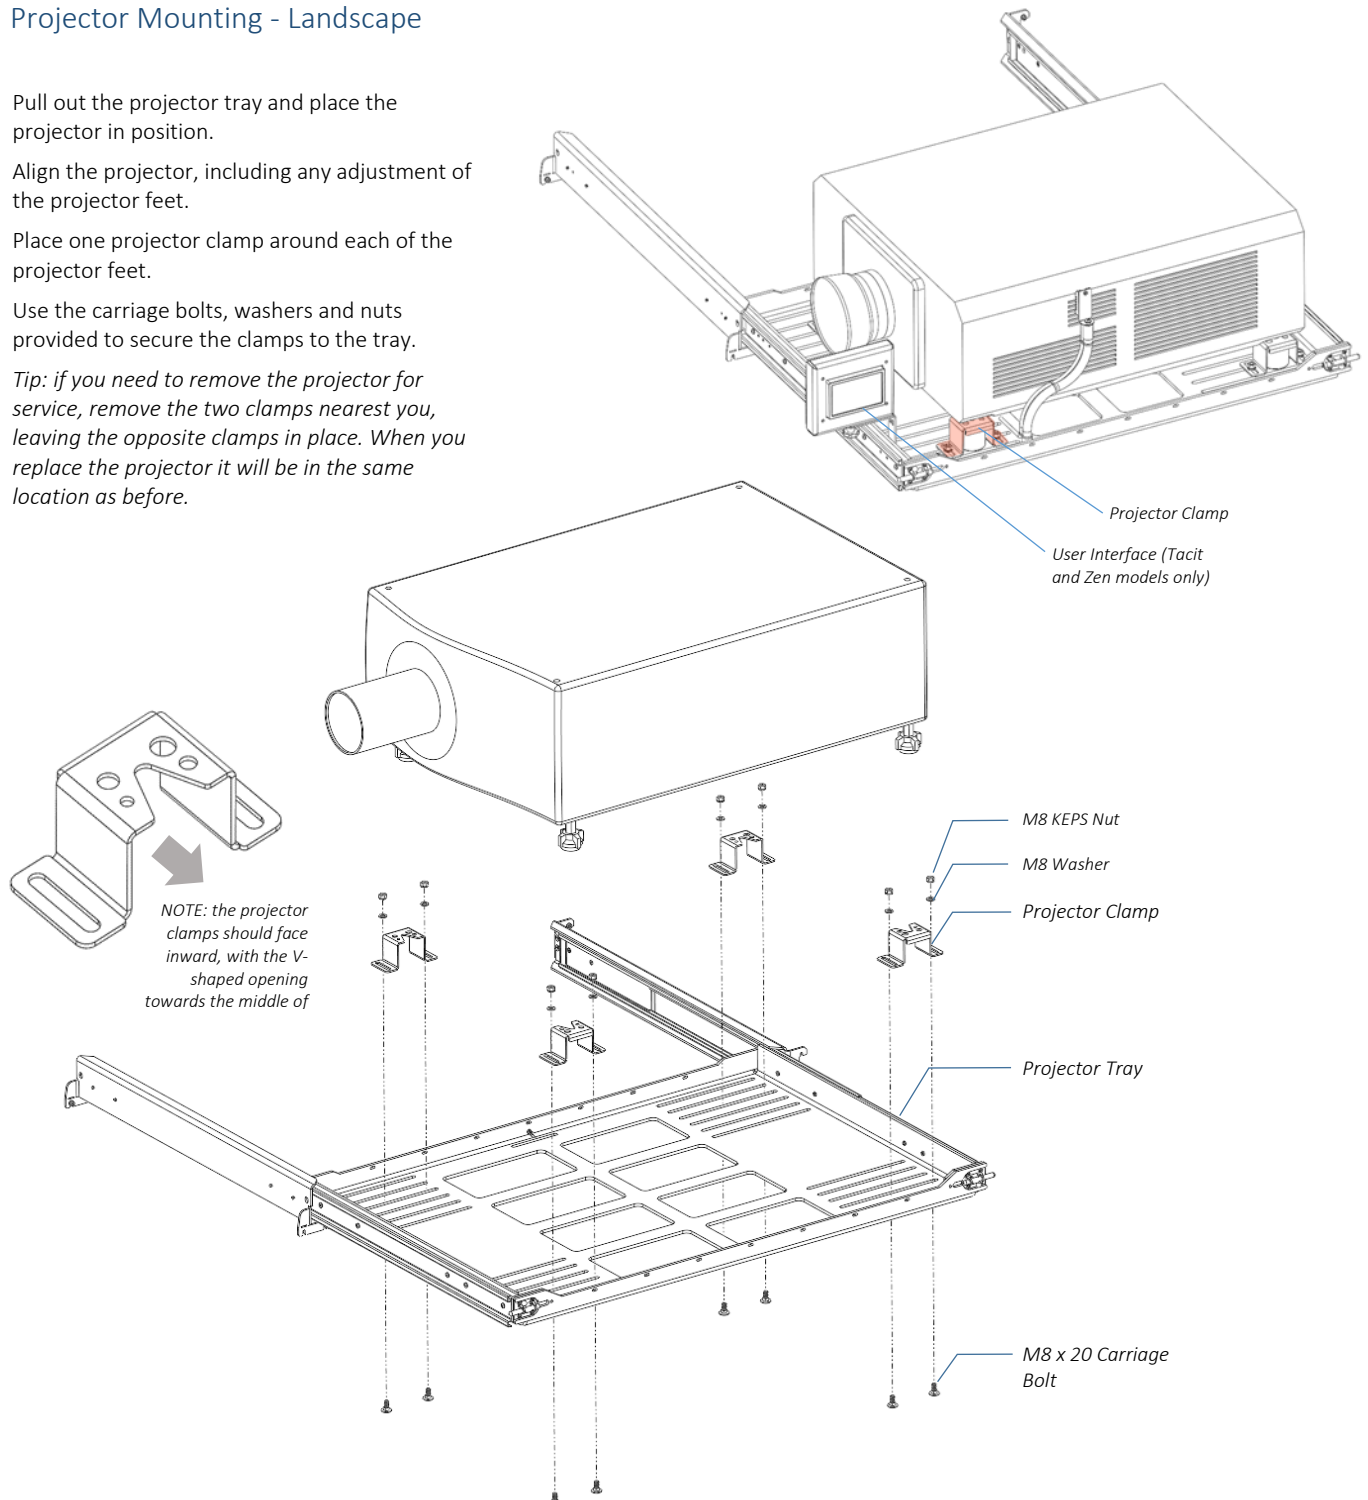

Projector Mounting – Landscape, Feet-up

You may specify Cyclone enclosures for feet-up (ceiling-style) projector mounting. In this case the sliding tray is mounted under the enclosure top cover, and the projector hangs from the tray.

You can secure the projector tray, using the same projector clamps, in two ways:



Recommended – fixed, but no projector feet adjustment:

1. Remove the projector feet
2. Replace each foot with one projector clamp, and an appropriate bolt (usually M10 or M12)
3. Note that each clamp has a clearance hole for M6, M8, M10 and M12 threads
4. Bolt the four projector clamps to the projector tray, using the eight M8 carriage bolts, washers and nuts provided

With feet adjustment:

1. Leave the projector feet in place and mount the projector in the same way as shown above (landscape, feet down).
2. Now, the projector feet are hanging inside the projector clamps, and you may adjust the feet for tilt and roll adjustment.

IMPORTANT: In this case, the V-shaped openings in the projector clamps **MUST** face inwards, or the projector may fall, causing damage and potential injury. User is responsible for any such damage caused.

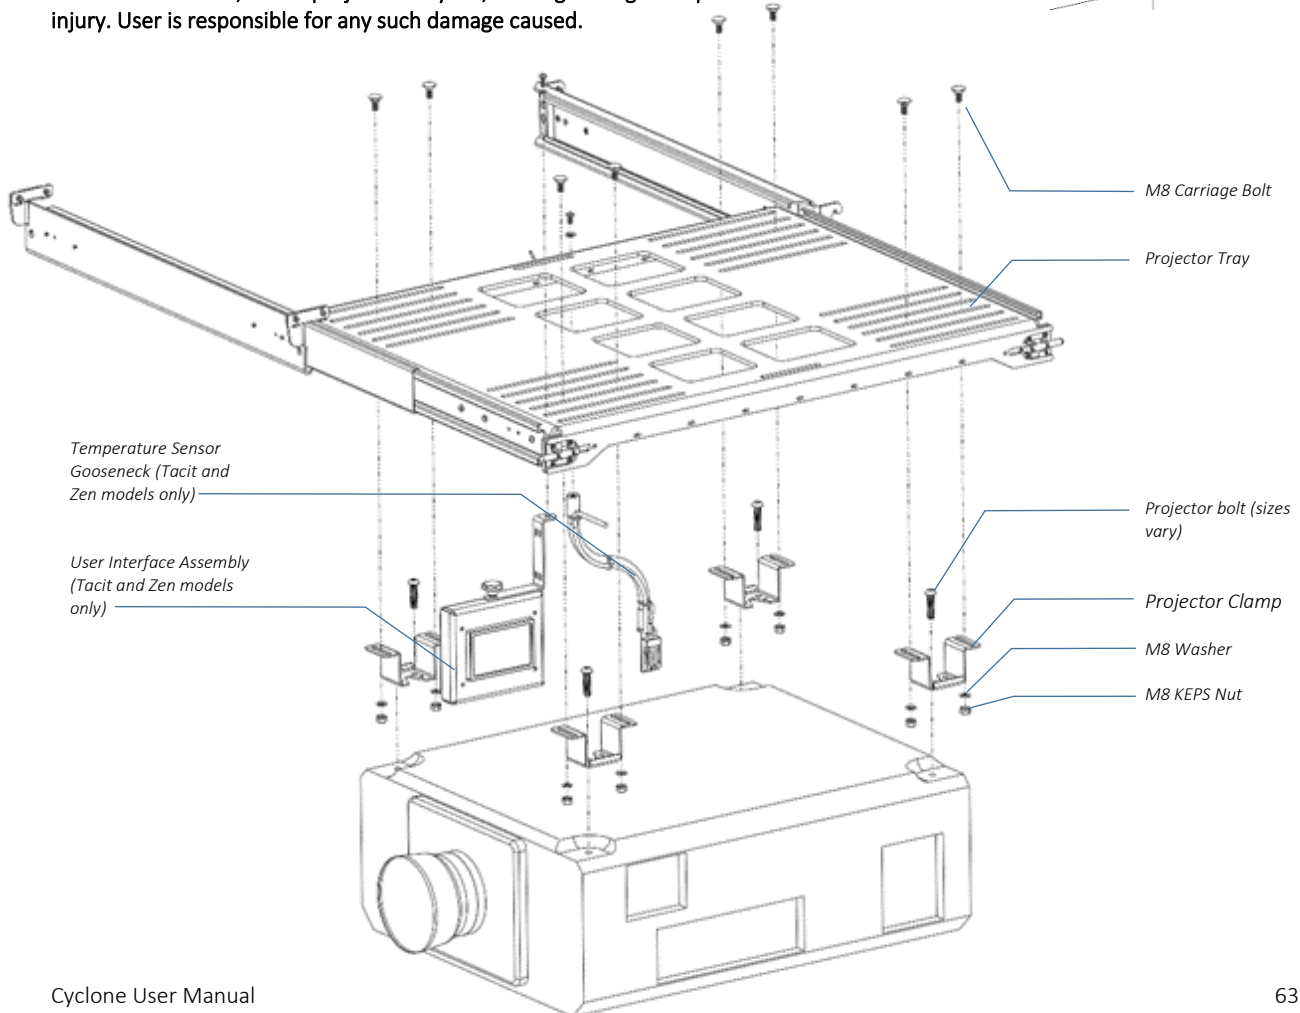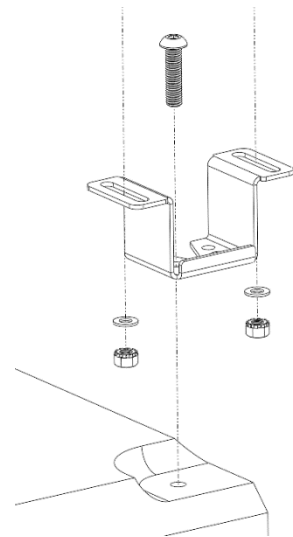


Projector Mounting – Portrait/8 rigging points

This mounting style is for projectors with a rigging point at each corner of the projector chassis (mainly larger Christie projectors). The portrait mounting kit allows horizontal mounting and tilt up to 6 degrees up or down.



IMPORTANT:

Projectors with air inlets on the side of the projector chassis: The inlet side **MUST** face down, for optimal airflow.

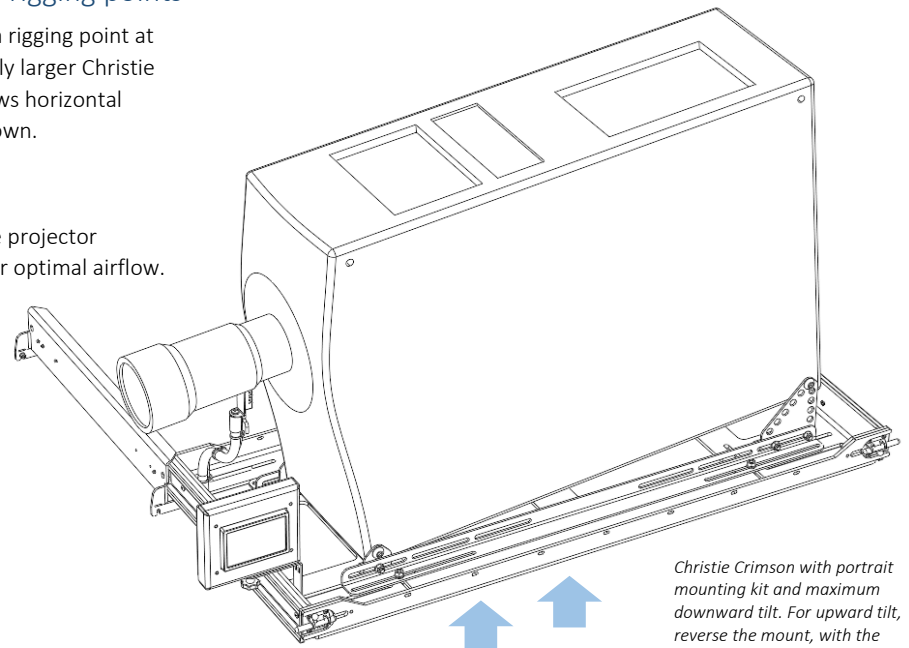


Christie Crimson with portrait mounting kit and maximum downward tilt. For upward tilt, reverse the mount, with the triangular plate at the front.

Side air inlets?
Make sure they face **DOWN**

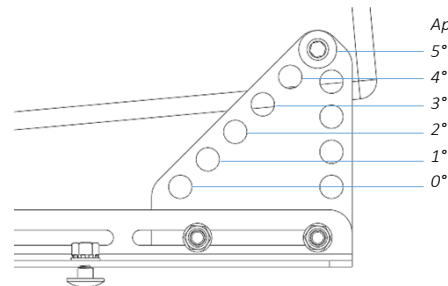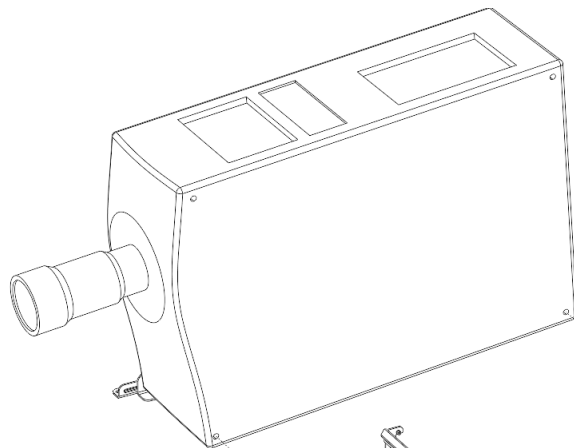

Approximate Tilt Angles:

5°
4°
3°
2°
1°
0°

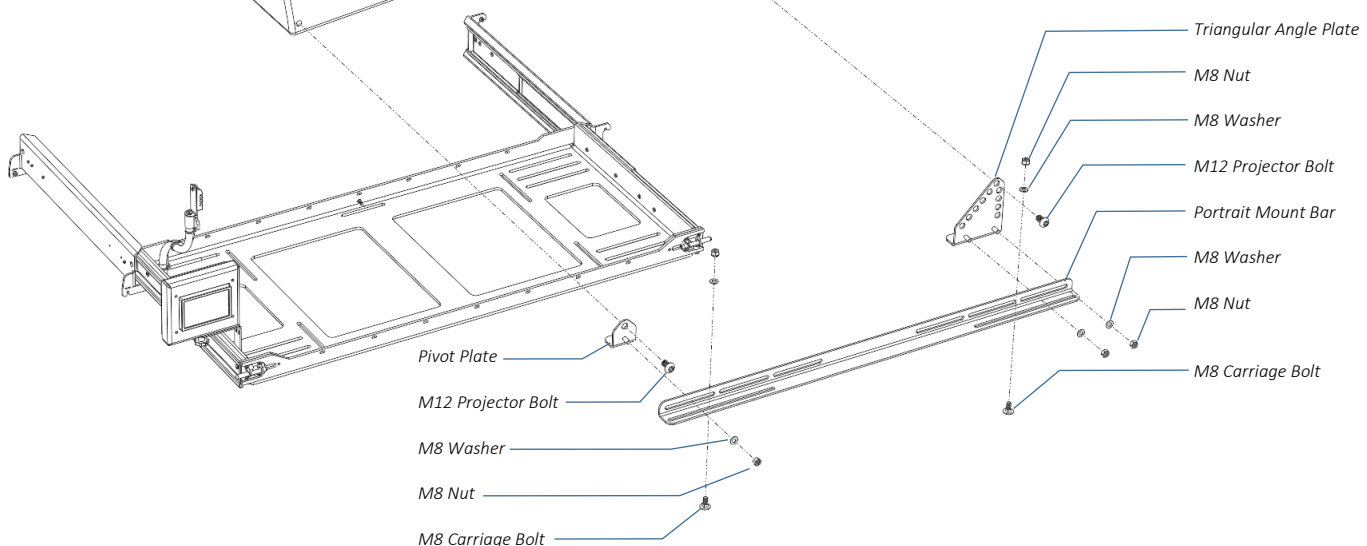


Projector Mounting – Portrait/4 rigging points

This mounting style is for projectors with no rigging points on top of the chassis (most projectors).

In all cases, first remove the projector feet, and use (usually M10) bolts to fix to the two Portrait mount L-Brackets.

IMPORTANT:

Projectors with air inlets on the side of the projector chassis: The inlet side **MUST** face down, for optimal airflow.

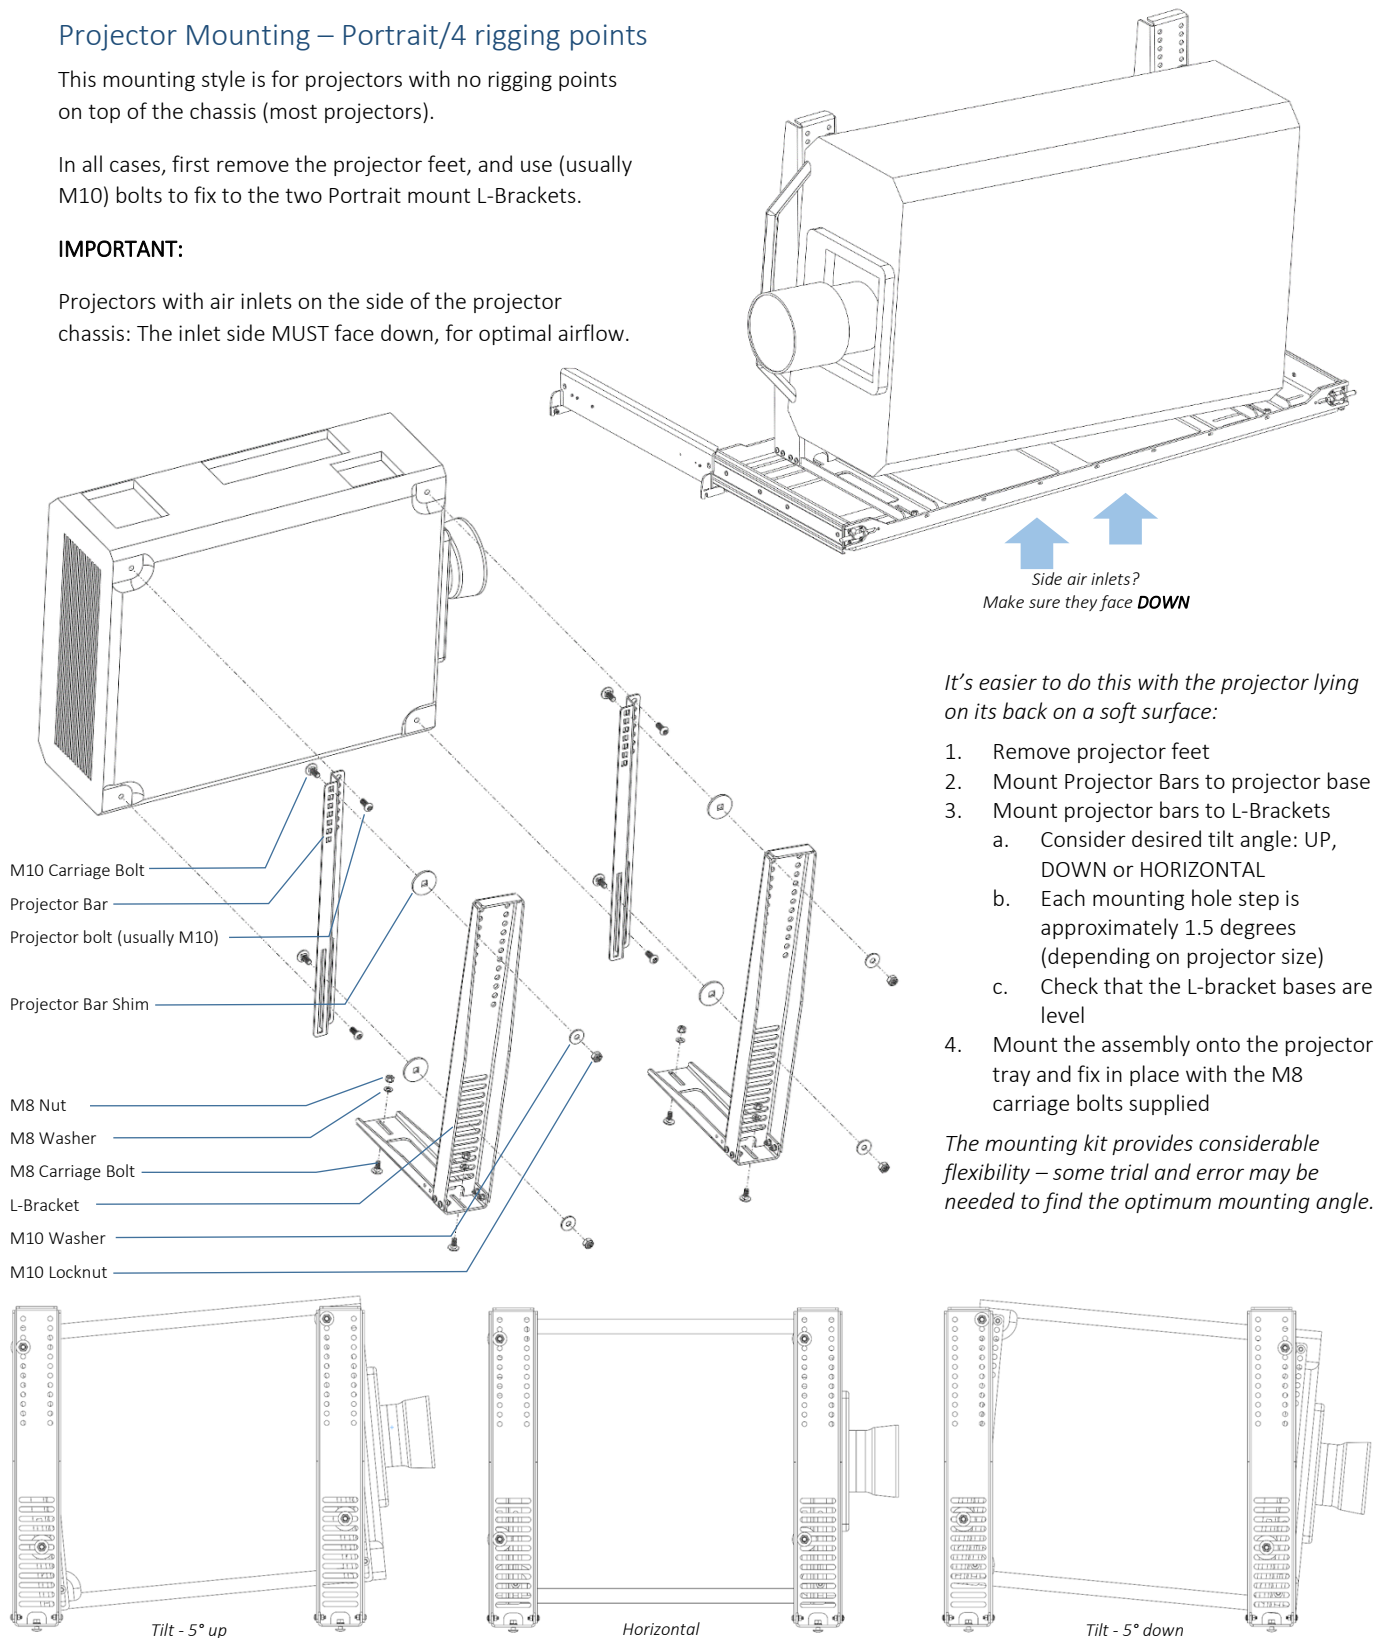

Projector-specific Mounting


All Cyclone enclosures are projector specific. Some projectors require special mounts and/or exhaust baffles. *Be sure to check for your projector in the Projector-specific information below.*

Christie D4K-40 RGB - Landscape

WARNING: This projector is HEAVY. You will need at least four people or a mechanical lifting device to install it in the enclosure. Do not attempt to lift the projector if in any doubt about your lifting capacity.



Tempest provides a special internal fan box to hang on the right side of the projector, to ensure delivery of adequate inlet airflow, required for landscape versions only.

Install the Fan box using the M12 screws provided, into the M12 threaded holes in the top of the projector, as shown here.

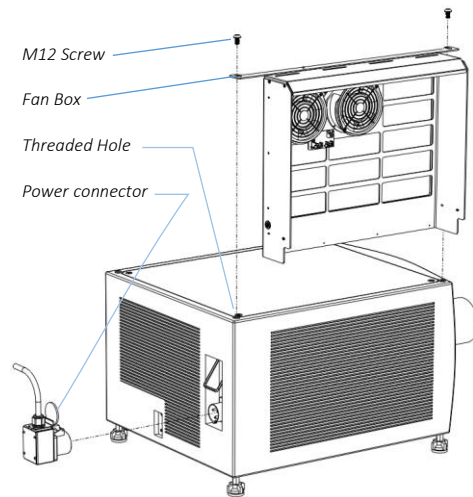

All D4K40 enclosures are supplied with a power pigtail with a 90-degree IEC309 female connector to mate to the projector power inlet.

Note: Locate the D4K40 projector feet in the round openings provided in the projector tray. This is important for optimal airflow.

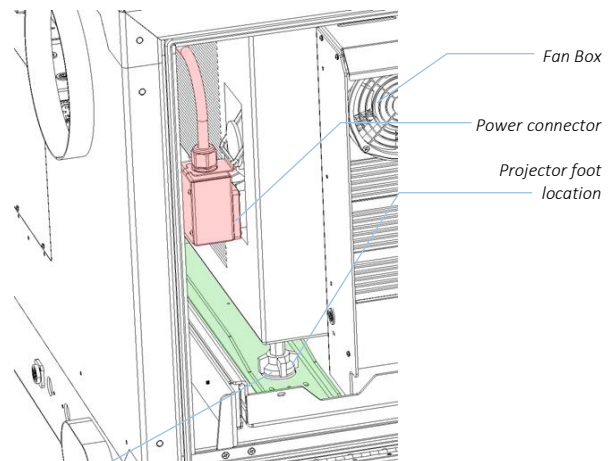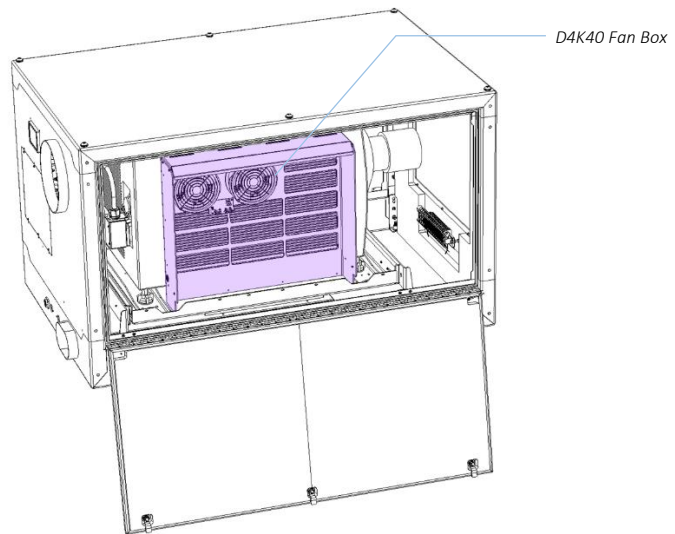


Christie D4K-40 RGB – Portrait

WARNING: This projector is **HEAVY**. You will need at least four people or a mechanical lifting device to install it in the enclosure. Do not attempt to lift the projector if in any doubt about your lifting capacity.

Tempest provides a custom projector mount, with the ability to install the projector either horizontal or at a tilt angle up to 6° up or down.


IMPORTANT: The projector **MUST** be installed air inlet down, connector panel up, as shown. Installing any other way will lead to overheating.

1. Set the projector on the ground, with the connector panel **DOWN** and the air inlet **UP**.
2. Bolt the mounting brackets and mounting bars to the M12 threaded holes in the projector chassis, as shown:
3. NOTE: the holes in the triangular bracket are set 1.5° apart, so you can set the projector either horizontal, or tilted up to 6°. It is much easier to do this now than when the projector is installed!

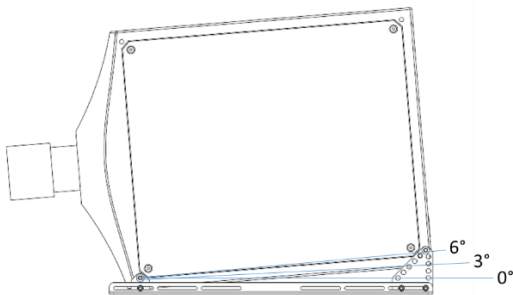


4. Now, flip the projector and set onto the enclosure tray.
5. Adjust position so the front of the lens is about 25mm (1in) from the port glass.
6. Bolt the Mounting Bars to the Projector Tray with the carriage bolts, nuts and washers supplied

For clarity, illustrations show the projector tray assembly removed from the enclosure.

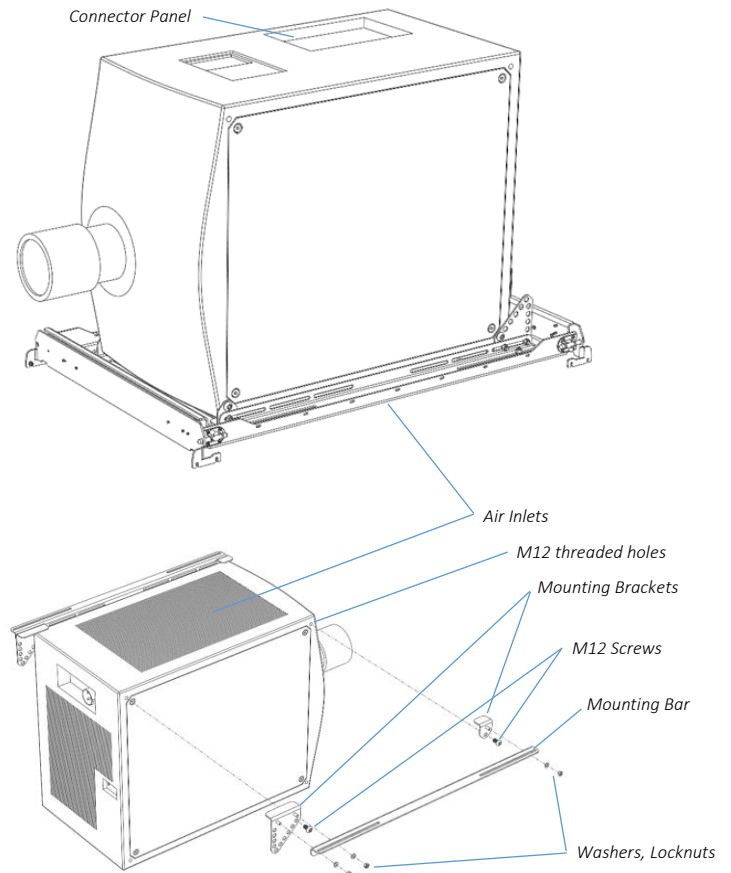

*The illustrations here show the projector tilted **DOWN**. If you need to tilt **UP**, install the triangular bracket to the **FRONT**.*


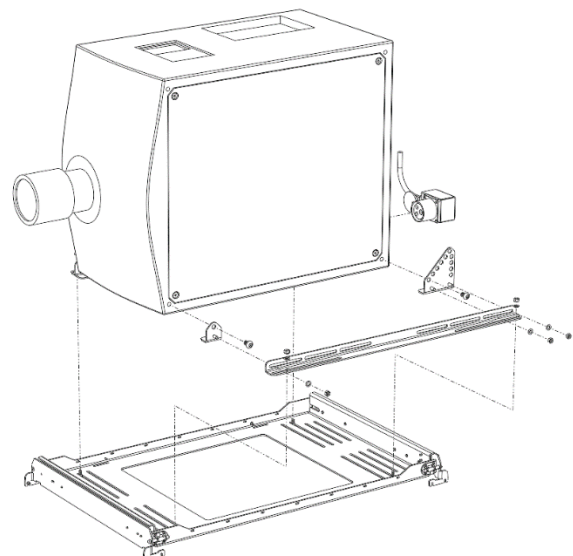


Panasonic PT-RZ34K, RQ35K, RQ50K

These projectors utilize two laser engines, blue and red. The red laser is sensitive to temperature and airflow, and care must be taken to assure adequate airflow to the red laser radiator inlet on the side of the projector.

Take care to observe these minimum spacing requirements:

- Back of projector to front of Cyclone fan: 75mm/3in
- Left side of projector to inside of Cyclone left door (measure to inner surface of insulation if fitted): 75mm/3in

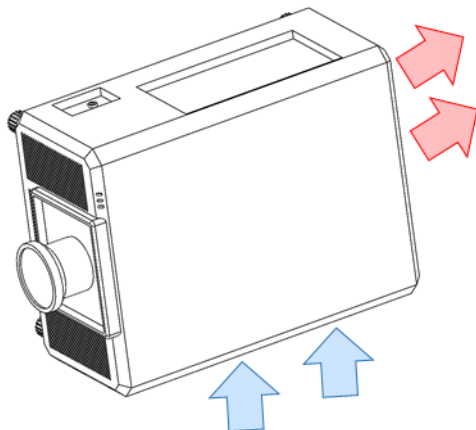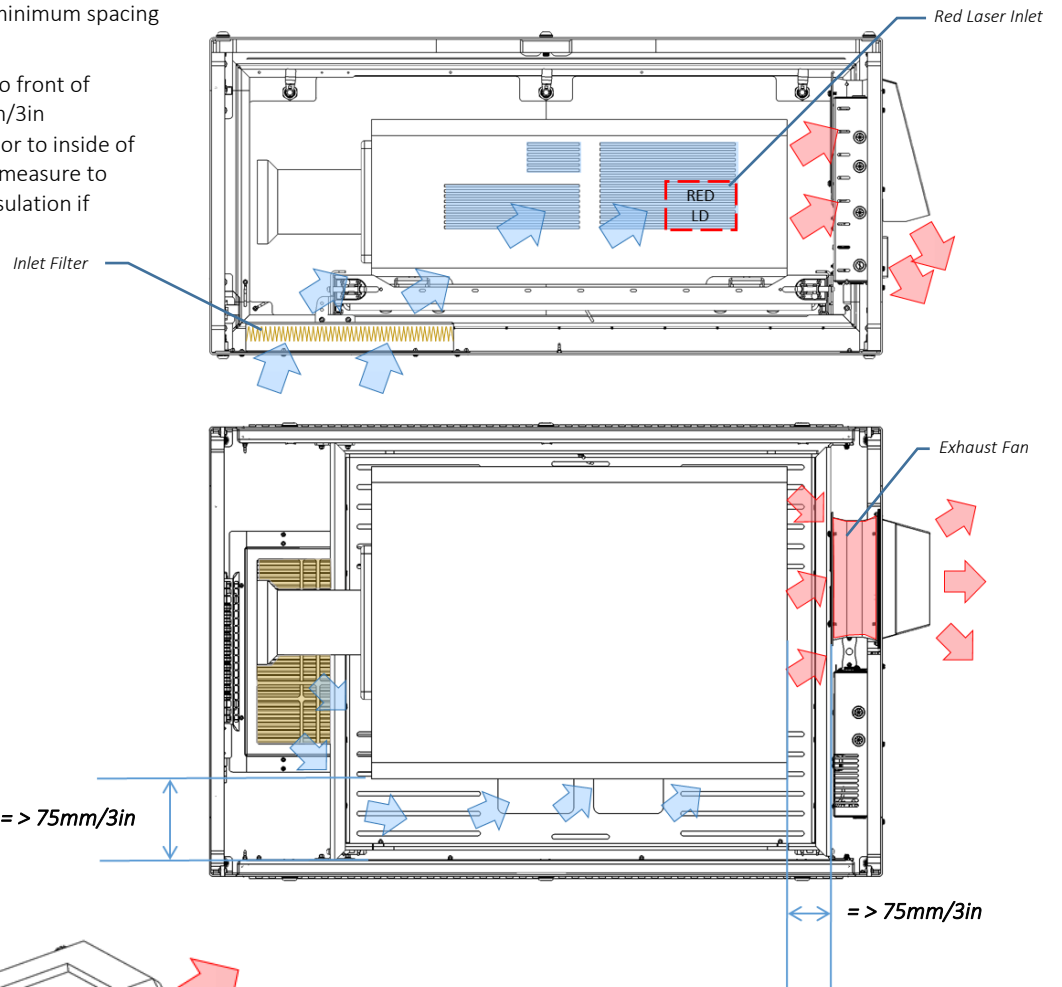

Portrait Orientation

In portrait applications, projectors **MUST** be installed with left (air inlet) side down, connectors up.


Illustrations show PT-RQ35K in Cyclone 55.305.L Enclosure

DPI Insight 4K

The lamp exhaust from this projector requires a special chimney (provided) to separate the rear inlet from hot rear exhaust air.

Adjust so that the sliding sides of the chimney are seated snugly around the projector lamp exhaust (a vertical slot in the back of the projector).

Failure to follow this step will very likely lead to hot air recirculating and serious overheating.

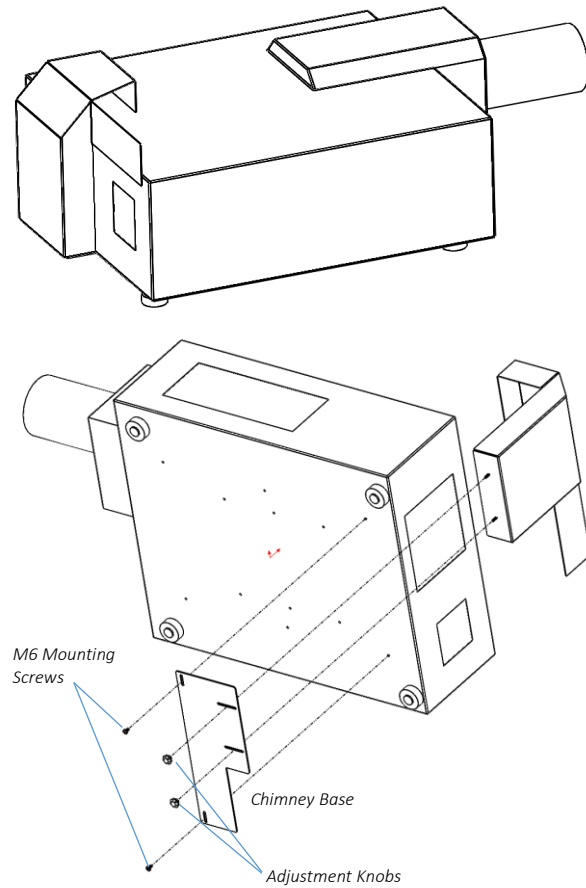

UST Projector Mounts

Most UST enclosures are completely custom, and will have their own specific mounting hardware and instructions.


Important: Check Lamp-on Current

When the projector is installed and connected, check the current displayed on the User Interface, with the projector lamp(s) **OFF**. If the current is 1.0A or higher, set the Lamp On Current to a setting higher than the actual displayed.

Example:

Standby Current = 1.4A

Set Lamp-On Current to 1.7A




If the Lamp-on current is set lower than the projector's actual standby current, the DEC will think the projector lamp is always on, and the fan(s) will never turn off.

See Control Menu/Set Lamp-On Point above.

Connect Projector and Aux Equipment

- (1) Feed the projector power and signal cables through the cable management track
- (2) Connect the projector power cable into the Projector Outlet
- (3) Connect all cables and test projector
- (4) Install any auxiliary equipment – there is usually plenty of room under the projector tray
- (5) Connect aux equipment power supplies to the C13 outlets on the DEC box. Use the supplied rewirable C14 plugs if necessary.

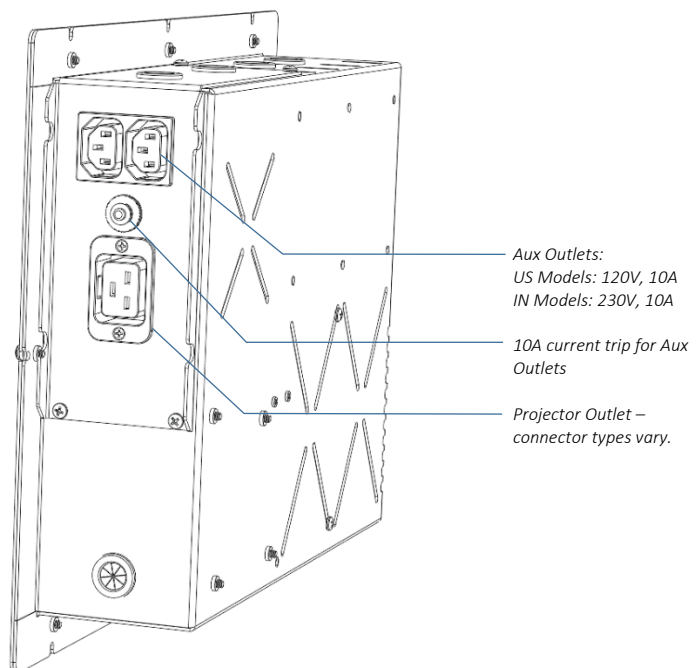

YOU MUST CONNECT THE PROJECTOR TO THE PROJECTOR OUTLET. IF THE PROJECTOR FEED BYPASSES THE DEC CONTROLLER, THE VENTILATION SYSTEM WILL NOT WORK AND THE PROJECTOR WILL OVERHEAT.

Projector Connector Types

Various Types of projector power outlets are used, in the enclosure models below:



1. IEC 60320 C19 20Amp (C19)

- a. 55.210.x
- b. 55.305.x
- c. Some 55.310.x
- d. 55.250.x
- e. 55.320.x

2. IEC 60309 (formerly IEC 309, often known in North America as Pin & Sleeve) 30/32A, 2P+E, 230V (blue)

- a. Some 56.310.x

3. IEC60309 Pigtail – for Christie Boxer, D4K40 and some DPI models. Tempest supplies a space-saving line female connector assembly on a flexible pigtail, to mount directly to the projector power inlet

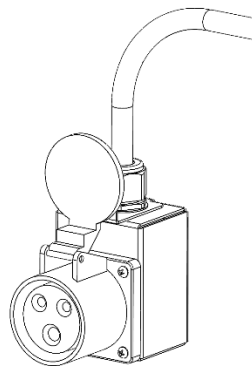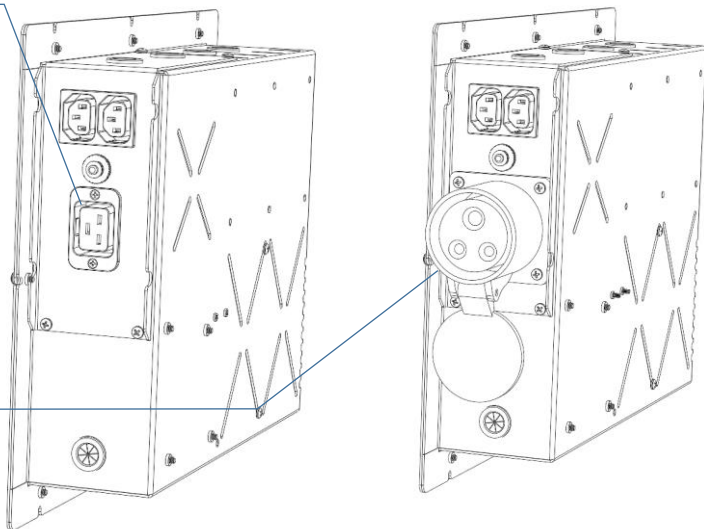

Note: contact Tempest at time of ordering to request different projector outlet types if desired.

Routine Maintenance

Check the following every six months:

Clean Port Glass

Clean port glass using a window cleaning fluid or detergent.
Use a soft, lint free cloth.

Check Filter

In most cases the filter will be good for 1-2 years. If the filter becomes clogged the temperature inside the enclosure will start to rise. This is an indication that the filter must be changed.


Part Numbers:

51.HF.15 Cyclone 55.200-350 Replacement Filter

51.HF.22 Cyclone 55.400 and up Replacement Filter



To replace filter from below

1. Remove the filter clamp screws.
2. The filter will drop out.
3. Replace filter and filter clamp.

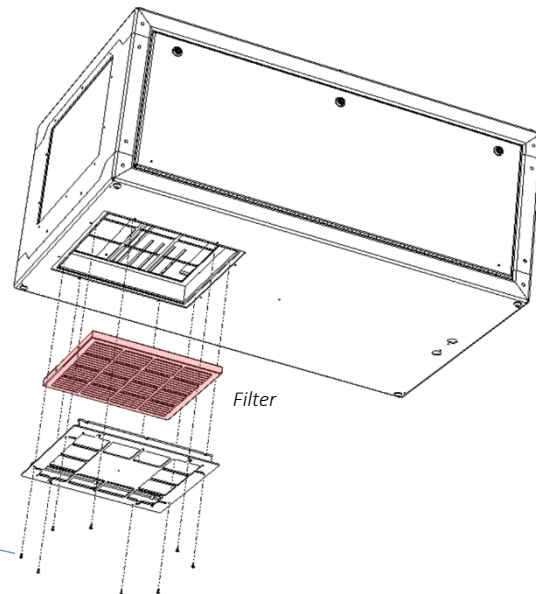

To replace the filter from inside the enclosure

1. Slide the projector tray out
2. Remove the eight M4 nuts holding the filter assembly
3. Remove the filter assembly
4. Remove the filter clamp screws
5. Replace the filter and filter clamp
6. Replace the filter assembly

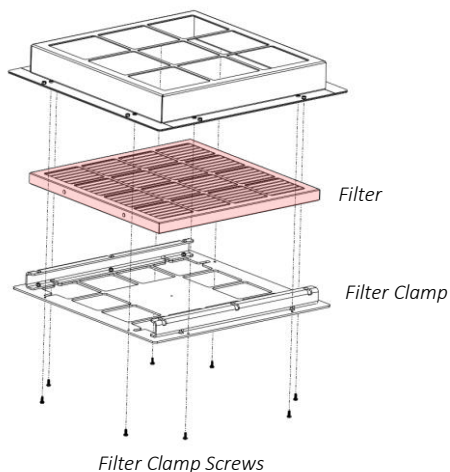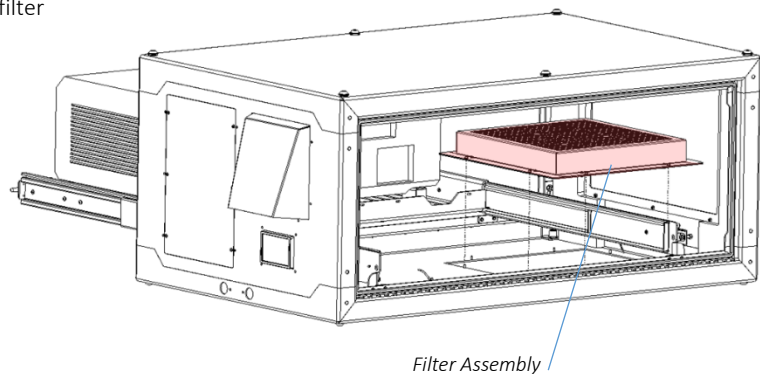

Check Temperature/Humidity Sensor

If the sensor above the port glass is defective, the controller may not operate correctly. A defective sensor will result in one of three messages appearing on the DEC user interface.

If you see any of these messages, contact Tempest for a replacement sensor.

RH: 5%

RH: 100%

RH: ####

For After Sales Support

Contact your Tempest dealer or email info@tempest.biz

Troubleshooting

Projector does not have power:

1. Check Projector power switch
2. Check projector is plugged into DEC4 projector outlet
3. Check that enclosure feed circuit is on
4. Check DEC4 User Interface leds are on. If feed circuit is on and UI leds are off, check feed wiring to DEC terminals and meter DEC4 projector outlet for power
5. If UI lamp led is on and DEC4 projector outlet is live, there is a projector fault.

Enclosure overheats:

1. **Is the projector connected to the DEC4 projector receptacle?** If the projector is powered independently the controller has no way to know when to turn on the exhaust fans!
2. Is the filter clogged or obstructed?
3. Check that the Fan led on the UI is on when the projector is running. If not, then the projector is probably not connected to the DEC (see 1).
4. If the fan led is on, check that the fan is running. If not, check fan wiring. If wiring is ok, fan may be faulty.
5. Check the UI display for RH (relative humidity) message. If display reads RH 5%, RH 100%, or RH####, there is a sensor fault. Contact Tempest for a replacement sensor.

Dirt/Debris inside enclosure

1. Filter is either missing or damaged?
2. Filter is not properly seated
3. Side panels or back door is not firmly latched

Water in enclosure

1. Check the drain holes in the bottom of the enclosure. If they become blocked, and water that gets in cannot escape.
2. Check seals around side panels and back door

Fan LED is on but fans do not operate

The exhaust fan is protected by a 20mm 4A slow-blow fuse on the DEC4 motherboard, and a secondary fuse on the fan board. In very exceptional cases it is possible that either fuse could fail. Check visually.

The fuse is protected with a clear resin sealant and soldered to the circuit board. With care, you can de-solder the fuse and replace it, but we recommend replacing the DEC4 motherboard to maintain the integrity of the board's conformal coating.

Heater LED is on but heater does not operate

The heater is protected by a 20mm 10A slow-blow fuse on the DEC4 motherboard. In very exceptional cases it is possible that it could fail. Check visually.

The fuse is protected with a clear resin sealant and soldered to the circuit board. With care, you can de-solder the fuse and replace it, but we recommend replacing the DEC4 motherboard to maintain the integrity of the board's conformal coating.

None of the above?

Contact info@tempest.biz

Warranty

INSPECTION/WARRANTY/RETURNS.

A. Customer, at its sole expense, shall inspect all Goods promptly upon receipt and accept all Goods that conform to the specifications or catalog. All claims for any alleged defect in or failure of the Goods or Seller's performance to conform to the Contract, capable of discovery upon reasonable inspection, must be set forth in a written rejection notice detailing the alleged non-conformity, and be received by Seller within thirty (30) calendar days of Customer's receipt of the Goods. Failure by Customer to notify Seller of the alleged non-conformity within thirty (30) days will be conclusive proof that the Goods have been received by Customer without defects or damage, and in the quantities specified on the bill of lading and shall constitute an irrevocable acceptance of the Goods and a waiver of any such claim in connection with the Goods.

B. Seller warrants to Customer only that the Goods will be free from defects in material and workmanship at the time of delivery and, subject to the exceptions and conditions set forth below, for the following period (the "Warranty Period"): twenty four (24) months from the date of shipment by Seller. Seller may provide additional years of warranty coverage beyond 24 months, at the rate of 2.5% of the net sale price per year, up to a total of three additional years' coverage beyond the standard 24 month warranty period. Seller will remedy a defect as set forth in paragraph 7 D, below, (the "Warranty"). The Warranty is subject to each of the following exceptions and conditions:

1. Customer must promptly (and in all events within the Warranty Period) notify Seller of any alleged defect in a written notice (the "Notice") which shall set forth the quantity, catalog number, finish, original purchase order number, Seller's invoice number on which Goods were originally billed and a statement of the alleged defect, along with digital photographs showing such defects where feasible.

2. The Warranty shall not apply: (i) to any claimed defect that was capable of discovery upon reasonable inspection and deemed to be waived under paragraph 7 A, above; (ii) to any Goods that have been subject to misuse, abnormal service or handling, or altered or modified in design or construction; (iii) to any Goods repaired or serviced by any person other than Seller's authorized service personnel or to Goods installed other than according to installation instructions, or (iv) with respect to normal wear and tear. Seller warrants materials and finishes to customary commercial standard and makes no warranty whatsoever to cover minor imperfections of finish not affecting the performance of the Goods.

3. Seller makes no Warranty with respect to parts or components that are not the product of Seller, and specifically makes no warranty whatsoever for equipment housed inside enclosure products manufactured by Seller.

4. The Warranty is Seller's exclusive warranty with respect to the Goods. Seller makes no warranties, guarantees or representations, express or implied, to Customer except as set forth in this paragraph 7. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR USE OR FOR A PARTICULAR PURPOSE, ARE HEREBY EXCLUDED AND DISCLAIMED.

C. Seller will accept the return of Goods properly rejected under paragraph 7 A, above, or as to which Notice of an alleged breach of Warranty has been timely given and such Goods may be returned to Seller, freight prepaid, but only upon Customer's receipt of Seller's written return material authorization ("RMA") and shipping instructions. The RMA shall be void if the Goods are not received within 45 days after issuance of the RMA. No deduction or credit in respect of any rejected or returned Goods shall be taken until Customer has received Seller's further written deduction or credit/authorization following Seller's inspection to confirm nonconformity or defect. Seller will charge to Customer any and all costs incurred by Seller in connection with the handling, shipping, inspection and disposition of any returned Goods that are determined by Seller not to have been nonconforming upon Delivery or as to which the warranty hereunder is not applicable.

D. UPON ANY PROPER RETURN PURSUANT TO PARAGRAPH 7C, ABOVE, WHETHER IN CONNECTION WITH A REJECTION OF GOODS OR AN ALLEGED BREACH OF WARRANTY AND BASED UPON THE CONDITIONS SET FORTH IN THIS PARAGRAPH 7, SELLER AGREES THAT IT WILL, AS THE SOLE AND EXCLUSIVE REMEDY UNDER THE CONTRACT OR OTHERWISE, FOR ANY NONCONFORMITY OR BREACH OF WARRANTY, AND AT SELLER'S SOLE ELECTION: (i) REPAIR SUCH GOODS; OR (ii) REPLACE SUCH GOODS.

NOTE: All sales are subject to Tempest Lighting, Inc. Standard Terms and Conditions (Standard Terms). In the case of any discrepancy between the foregoing and Standard Terms, Standard Terms shall prevail. Download Standard Terms [here](#).

Appendix – TEMP Protocol

AVAILABLE TO SPECIAL ORDER

Tempest can optionally provide a firmware load that facilitates TEMP over RS485, suitable for interfacing to an Ethernet adapter. TEMP is a lightweight proprietary ASCII based protocol, intended for rapid integration into management systems. With TEMP and a suitable RS485 to Ethernet adaptor connected to the DEC DMX connectors, your DEC may be configured and monitored over an IP network.

Please contact factory for ordering information.

Physical Layer

1. EITHER: Use a 51.EN Ethernet daughter board plugged directly to the DEC4 motherboard, connected to your TCP/IP network.
2. OR: Use a 51.485 RS485 daughter board on each of a number of DEC4 motherboards, connected in a daisy-chain, and use a 51.EN Ethernet board on the first DEC4 to connect to your TCP/IP network.

Developer's Guide

Download the Developer Guide [here](#):